

DENON



3rd Edition Upgrade Kit

DVD-3910

**PLEASE BE SURE TO READ THROUGH
THESE DIRECTIONS COMPLETELY
BEFORE CARRYING OUT THE UPGRADE!**

Reproduction, publication in electrical or any other
from of this software and its documentation without
the express written consent of the rightful owner is
forbidden and will be prosecuted by law.

© 2006 DENON UK

After loading the software provided your DVD-3910 will be capable of lossless transmission of native DSD signals from the SACD to a receiver or amplifier equipped with DENON Link 3rd Edition. This requires only a single cable to carry the digital audio signals between the player and amplifier (LPCM, Packed PCM, Dolby Digital, DTS, DSD).

Warning:

Please read these directions through completely before using the provided upgrade CDs. The risk associated with use of the CDs provided lies entirely with the user. DENON accepts no liability for any damage arising from the improper use of this software.

During the upgrade process it is imperative that you do not switch off the unit's power and/or press any of the buttons on the unit or remote control unless otherwise instructed.

Upgrade procedure:

1. Please connect a monitor screen to the video or S-video output of the DVD-3910 if one is not already connected (see Operating Instructions, page 45). Switch on the DVD-3910 and the monitor screen.
2. Be sure that there is no CD or DVD disc in the player and that the DVD player's drawer is closed. Initialise the unit by holding the **SKIP FORWARD** (⏮), **PLAY** (▶) and **OPEN/CLOSE** (▲) buttons via the front panel for longer than 3 seconds (until **INITIALIZE** is no longer displayed on the monitor screen).
3. Open the DVD player's drawer. Place CD 1 of 3 on the tray and close the drawer.
4. Please allow about one minute for the following process, after which the drawer opens automatically.

During this time the monitor screen will initially display **FLASH**, followed by **READING** and finally alternate between **ERASE** and **WRITE**. **WRITING** will appear on the DVD player's display during

the entire update process.

After the update has been completed, the player's display will show **COMPLETE**. The message **DONE** will appear on the monitor screen. The drawer will open automatically.

5. Remove disc 1 of 3 then switch off the DVD-3910 completely by using the small (ON/OFF) button.
6. Turn the player on again and open the DVD player's drawer. Place CD 2 of 3 on the tray and close the drawer
7. Here too, please wait for about 45 seconds to allow the process below to finish, upon which the drawer will automatically open.

After this the word **FLASH** will appear briefly on the monitor screen followed by **READING**. The player's front panel and video outputs will shutdown. This is a normal part of the upgrade process. After some time, the player's display and the video outputs will come back on and **WRITING** will appear on the player's display followed by **COMPLETE**. The drawer will open automatically.

8. Remove disc 2 of 3 then switch off the DVD-3910 completely by using the small (ON/OFF) button.
9. Switch on the player again and open the drawer. Place CD 3 of 3 on the tray and close the drawer.
10. Please wait for about three minutes for the process below to complete, upon which tray will open automatically.

After this, the word **STOP** will appear briefly on the display followed by **1394 UPDATE** and thereafter **1394 ERASE**. The message **0000 WRITING** will appear, where the number preceding "WRITING" will increase continuously until it reaches **0868**. The word **READING** remains permanently on the monitor screen. At the end of the update, the message **1394 COMPLETE** will appear on the player's display and the drawer will open automatically.

11. Remove disc 3 of 3 then switch off the DVD-3910 completely by using the small (ON/OFF) button.

12. Switch on the DVD-3910 again. Initialise the unit by holding **SKIP FORWARD** (⏮), **PLAY** (▶) and **OPEN/CLOSE** (▲) buttons via the units front panel for longer than 3 seconds (until **INITIALIZE** is no longer displayed on the monitor screen).
13. Congratulations, you have successfully upgraded your player to the 3rd Edition of DENON Link!

Note:

All of the settings in your DVD player were reset to factory defaults during the update process. Please repeat the SETUP process once again (Operating Instructions , page 54...)

You can now activate **DENON LINK 3rd** from the **Digital Interface Setup** menu.

Denon do not advise the loading of any non-official firmware into your DVD player.

Doing so could compromise the features and performance of your player