



## Changing Laser Pickup – Denon DVD-2900

1. With the device switched on, open the tray and -without closing it- switch off and unplug the player.
2. Unscrew two screws:

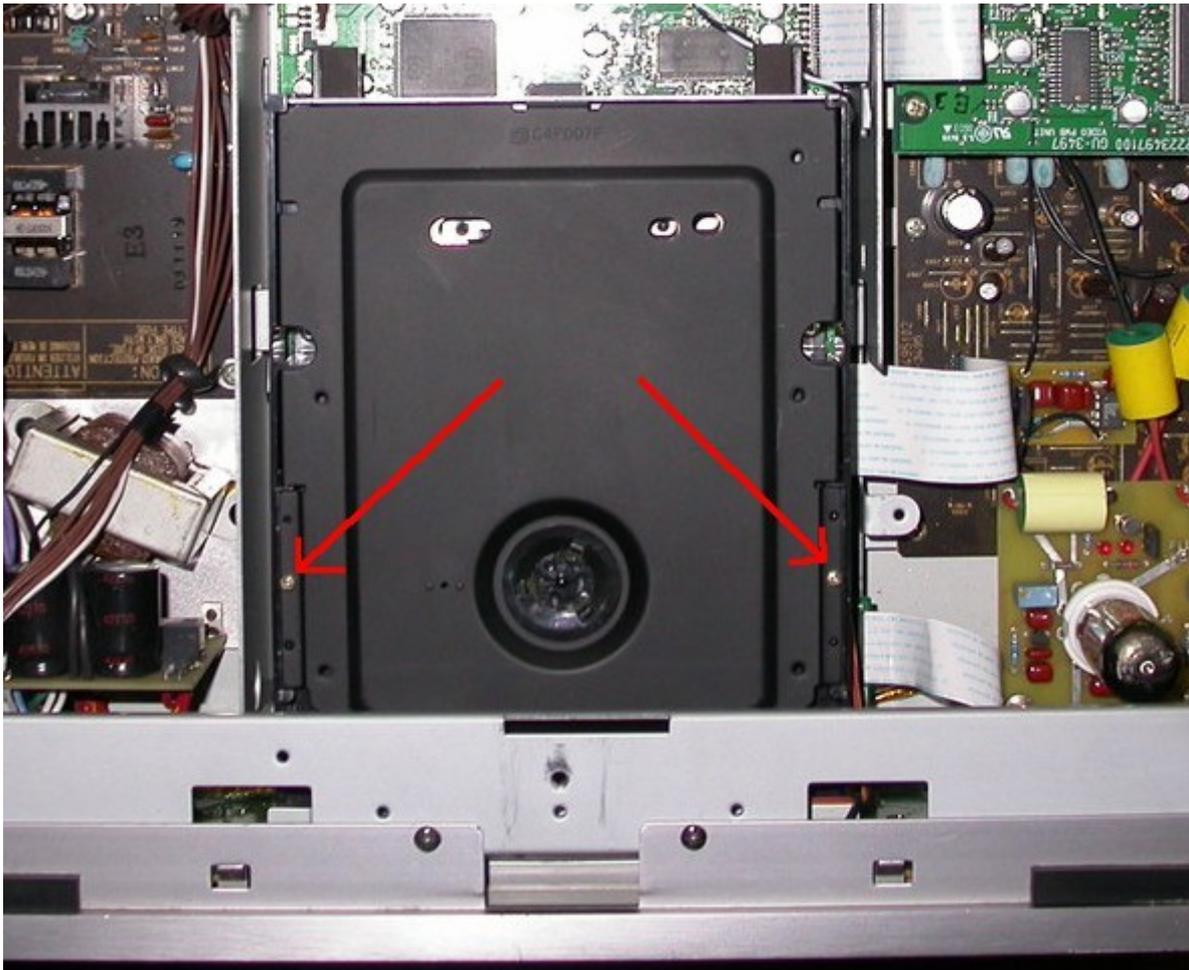

3. Deattach the back white flat cable and remove the two screws:

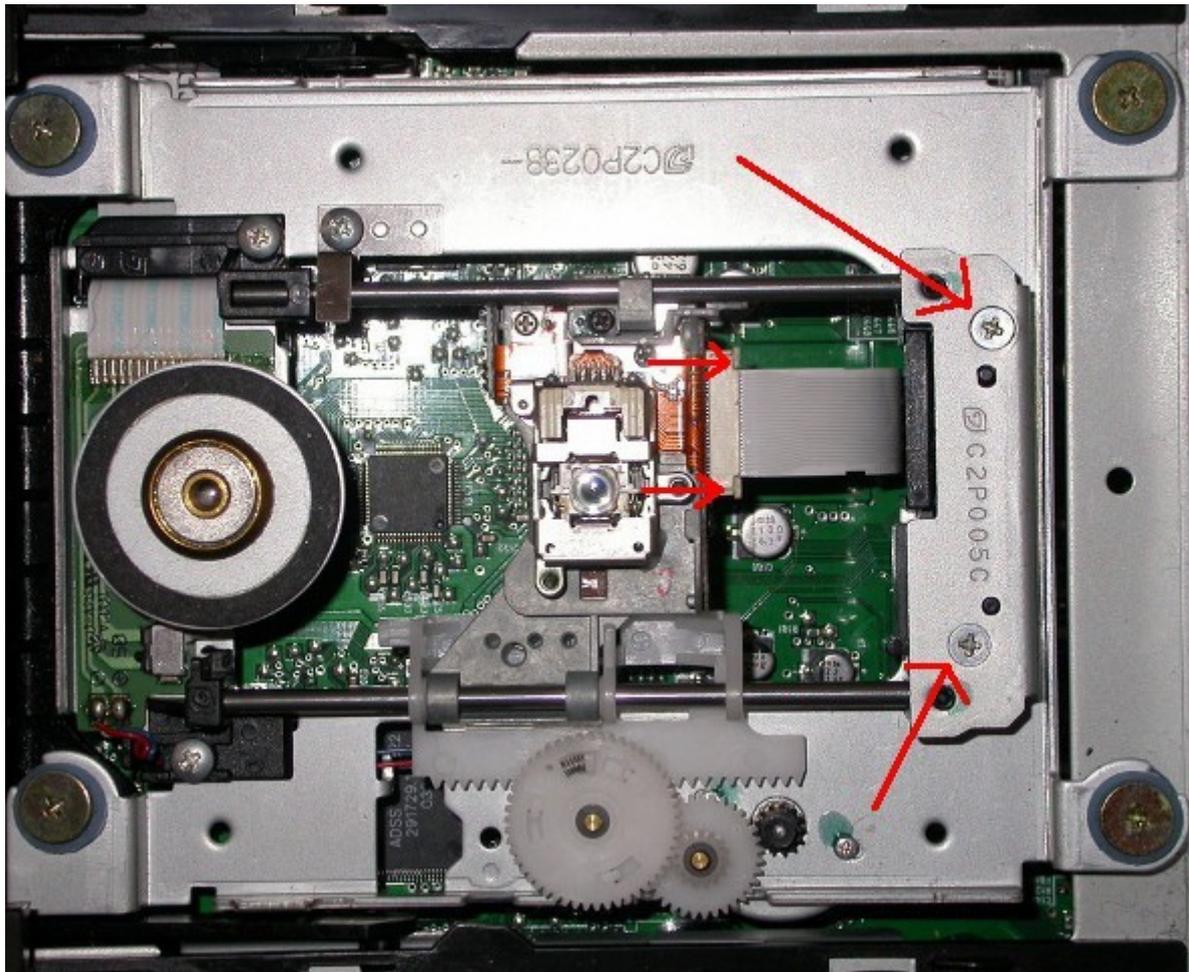

4. Push the laser pickup in this direction and replace it with the **unsoldered** new pickup.

