



* Additional components

C1,C2: place jumper if not used
R11,R12: only for parallel mode

LM4780/LM4732 audio power amplifier
parallel / bridge configuration

Unisonus.com
D. Antoniuk
antoniuk@unisonus.com