




B3

MAIN AMP IN (LEFT)

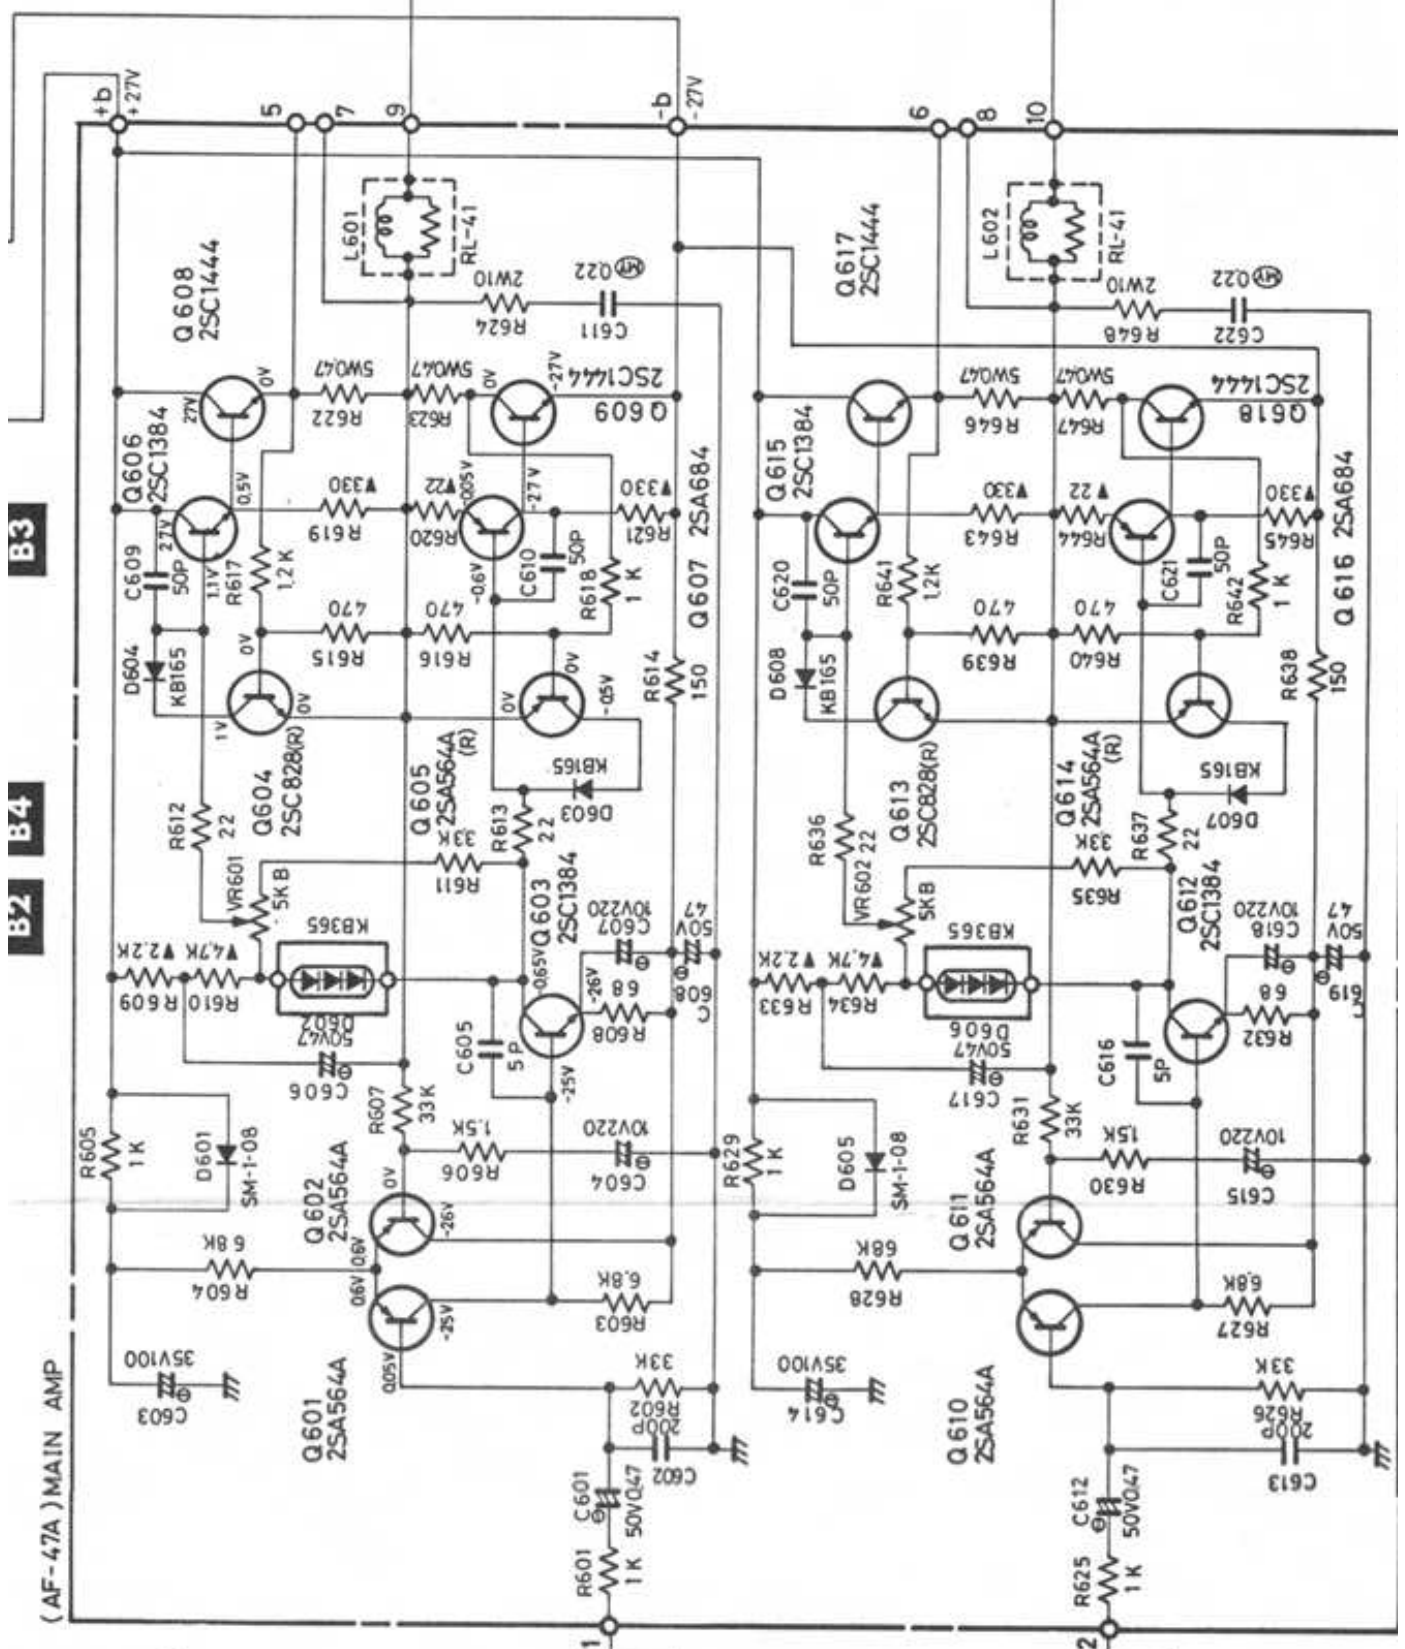


B3

B4

(AF-47A) MAIN AMP

I T E M	
AM / FM IF AMP.	
FM MPX DECODER	
EQUALIZER AMP.	
TO NE CONTROL AMP.	
MAIN AMP.	
POWER SUPPLY	

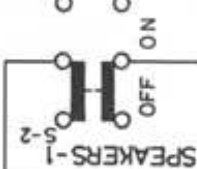

SPEAKER FUSE F001
3 A



SPEAKER FUSE F002
3 A