



IN SACD LEFT HOT
 VOFF = 0
 VAMPL = 0
 FREQ = 0
 AC = 0

IN SACD LEFT COLD
 VOFF = 0
 VAMPL = 0
 FREQ = 0
 AC = 0

IN SACD RIGHT HOT
 VOFF = 0
 VAMPL = 0
 FREQ = 0
 AC = 0

IN SACD RIGHT COLD
 VOFF = 0
 VAMPL = 0
 FREQ = 0
 AC = 0

IN DAC LEFT HOT
 VOFF = 0
 VAMPL = 0
 FREQ = 0
 AC = 0

IN DAC LEFT COLD
 VOFF = 0
 VAMPL = 0
 FREQ = 0
 AC = 0

IN DAC RIGHT HOT
 VOFF = 0
 VAMPL = 0
 FREQ = 0
 AC = 0

IN DAC RIGHT COLD
 VOFF = 0
 VAMPL = 0
 FREQ = 0
 AC = 0

IN DENON RIGHT
 VOFF = 0
 VAMPL = 0
 FREQ = 0
 AC = 0

IN DENON LEFT
 VOFF = 0
 VAMPL = 0
 FREQ = 0
 AC = 0

IN YAMAHA RIGHT
 VOFF = 0
 VAMPL = 0
 FREQ = 0
 AC = 0

IN YAMAHA LEFT
 VOFF = 0
 VAMPL = 0
 FREQ = 0
 AC = 0

