



- J3 CD DOOR SWITCH
- S6 KEY01
  - REM RANDOM-KEY2
  - KEYIN/KEY11
  - PROG/KEY12
  - DIGI/KEY13
  - DIGI/KEY14
  - SEG1/COM1
  - SEG2/COM2
  - SEG3/COM3
  - SEG4/S1
  - SEG5/S2
  - SEG6/S3
  - SEG7/S4
  - SEG8/S5
  - GND
  - +5V

- J5 DOUT
- +5V
  - GND
  - NC
  - NC
  - GND
  - +6-9V