



SCHEMATIC DIAGRAMS (8/12)



1 2 3 4 5 6 7 8 9 10 11

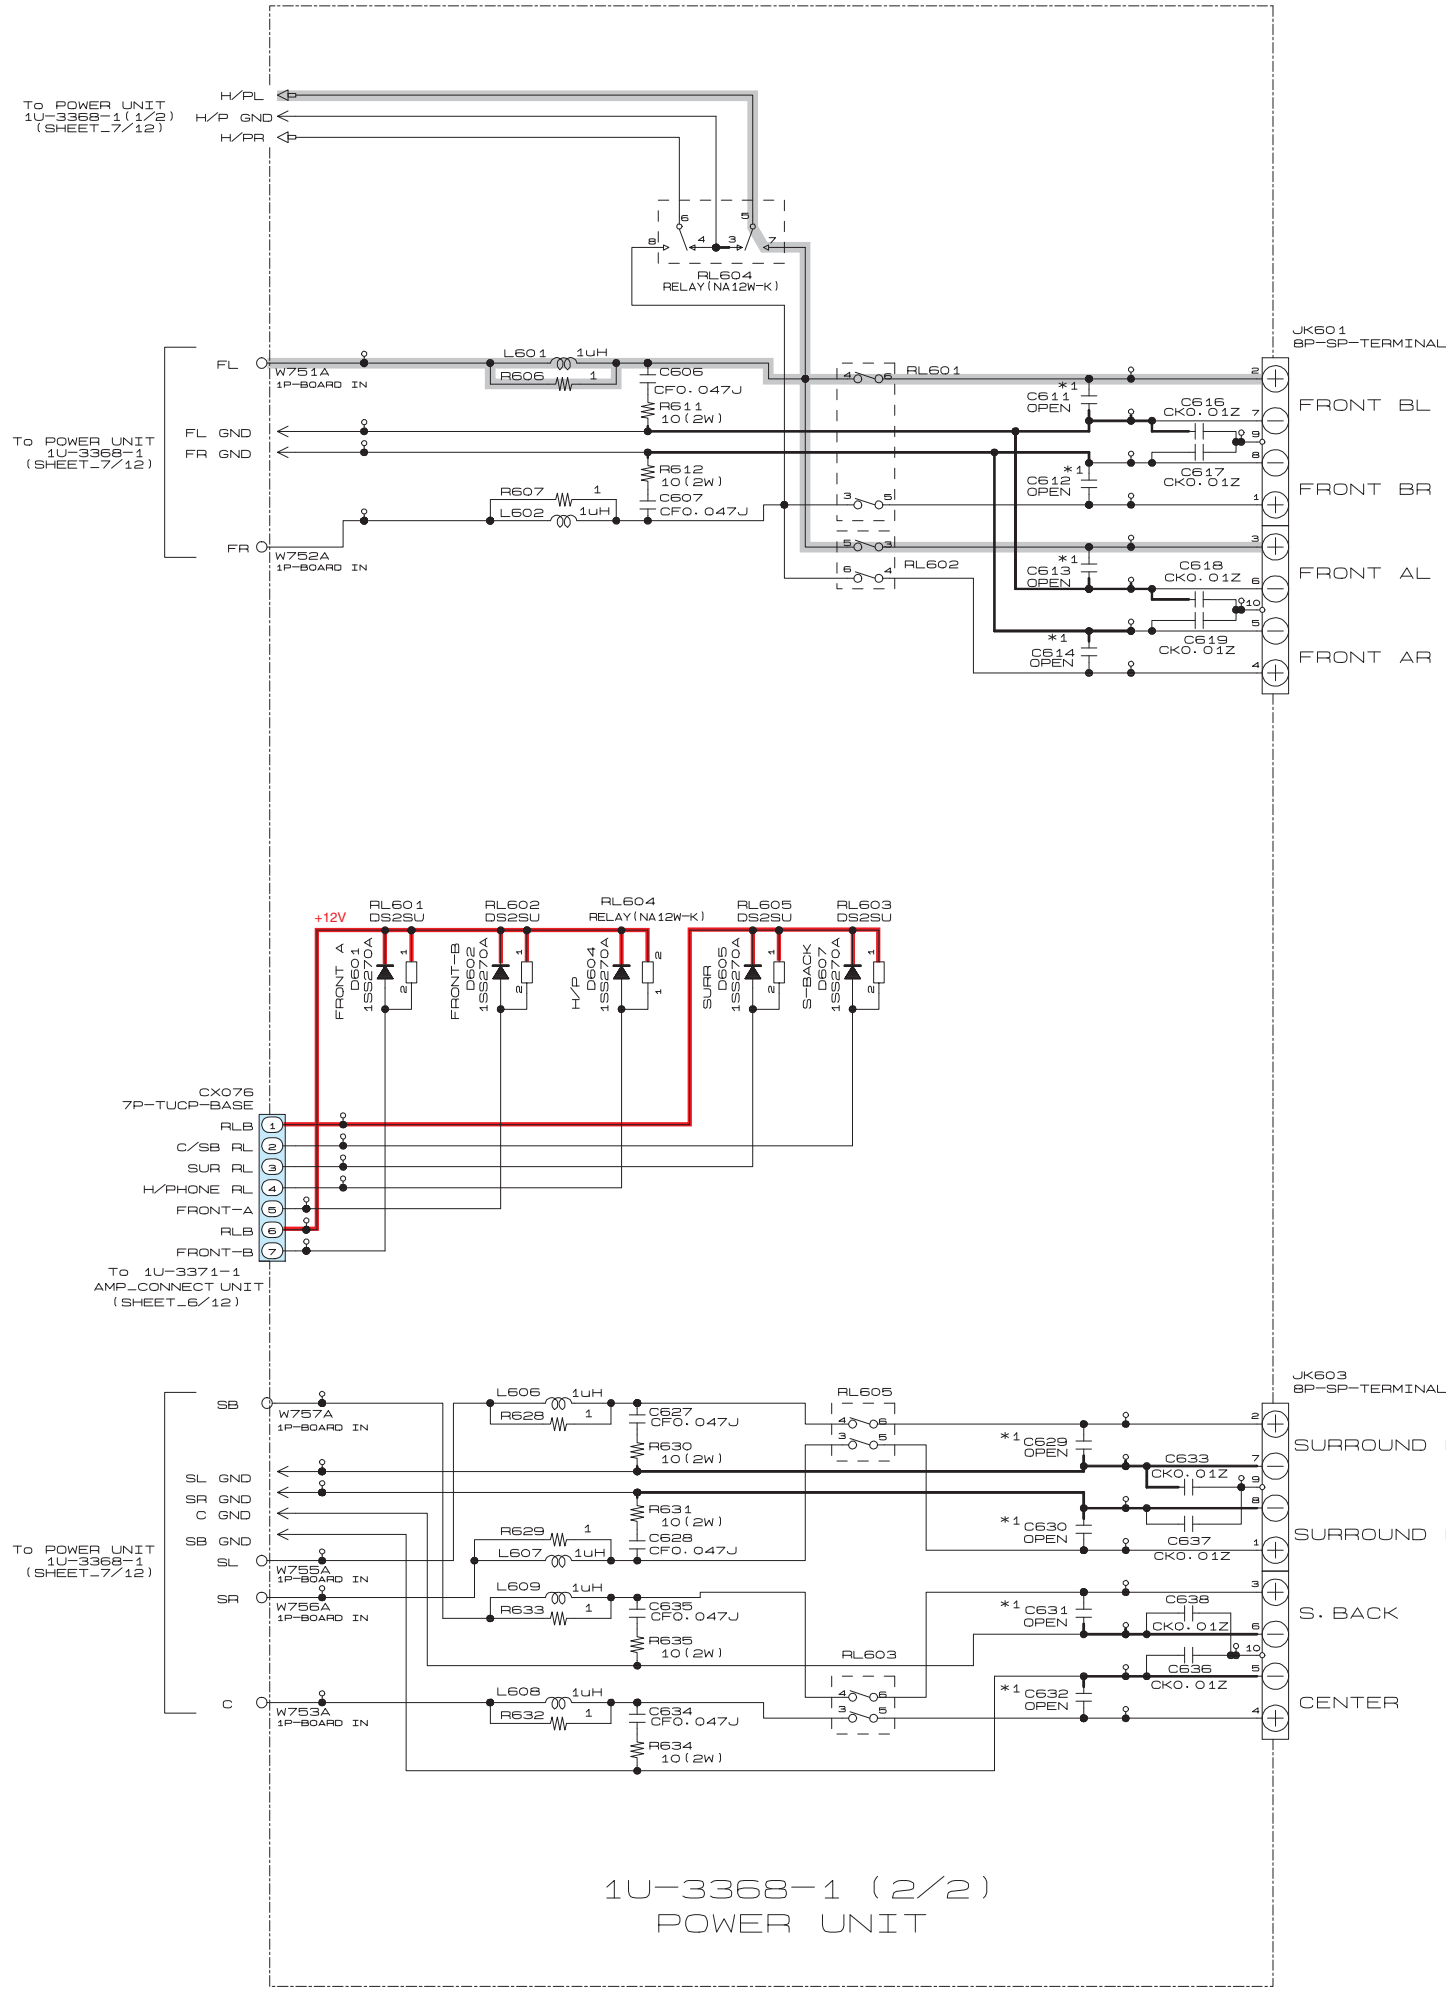


	*1
	C611, 612, 613, 614
	C629, 630, 631, 632
*USA	
CANADA	OPEN
EUROPE	COO. 01
ASIA	
HONG KONG	COO. 01
CHINA	COO. 01
TAIWAN R.O.C	COO. 01
JAPAN	OPEN

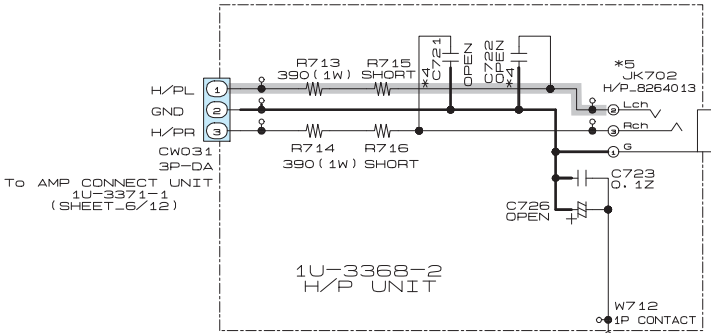

H/P&P. SW UNIT			
* NO	* USA	JAPAN	ASIA
1	CX037	3P-KR	---
2	CW037	3P-DA	---
3	SW901	1P P&H SW	---
4	C721, 722	---	CQ1000P
5	JK702	H/P JACK (IN)	H/P JACK (AU)

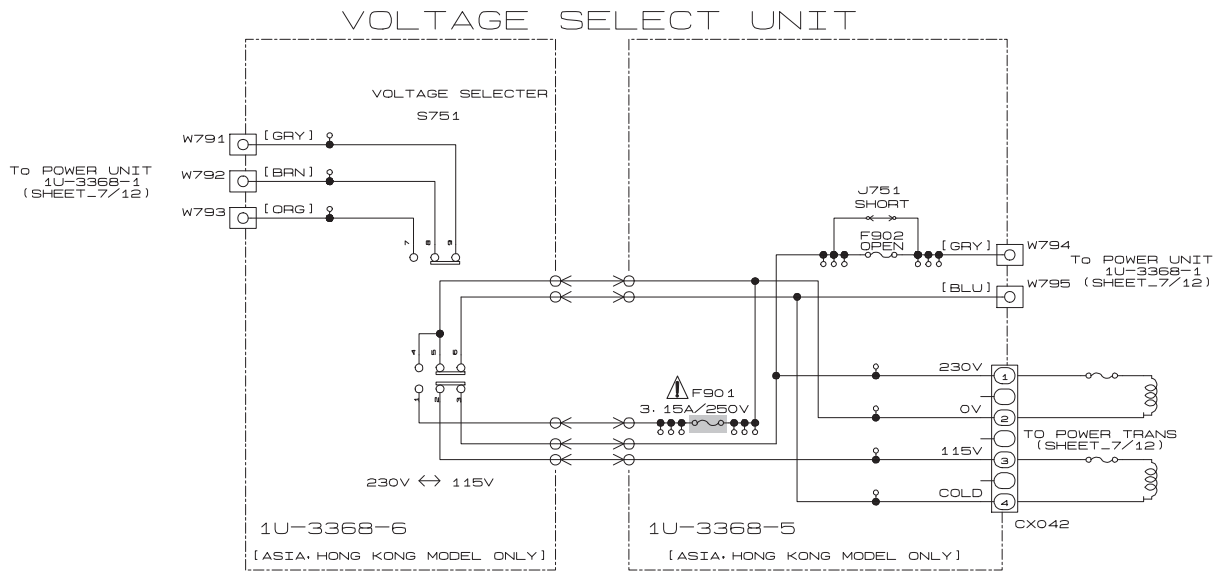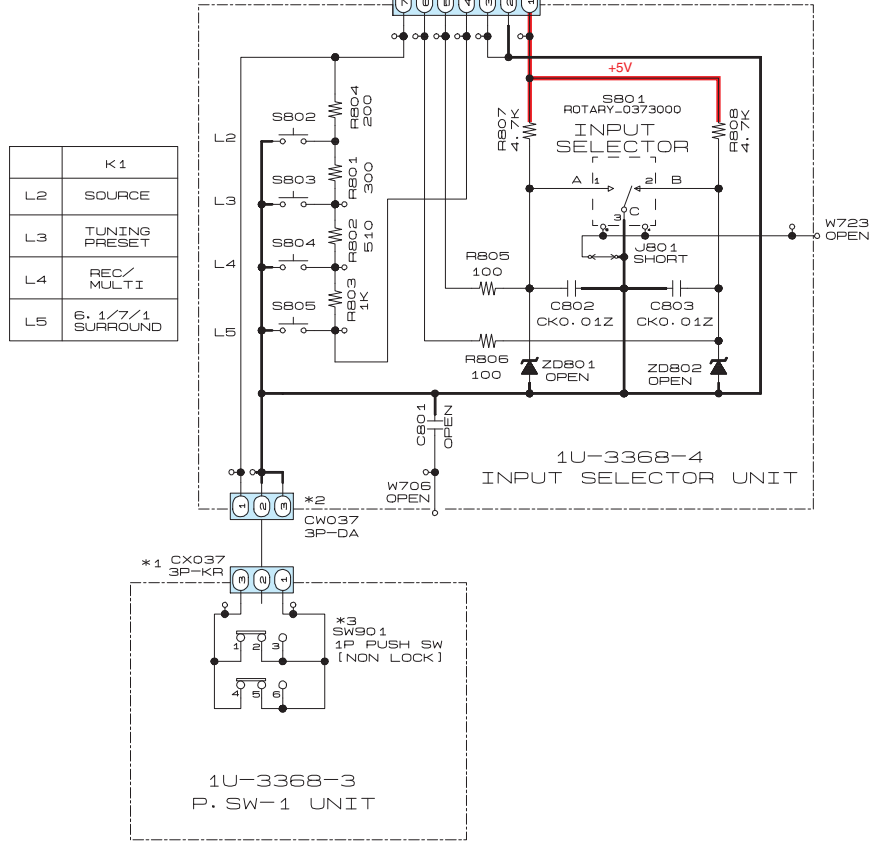

**WARNING:**  
Parts marked with this symbol  have critical characteristics.  
Use ONLY replacement parts recommended by the manufacture.

**CAUTION:**  
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power card is less than 460kohms, the unit is defective.

**WARNING:**  
DO NOT return the unit to the customer until the problem is located and corrected.

SCHEMATIC DIAGRAMS (8/12)  
1U-3368-1(2/2) POWER UNIT  
1U-3368-2 H/P UNIT  
1U-3368-3 P. SW-1 UNIT  
1U-3368-4 INPUT SELECTOR UNIT  
1U-3368-5/6 VOLTAGE SELECT UNIT(ASIA, HONG KONG MODEL ONLY)