



INSTRUCTION TO SERVICE:

- 1). USE ONLY REPLACEMENT PARTS WITH THE CHARACTERISTICS RECOMMENDED BY THE MANUFACTURER.
- 2). MAKE LEAKAGE-CURRENT MEASUREMENTS TO DETERMINE THAT THE UNIT IS PROPERLY INSULATED FROM THE CHASSIS AND FROM THE CUP.