
 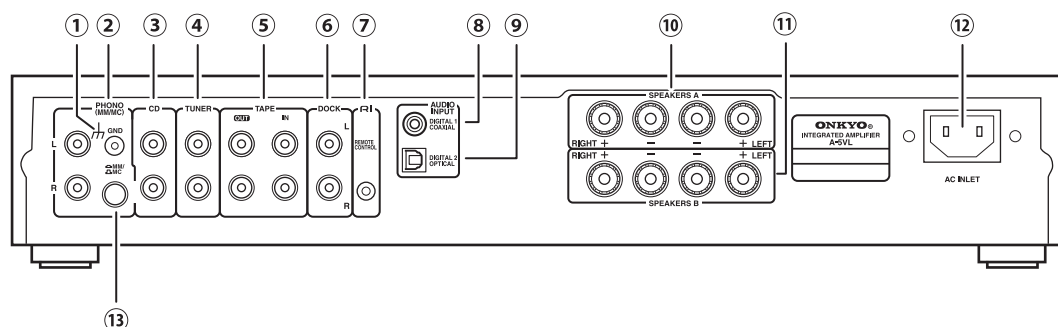
 


Before Using This Product—Continued

Rear Panel



- ① **GND screw**
This screw is for connecting a turntable's ground wire.
- ② **PHONO (MM/MC) jacks**
Connect a turntable's audio output terminals into these jacks.
- ③ **CD jacks**
Connect a CD player's audio output terminals into these jacks.
- ④ **TUNER jacks**
Connect a tuner's audio output terminals into these jacks.
- ⑤ **TAPE IN/OUT**
Connect a cassette, MiniDisc Recorder, or other recording device to these jacks.
- ⑥ **DOCK**
Connect an Onkyo RI dock for the iPod here.
- ⑦ **RI REMOTE CONTROL**
Connect an Onkyo product with an **RI** plug (RI dock or tuner) here to link it to the amplifier.
- ⑧ **AUDIO INPUT DIGITAL 1 COAXIAL**
Connect a digital audio input here. This is for connecting a digital playback device.
- ⑨ **AUDIO INPUT DIGITAL 2 OPTICAL**
Connect a digital audio input here. This is for connecting a digital playback device.
- ⑩ **SPEAKERS A**
These terminal posts are for connecting speakers A.
- ⑪ **SPEAKERS B**
These terminal posts are for connecting speakers B.
- ⑫ **AC INLET**
The supplied power cord should be connected here.
- ⑬ **MM/MC selector**
Set this selector to the turntable's cartridge format (MM  MC .

Notes

Just connecting the **RI** cord will not link the connected device. Be sure to connect the audio cables as well.

! Caution

- Do not connect devices other than turntables to the **PHONO** inputs.
- Remove the short pins plugged into the jacks before connecting a turntable to the **PHONO** inputs.
- Switch to **MM** when using a high-output **MC** cartridge.