



ES9822 PRO Reference Schematic

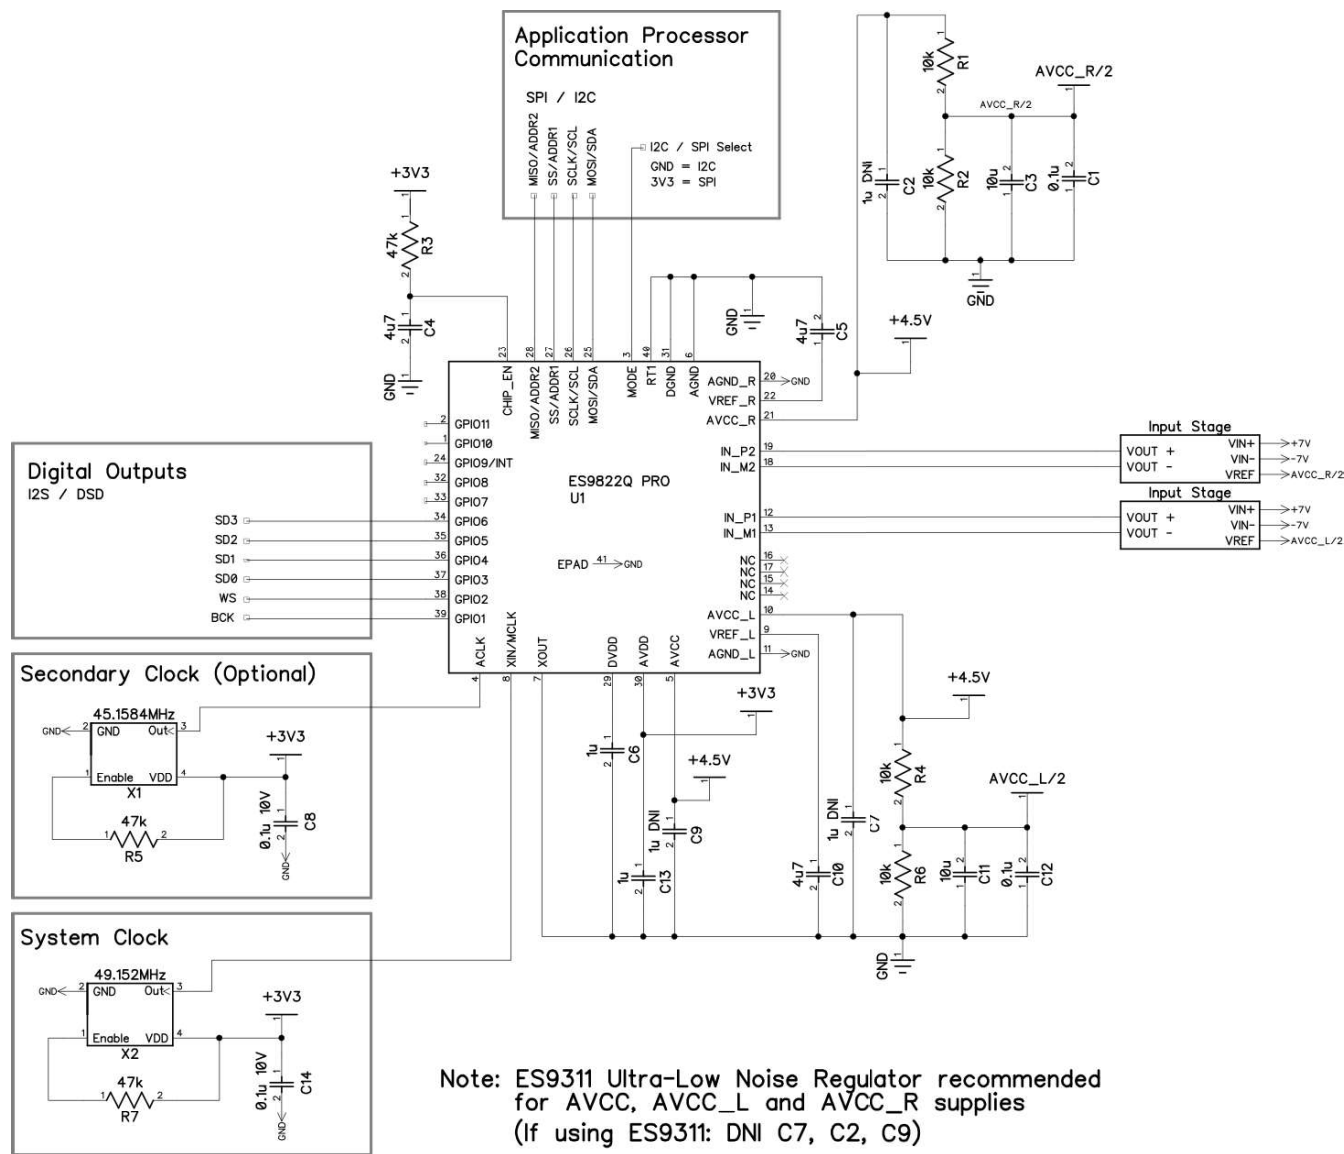


Figure 8 - ES9822QPRO Reference schematic for normal operation

Schematic subject to change

Note 1: Pin 41 QFN Package Pad (EPAD) should be connected to DGND



U4
ES9311Q
Output = 4.5V

107