



Aleph-X: Connection of the main board with the driver boards

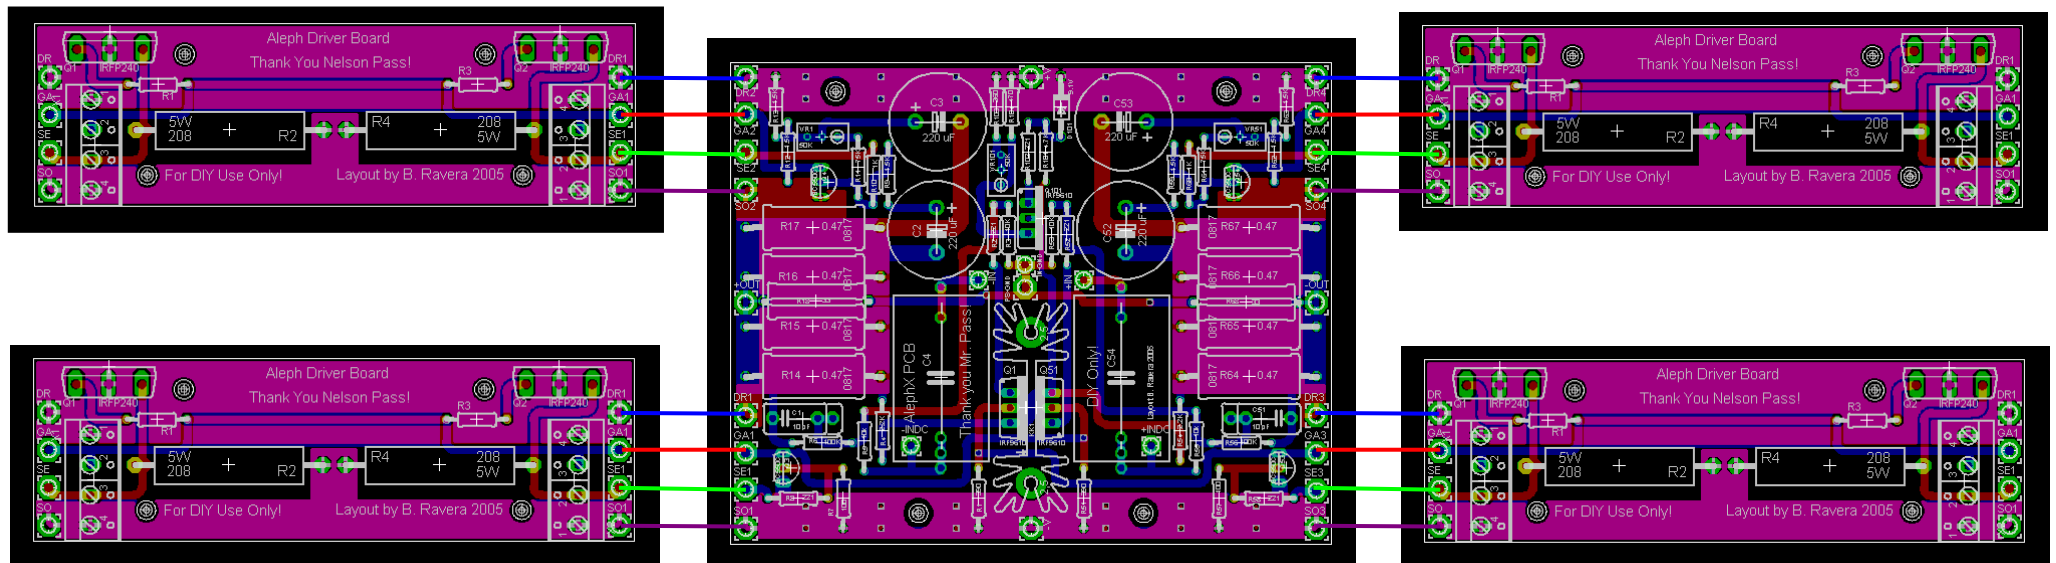

Note: the driver boards can be connected also via the screw connectors X1 and X2

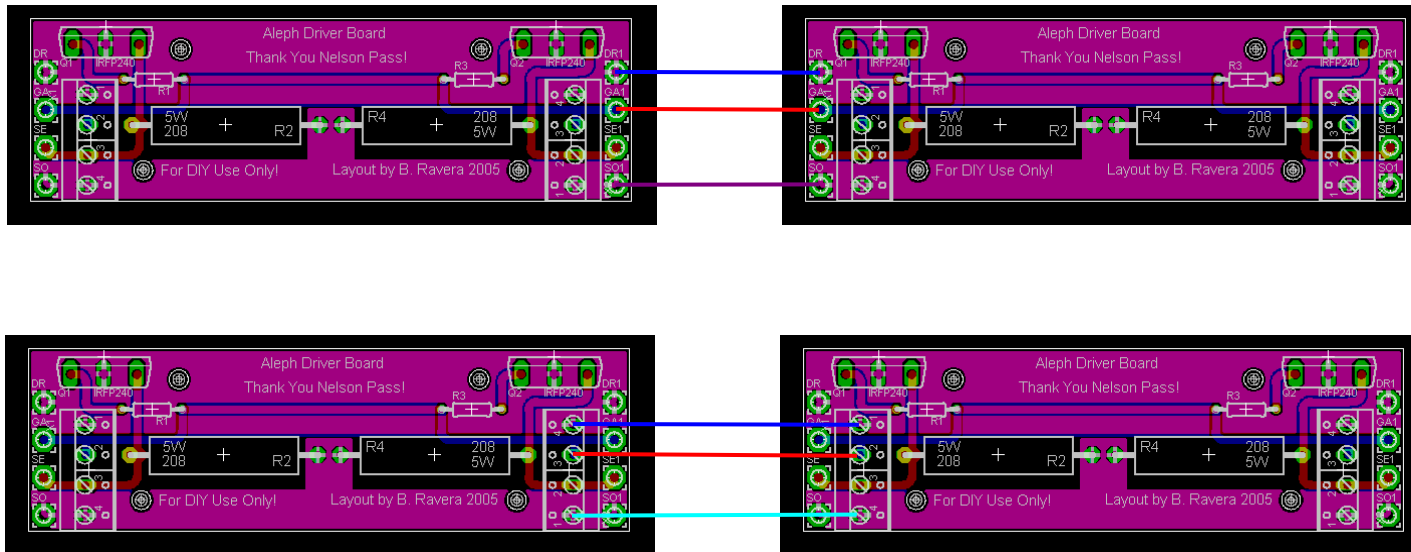

When chaining two or more boards, the SENSE contacts (SE...) MUST NOT be connected