

Blomley MkII

APR-2022

Set idle current with RV101 and RV102 on a scope. Apply 5Vrms 50kHz sine wave into a load and set for acceptable crossover distortion. Normally about 70mA will be enough. Adjustment at 100Khz may require up to 100mA. Idle current above 50mA will show no visible distortion at 20kHz.

