



Factory modification on some early Philips CD 100 CD players. (Drawn by inspection)

This board is not shown in the service manual. It is probably the 'Demod-Erco Interface Board' referred to in the version notes table (A02 to A05 of the Demod Board) in section 11-4 of the Dutch service manual. Its function appears to be to alter the timing and/or active edge of the 4 data lines concerned.

The 4 tracks on the Decoder PCB between ICs 6501 and 6510 are cut and diverted via ribbon cables to/from the above circuit.