



Notes:
Pressing both source buttons at the same time will activate both inputs. More foolproof behaviour (if required) is left to the reader.
The servo should be disabled via J1/J2 for offset adjustment (via P2/P3).

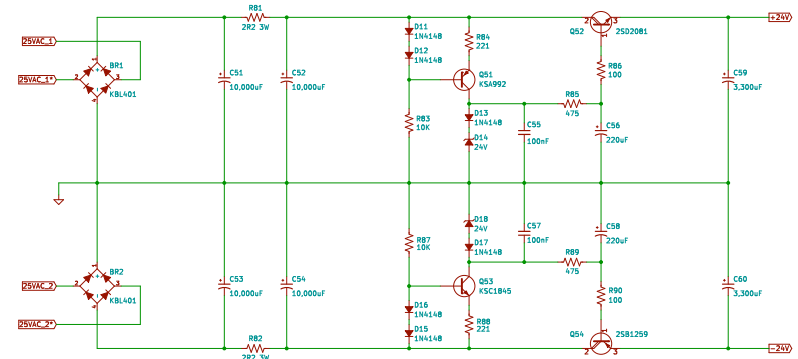

Transformer:
1:20V
2 x 25V @ 2.25A
1 x 1.2V @ 0.50A

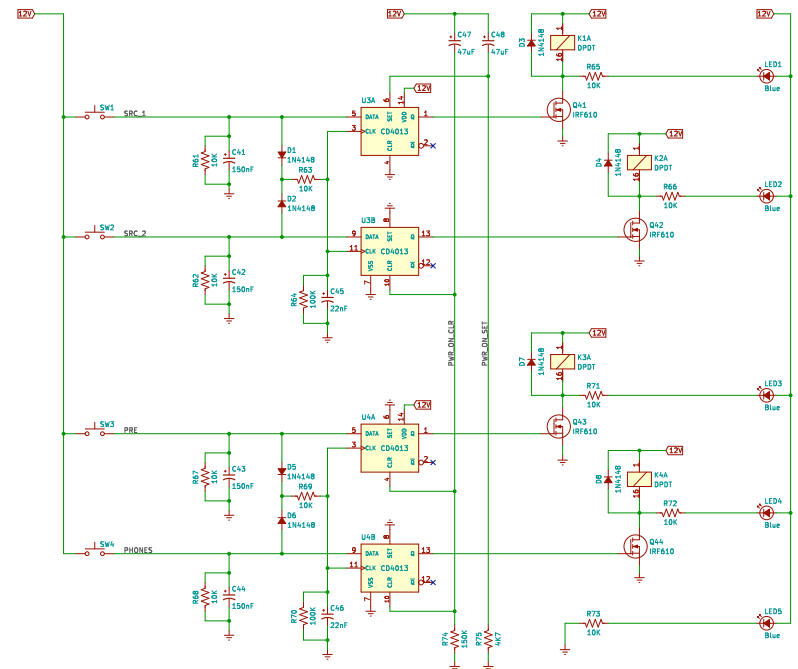