

Input	MTR CKT	Output Switch Position (0-500V)	Output Switch Position (0-55V)	Rectifier Output	HV Output No Load	Note: All outputs are taken from 0-550V (+ & -) output post
117VAC	HV	0	0	293	0	
		50	0	293	44	Be able to adjust past 50 with 0-55 switch
		100	0	425	86	Be able to adjust past 100 with 0-55 switch
		150	0	425	125	Be able to adjust past 150 with 0-55 switch
		200	0	543	161	Be able to adjust past 200 with 0-55 switch
		250	0	543	195	Be able to adjust 245 Max with 0-55 switch
		300	0	630	225	Be able to adjust 258 Max with 0-55 switch
		350	0	689	256	Be able to adjust 282 Max with 0-55 switch
		400	0	746	282	Be able to adjust 308 Max with 0-55 switch
		450	0	822	308	Be able to adjust 332 Max with 0-55 switch
		500	0	877	331	Be able to adjust 353 Max with 0-55 switch