



CM66xx and CM66xxA Firmware Tool User Manual
Rev. 1.9



CM66xx and CM66xxA Firmware Tool User Manual

Rev. 1.9
Dec. 13, 2012

Revision History

Revision	Date	Description	Editor
1.5	2011/02/11	First released	Teddy
1.6	2011/03/18	Change the support platform to winxp only for CM66xx	Teddy
1.7	2012/07/02	Add CM66xxA support	Teddy
1.8	2012/12/10	1. Update user manual of FW tool for v2.1.0.9	Anise
1.9	2012/12/13	1.Update Support OS	Anise

Contents

1	CM66xx and CM66xxA Firmware Tool Spec.....	4
2	CM66xx Firmware Tool Function Introduction	5
2.1	To erase the firmware	5
2.2	To update the firmware from file.....	7

1 CM66xx and CM66xxA Firmware Tool Spec

Function List:

1. Firmware Erasing
2. Update firmware from file

Interface:

- ◆ USB 2.0 High speed

HW Codec:

- ◆ Only Support CM66xx and CM66xxA

OS Support:

CM66xx	<ul style="list-style-type: none">● Win XP (32bit/64bit)
CM66xxA	<ul style="list-style-type: none">● Win XP (32bit/64bit)● Win7 (32bit/64bit)● Win8 (32bit/64bit)


2 CM66xx Firmware Tool Function Introduction

Notice:

During Firmware update process, it's not allowed to unplug the HW device. After the process finished, please unplug and plug the device again.


2.1 To erase the firmware

- 1) Plug in a CM66xx HW board
- 2) Execute FWUpdate.exe
- 3) Select a device name that you want to update, and then click the 『Erase FW』 button.

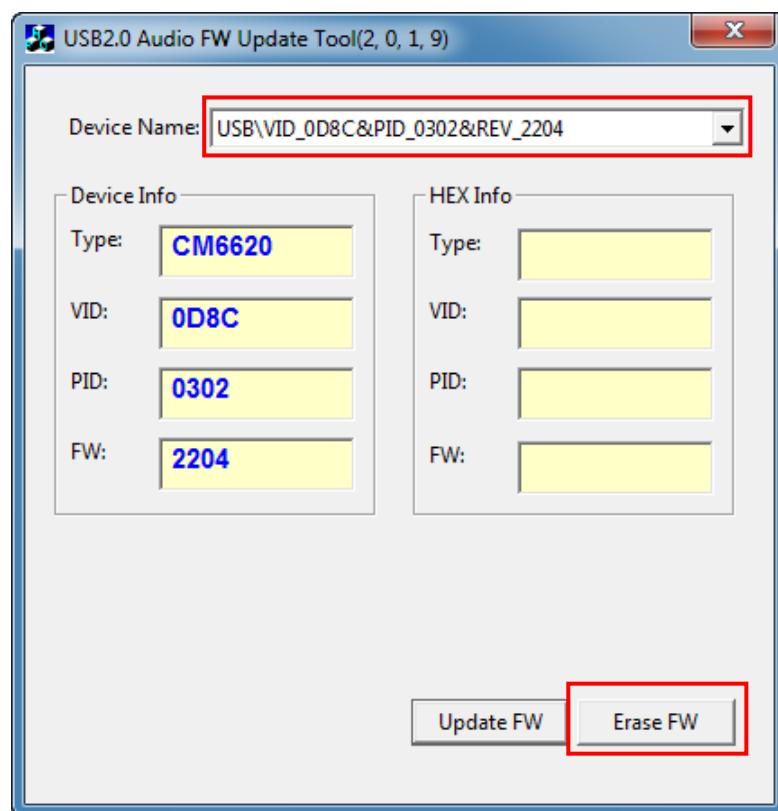

4) Start to erase the firmware date.


Click the „OK„ button on the pop up widow of “Erase Firmware” to continue erasing process.

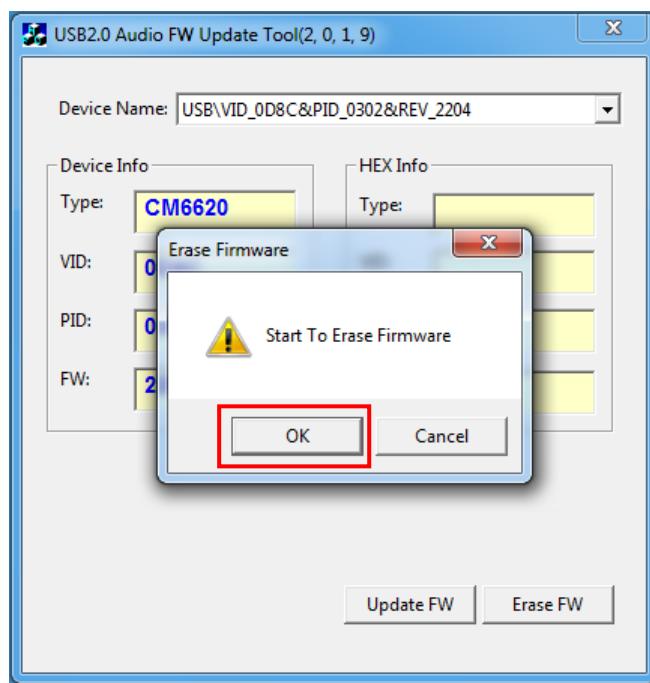

5) To finish the firmware erasing.


Click the „OK„ button on the pop up window of “FWUpdate”.

Please continue to complete the update firmware process.

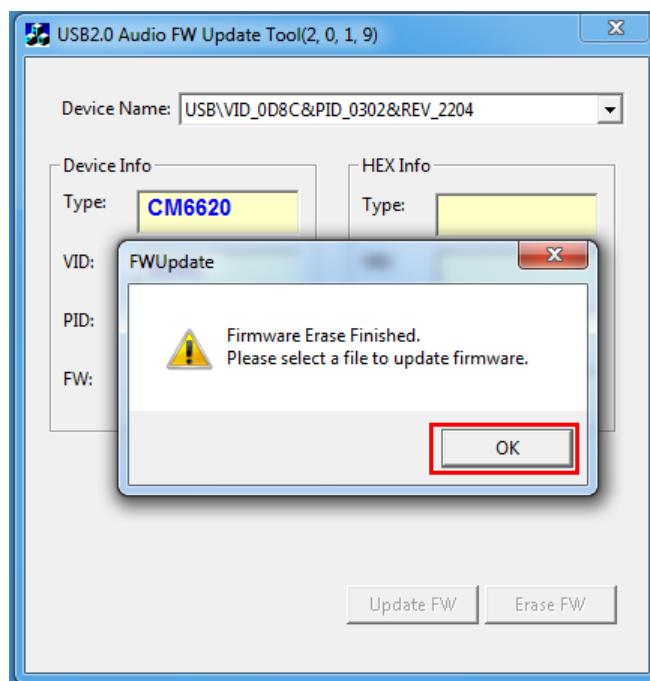


2.2 To update the firmware from file

- 1) Plug in the CM66xx or CM66xxA HW board.
- 2) Execute FWUpdate.exe
- 3) Select a device name that you want to update, and then click **『Update FW』** button.

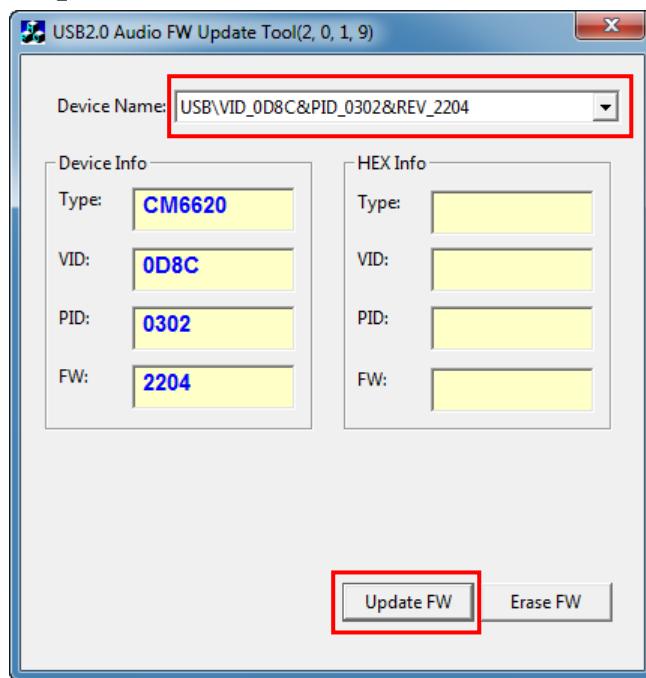


- 4) Select a hex file, and then click on **『Open』** button.

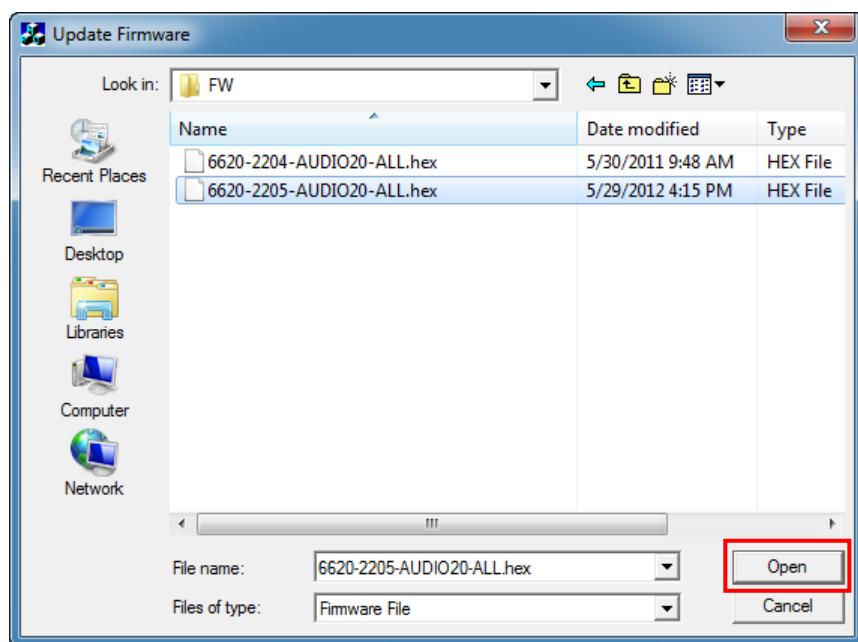


5) Start to update firmware.

Click the «OK» button on the pop up window of “Update Firmware” to continue update process.

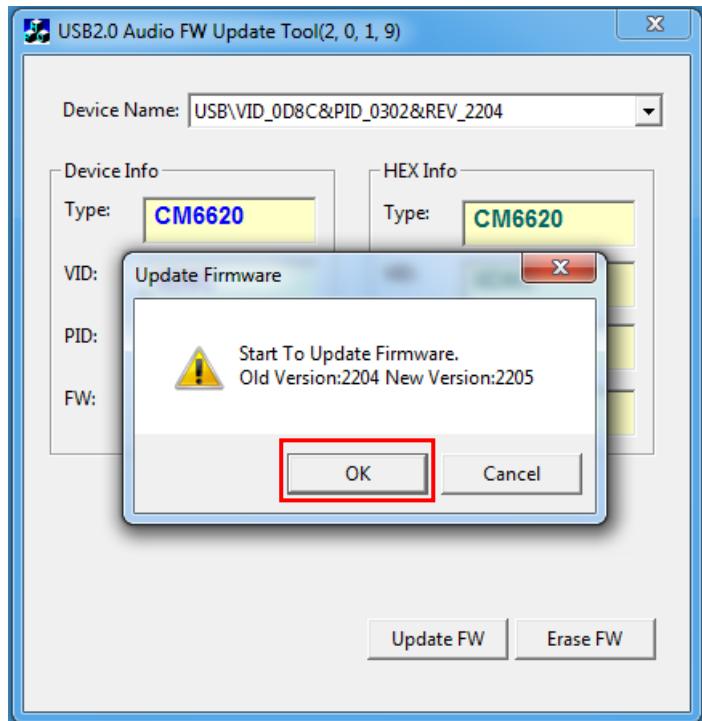

6) Updating...

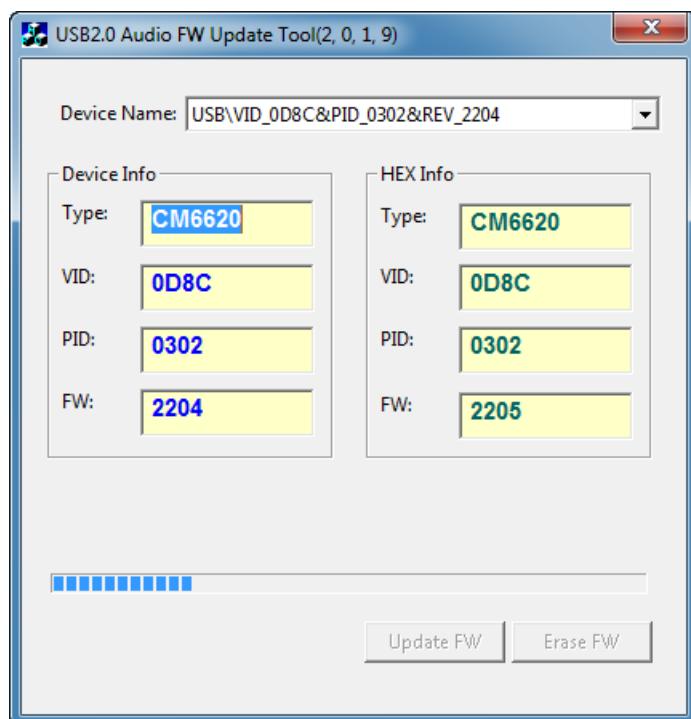

- 7) To finish the firmware update process.

Click the «OK» button on the pop up window of “FWUpdate”.

