





| MODE SWITCH (S2) | | | | | |
|------------------|--------------|-------------|--------|------------------------|--------------|
| SECTION | ✓ CH. 1 | ✓ CH. 2 | STEREO | REVERSE | MONO 1-2 |
| A | 9-11 | 2-11 8-9 | 8-9 | 8-9 | 8-9-11 NC |
| B | 2-3-4- 10 | 7-9 | 7-9 | 9-10 2-3-4 7-2-3 | 2-3-4- 7 |

| SELECTOR SWITCH (S1) | | | | | | |
|----------------------|-------------------------|---------------------------|-------------------------|-----------------------|-----------------------|-----------------------|
| SECTION | TAPE/AUX/MX / AUX | FM-AM | AM-AM | PHONO A | PHONO B | TAPE HD |
| A | 7-8-9-10 3-11 5-8 | 7-8-9-10 9-11 11-12 | 7-8-9-10 NC 11-12 | 8-9-10 5-7 3-11 | 7-9-10 5-8 3-11 | 7-8-10 5-9 4-11 |
| B | 2-6-7- 9-10-11 | 1-2-6- 7-10-11 | 1-2-6- 7-9-10 | 2-6-9- 10-11 | 2-6-9- 10-11 | 1-6-9- 10-11 |
| C | 3-8 | 3-9 | 3-10 | 3-11 | 3-7-12 | 1-3-7 |
| D | 4-9 | 4-10 | 4-11 | 4-12 | 1-4-8 | 2-4-8 |
| E | 3-6-8- 10-12 | 3-6-8- 10-12 | 3-6-8- 10-12 | 3-6-10- 12 | 3-6-10- 12 | 6-10-12 |
| F | 4-12 6-9 | 10-12 | 1-12 | NC | 1-12 6-8 | 4-12 5-12 6-10 |
| G | 8-9-10- 11 | 8-9-10- 11 | 8-9-10- 11 | 9-10-11 | 8-10-11 | 8-9-11 |