



K4 front end v2.3

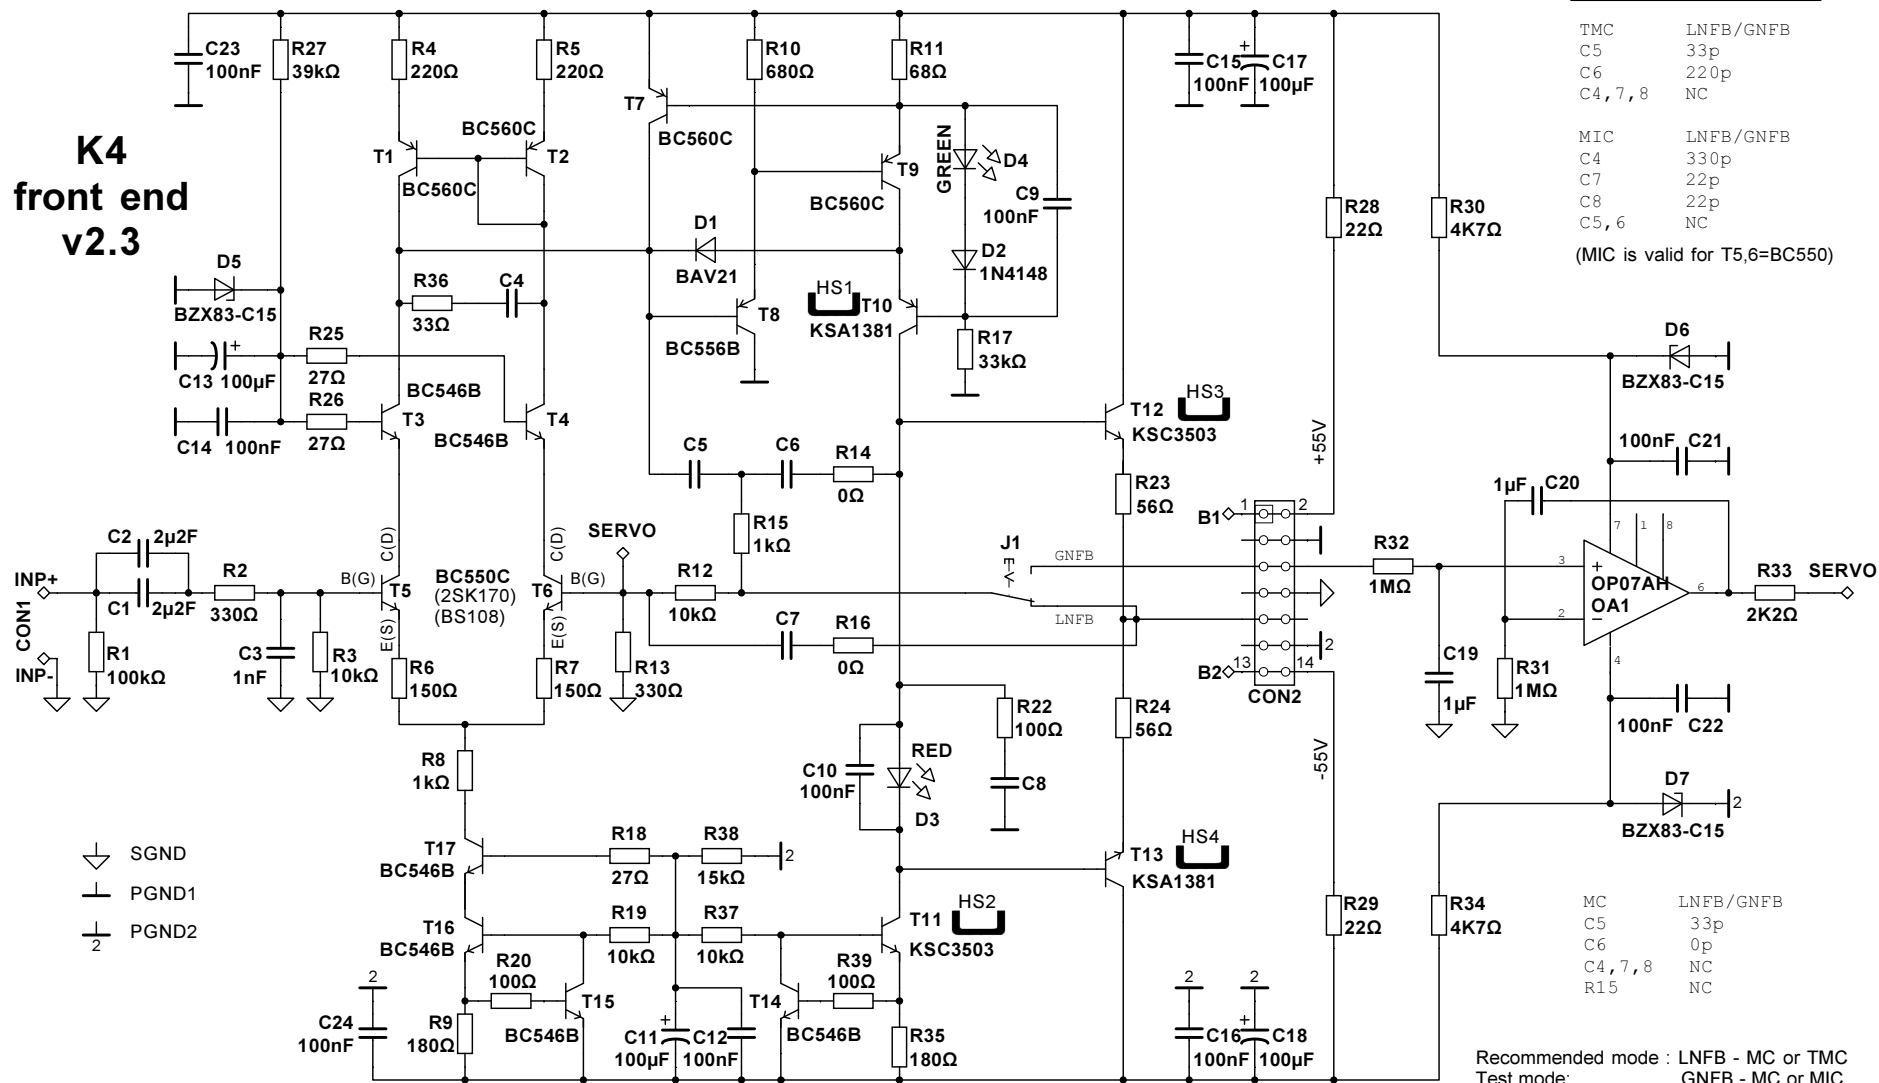

SGND
 PGND1
 PGND2

J1 - NFB selector
 GNFB - global
 LNFB - local

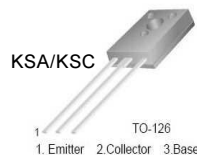

CAUTION !
 In GNFB TMC mode do NOT use regulated auxiliary PSU located on K200 buffer amp pcb.
 Pull out fuses F3 and F4, otherwise, HF oscillation occurs when amp clips.