

LG35R

Service Information

Laney
POWER TO THE MUSIC
www.laney.co.uk

LG35R SPARE PARTS LIST

Laney

Model No.		LG35R		
SPARES ITEM		DESCRIPTION	PART No.	
Mains Transformer	100V	5600-002133 30W 100V Mains Transformer	006177	
	115V	5600-002135 30W 115V Mains Transformer	006178	
	230V	5600-002137 30W 230V Mains Transformer	006179	
Reverb Unit		220mm 2 Spring Reverb Unit	005056	
Loudspeaker		10" 4 Ohm 30W Guitar/Bass (HYD250ZZ-2)	51014	
Switch	Power	5A DPDT Rocker Switch	530027	
Mains Fuse	100-120V	T500mA 20mm Spiral Wound	005566	
	220-240V	T250mA 20mm Spiral Wound	005528	
Corner	Front	Plastic Type	10052	
	Back	Plastic Type	10053	
Jack Sockets		1/4 Jack Socket - Standoff Type - Stereo	005098	
		1/4 Jack Socket - Standoff Type - Mono	005097	
PCB's	9346	30W Main PCB Complete	007016	
	Pots	VR2/4/7	100K Log 6mm Spline	004062
		VR1	100K Log 6mm Spline Dual	004073
		VR5	2K2 Lin 6mm Spline	004063
		VR6	4K7 Lin 6mm Spline	004072
		VR3	22K Lin 6mm Spline	004061
	Switch	SW1/2	2P2W Push Switch	005017
Badge		Small Laney Badge (100mm)	10009	
Control Knob		Small Chicken Head	005628	
Handle		LG Black Strap Handle	1501-0008	
Mains Inlet Socket		IEC Mains Inlet Socket Fused	005005	
Phono Sockets		Stereo Vertical Phono Sockets	005058	
Footswitch		FS2	FS2E	
Mains Lead		Country Dependant		
Feet		Screw on Rubber Feet	10059	
Output / Safety Critical Device	1	TDA2050V Audio Amplifier IC	003403	
	2	2200uF 25V Radial Capacitor	002003	
	3	100R 2.5W Resistor	001504	
	4	0R47 2.5W Resistor	001507	
	5	4R7 2.5W Resistor	001502	
Cabinet Minus Loudspeaker		Carcass minus L/Speaker LG35R	007102	
Manual		LG35R User Manual	007103	