



Driver	Vas		Fs	Qts	Qes	Xmax		Dia	
	litres	cu.ft.	Hz			mm	in.	cm	in.
Eminence Omega Pro 15A optimal	258.5	9.12	33.0	0.312	0.330	4.8	0.19	37.00	14.57
Eminence Omega Pro 15A variable	258.5	9.13	33.0	0.312	0.330	4.8	0.19	37.00	14.57

3

Driver	PE	Sd		Vd		n0	SPL	PeakSPL	
	W	m^2	sq.in.	m^3	cu.ft.				
Eminence Omega Pro 15A optimal	50	0.1075	166.66	0.0005	0.018	0.02714	96.3	113.3	
Eminence Omega Pro 15A variable	50	0.1075	166.66	0.0005	0.018	0.02714	96.3	113.3	

Alignment	Vb		Fb	Qb	Dmin		Dv		
	litres	cu.ft.	Hz		cm	in.	cm	in.	
Eminence Omega Pro 15A optimal	110.6	3.90	42.9	0.57	12.74	5.02	12.50	4.92	
Eminence Omega Pro 15A variable	150.0	5.30	39.1	0.51	13.04	5.13	12.50	4.92	

Alignment	Np	Ql	k	Lv		K1	K2		
				cm	in.				
Eminence Omega Pro 15A optimal	2	7	0.732	26.97	10.62	0.1340	103.3		
Eminence Omega Pro 15A variable	2	7	0.732	22.96	9.04	0.1340	103.3		