

V3 V4 6BM8X2

V1 12AX7

LEFT CHANNEL

V5 V6 6BM8X2

RIGHT CHANNEL

V7 6CA4

SELECTOR	
1	AUX
2	TUNER
3	PHONO
4	TAPE

MODE	
1	NORMAL
2	REVERSE
3	CH-1
4	CH-2

MODE	
1	NORMAL
2	REVERSE
3	CH-1
4	CH-2

