

MODIFICATION

PROBLEM:


CD Player does not read disc, skips, produces scratching noise.

CAUSE:

The cable tie that ties the two cables to the laser together scrapes over the bottom of the unit.

SOLUTION:

Relocate the cable tie as shown in the below picture, it's advisable to relocate the other cables as well to avoid any contact with the other cables.

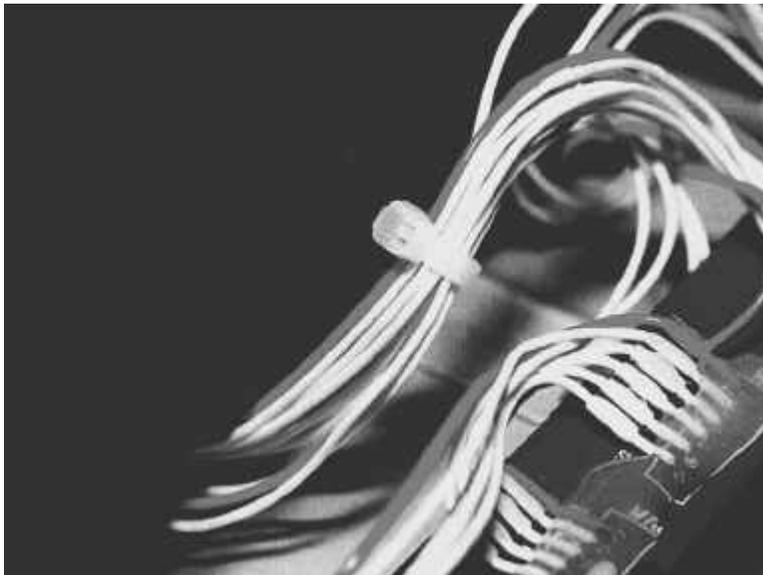

It's advisable to perform this modification whenever a unit comes in for service.

PRODUCTION:

This modification will be implemented in production, there is no serial number information known at this moment.