


SCHEMATIC DIAGRAMS (4/12)

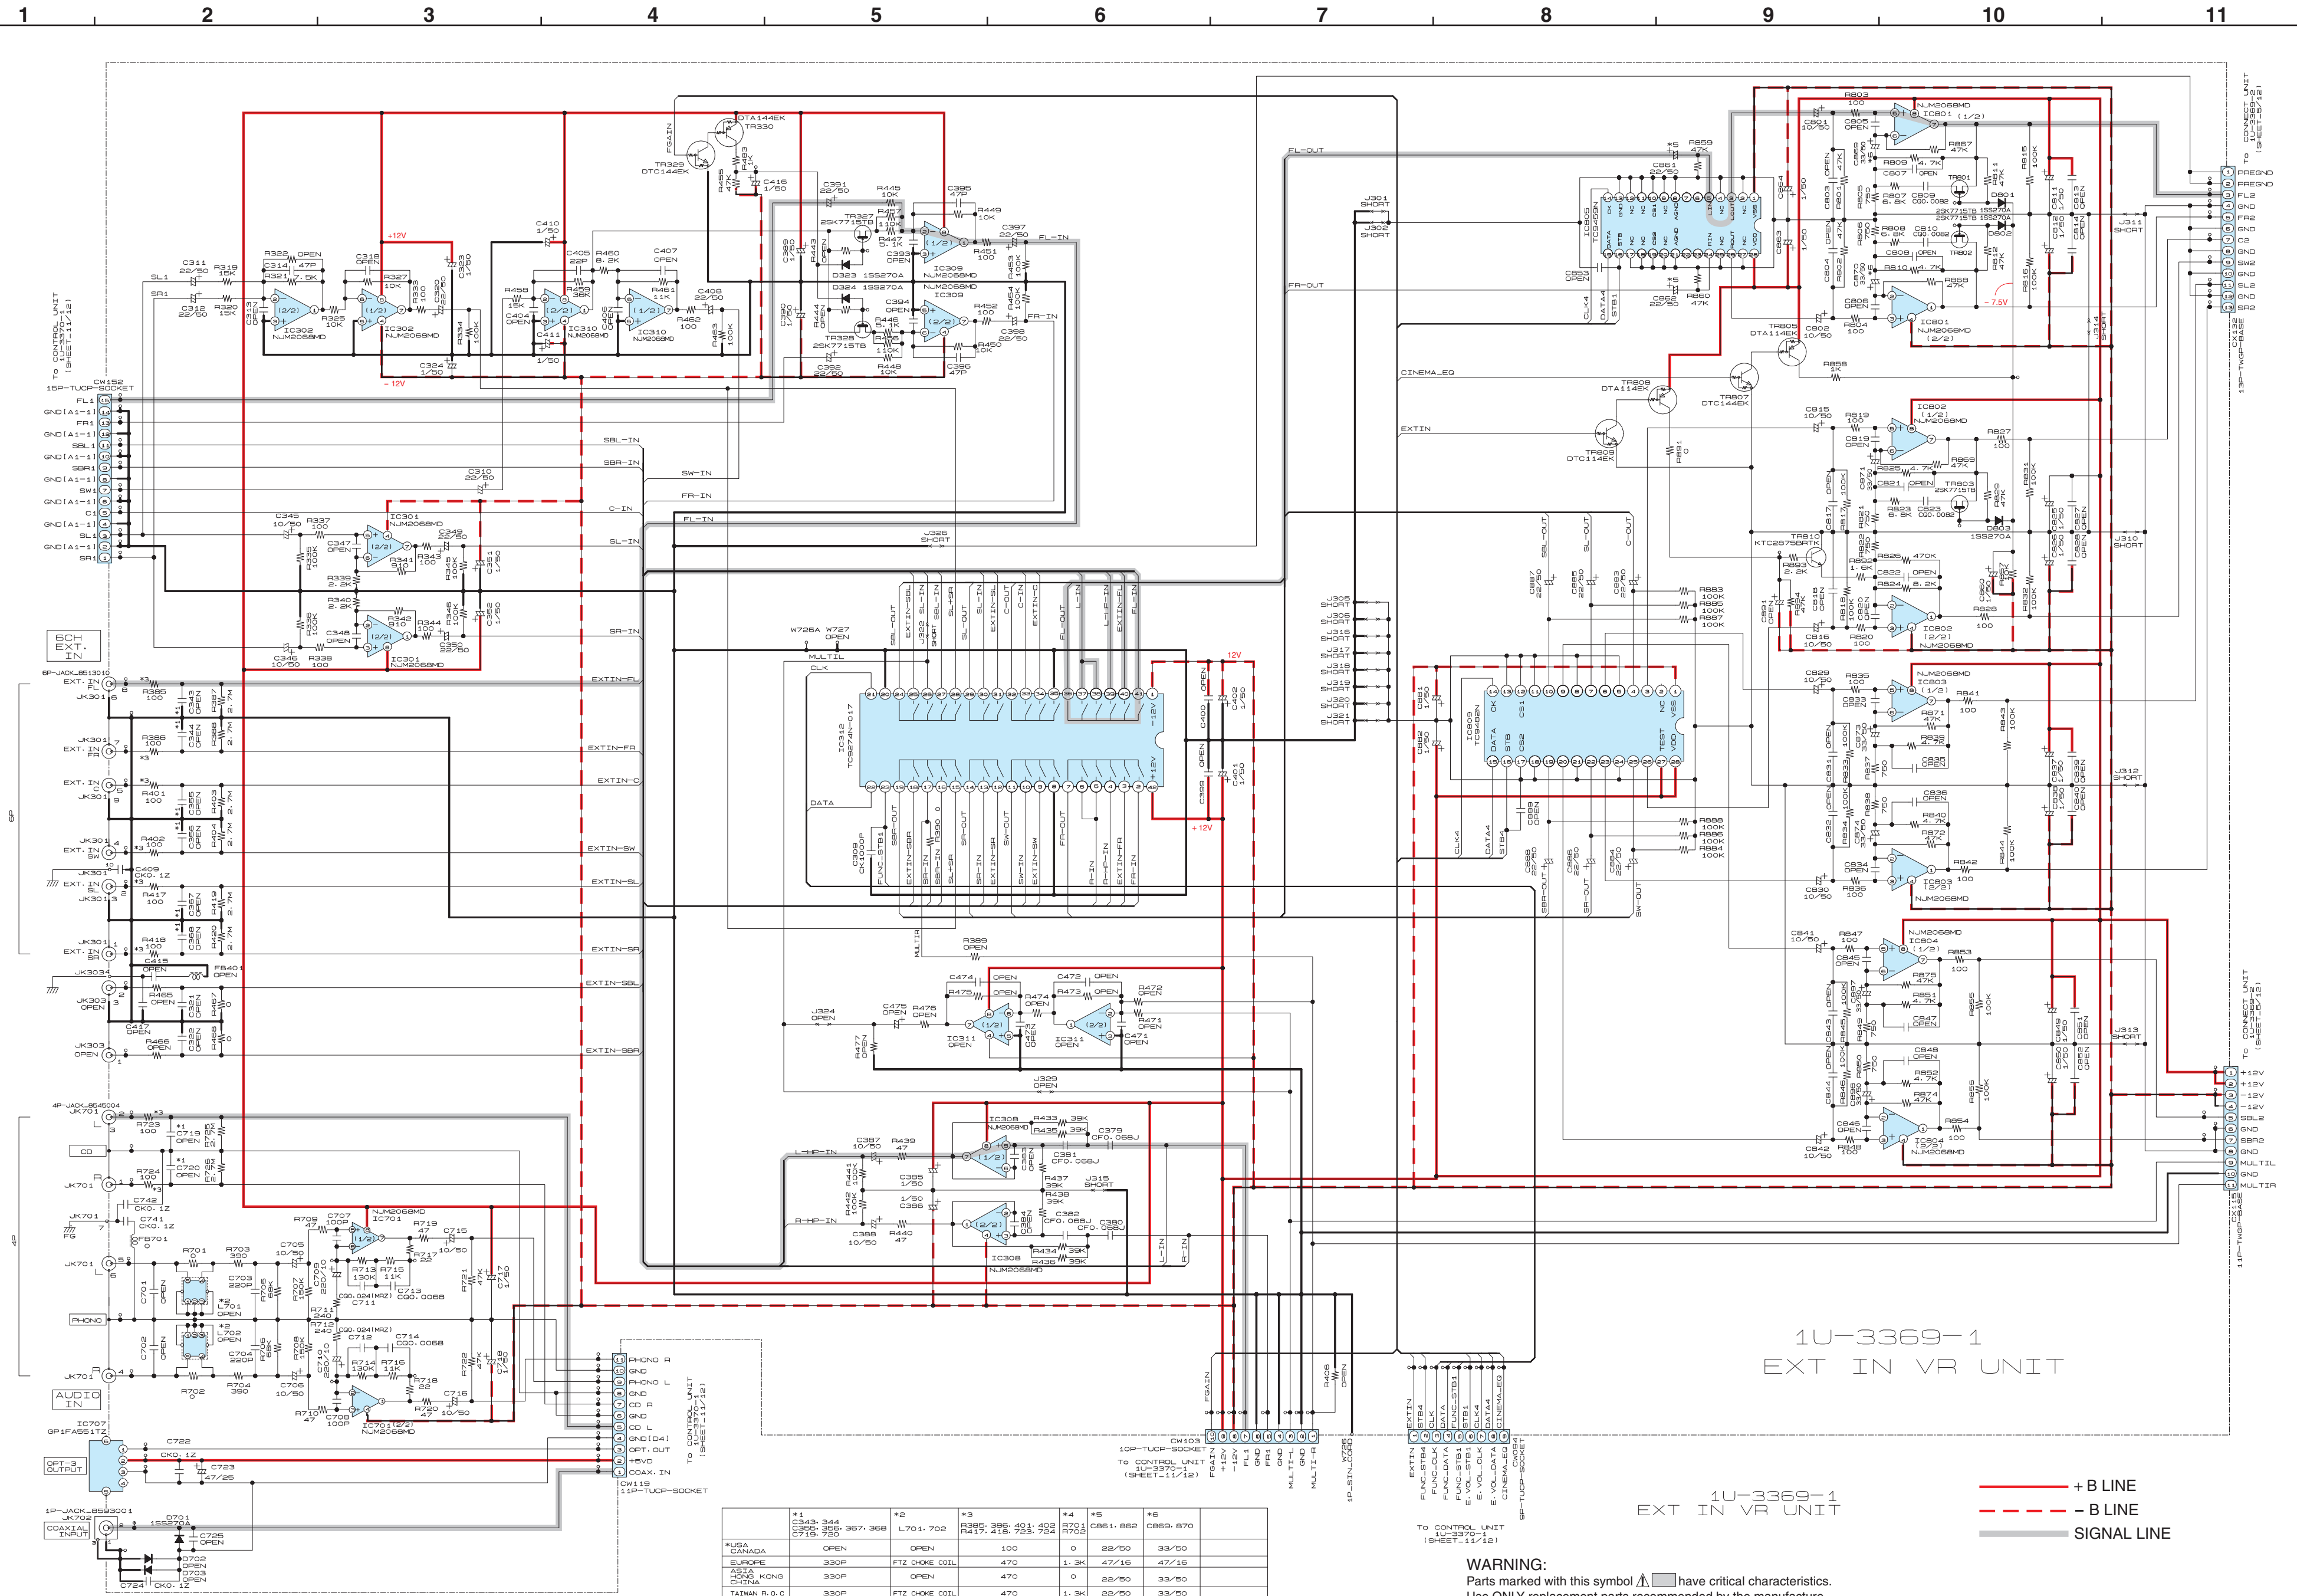

WARNING:
Parts marked with this symbol have critical characteristics.
Use **ONLY** replacement parts recommended by the manufacture.

CAUTION:
Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power card is less than 460kohms, the unit is defective.

WARNING:
DO NOT return the unit to the customer until the problem is located and corrected.

SCHEMATIC DIAGRAMS (4/12)
1U-3369-1 EXT IN VR UNIT