


 
## SCHEMATIC DIAGRAMS (12/12)

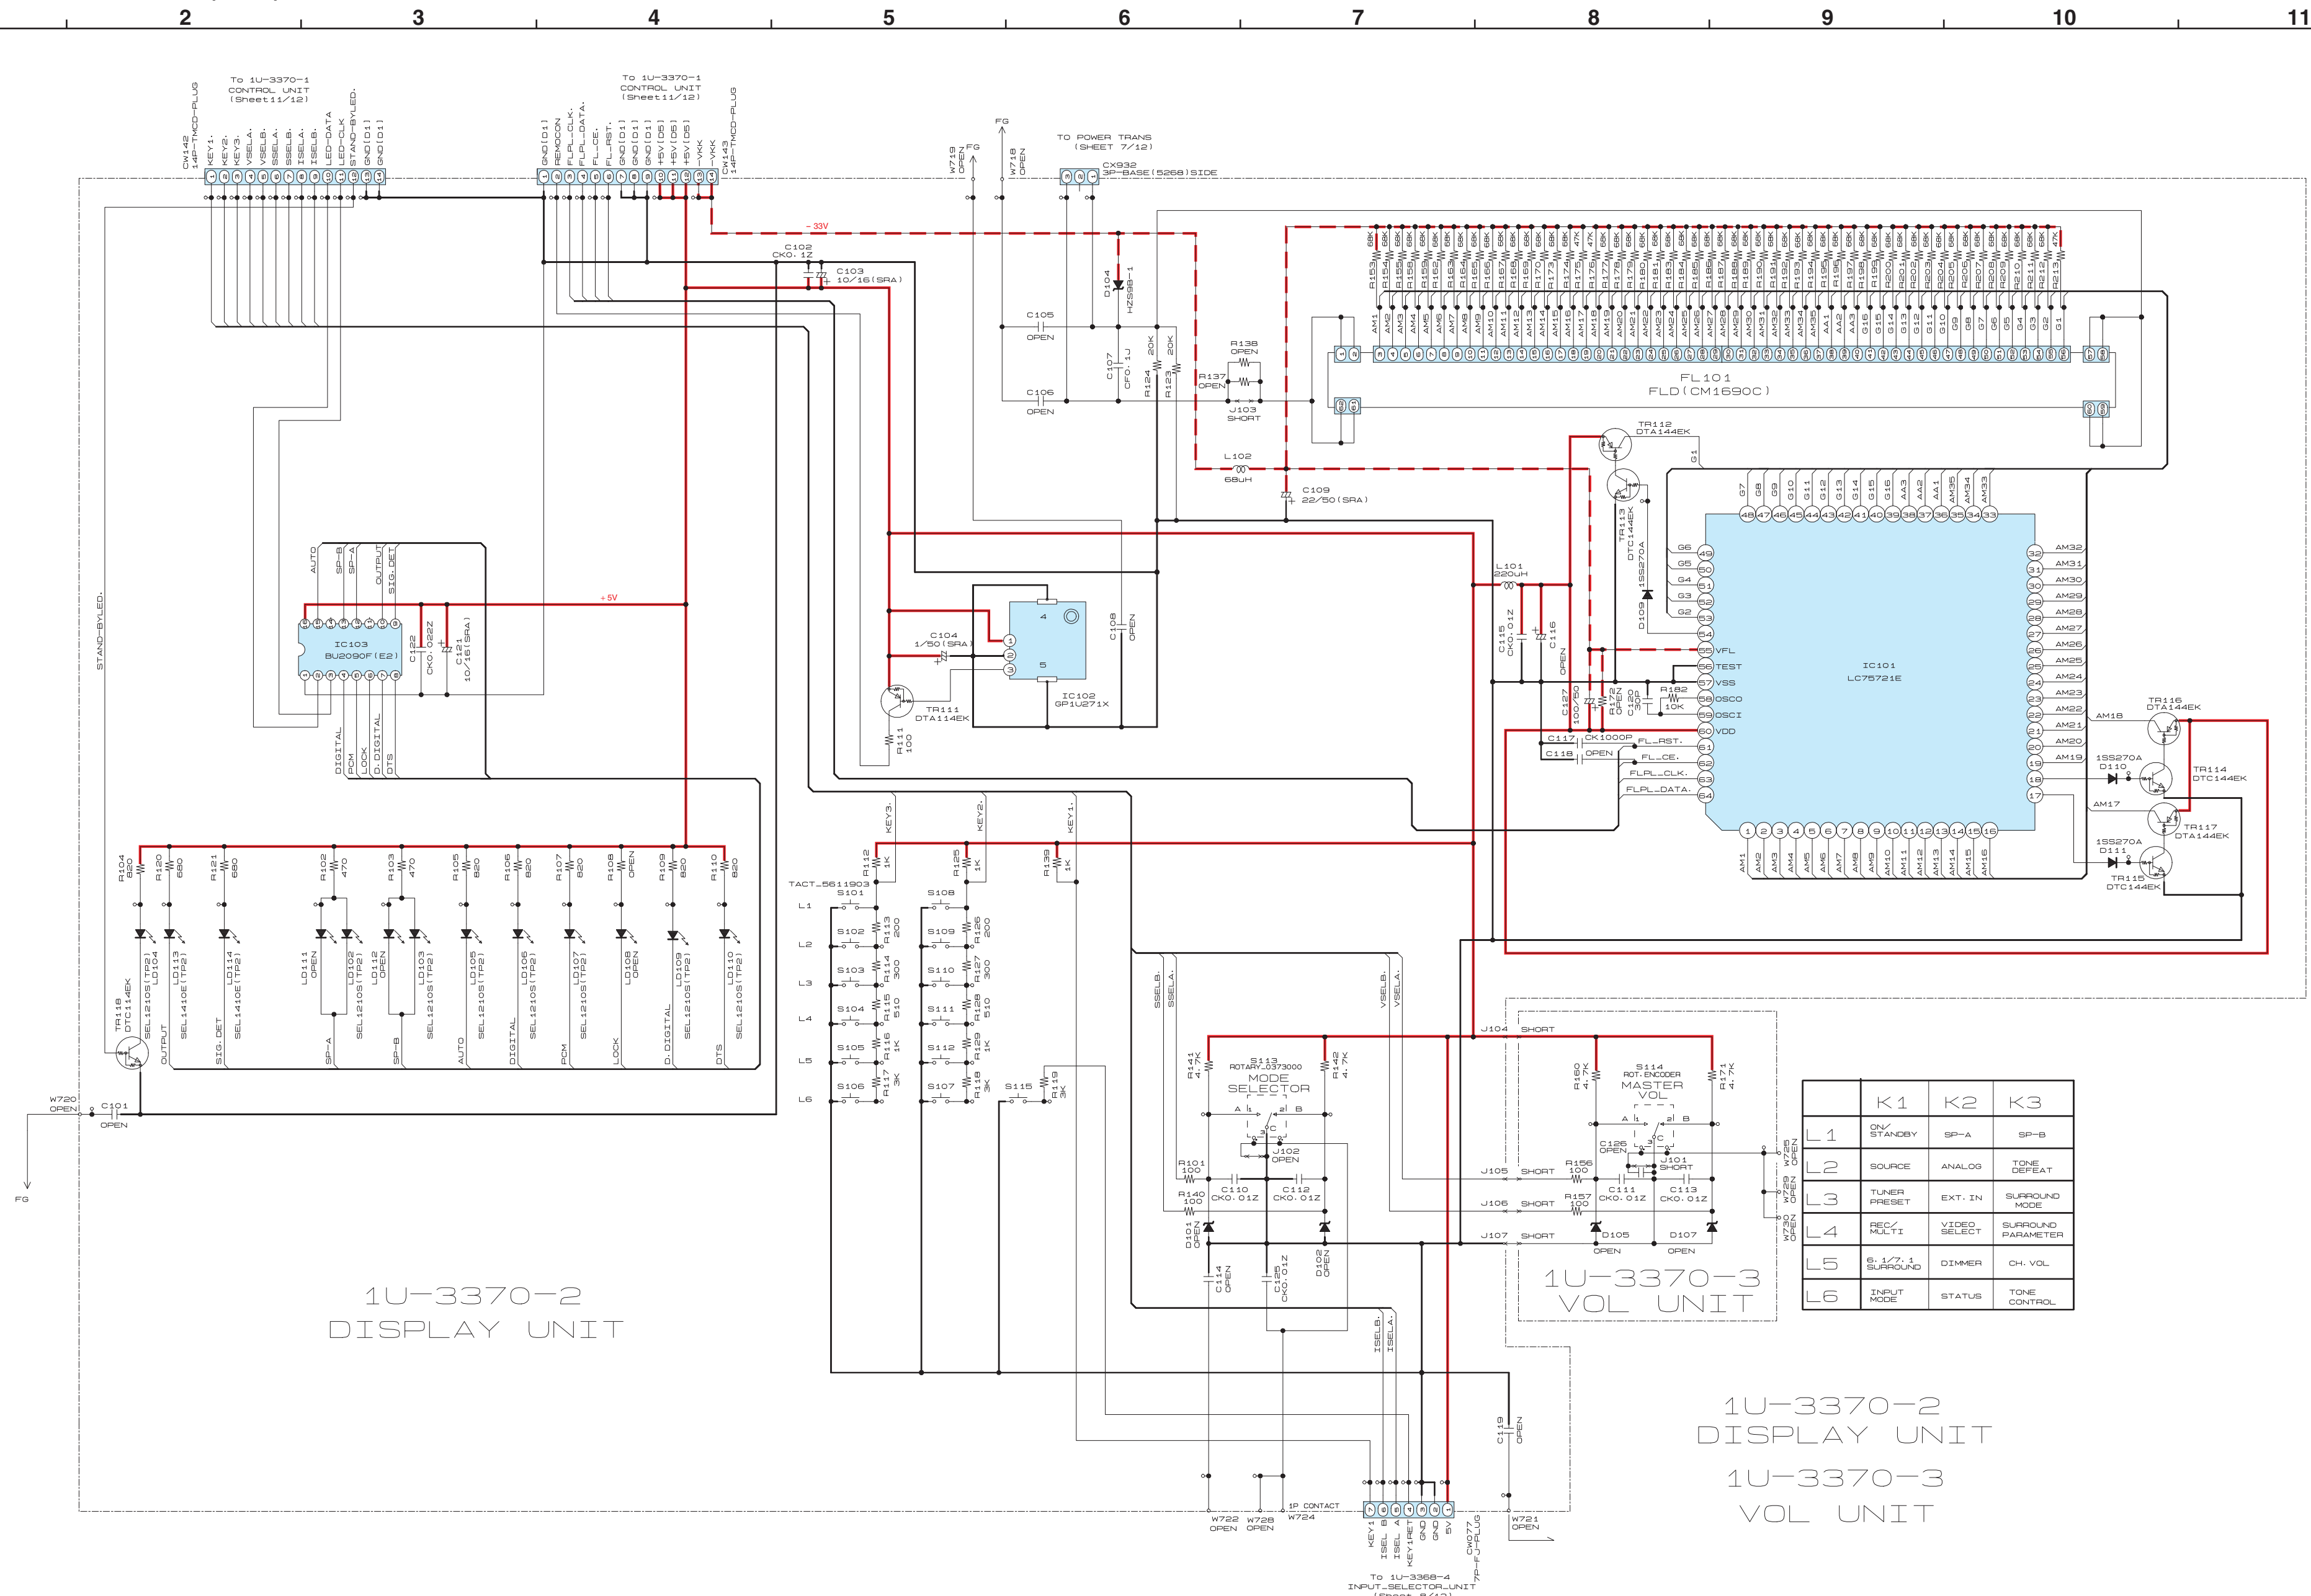

## NOTICE

ALL RESISTANCE VALUES IN OHM. k=1,000 OHM M=1,000,000 OHM  
 ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD  
 EACH VOLTAGE AND CURRENT ARE MEASURED AT MO SIGNAL INPUT CONDITION.  
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

## WARNING:

Parts marked with this symbol  have critical characteristics.  
 Use ONLY replacement parts recommended by the manufacture.

## CAUTION:

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power card is less than 460kohms, the unit is defective.

## WARNING:

DO NOT return the unit to the customer until the problem is located and corrected.

— + B LINE  
 --- - B LINE

## SCHEMATIC DIAGRAMS (12/12)

1U-3370-2 DISPLAY UNIT  
 1U-3370-3 VOL UNIT