

Short press => Select Input 2

Long press => Switch between input and input 2 2 symmetrical asymmetrical

Switch 3 (3 INPUT / TYPE)

Short press => Select Input 3

Long press => Switch between input 3 symmetrical and asymmetrical 3 entry

Switch 4 (4 INPUT / TYPE)

Short press => Selects the input 4

Long press => Switch between input 4 and 4 symmetrical unbalanced input

Switch 5 (ENTER MENU / BYPASS)

Short press => Enter the setup menu

Long press => Toggle between selected shorted input and input selected not shorted

Switch 6 (OUTPUT SELECT / SELECT BOTH OUTPUT)

Short press => Switch between output 1 and output 2

Long press => + 1 output Selects output 2

Encoder (TOGGLE MUTE / POWER OFF / VOLUME)

Short press => Switch ON and OFF Mute Mute

Long press => Off the preamp

Rotation => Volume +/-

1.1.3) In configuration mode:

Switch 5 (CHOICE SELECT / SAVE CHOICE)

Short press => current menu selection or choose an option

Long press => Backup choice

Switch 6 (CANCEL CHOICE & EXIT MENU)

Short press => Rollback menu to exit the setup menu

Encoder (MENU QUICK EXIT / MENU SELECTION)

Short press => Output of immediate setup menu from anywhere

Rotation => Menu +/-