



Use K1 to lower volume level.

Use K2 to rise volume level.

Max volume level is 0.0 dB, min level is -127.5 dB, 256 steps.

Press K3 (short press < 1s) to enter input selection mode. This mode is indicated by INPUT text blinking in display top-left corner. Use K1 and K2 to cycle between inputs; 4 seconds after last press of K1, K2 or K3, the volume control mode is resumed.

Press K3 (long press > 1s) to switch between filter ON(default)/OFF modes.

Do not cover U1(IR receiver) if remote control is used!

Use Up/Down buttons on remote control to change volume level.

Use A/B on remote control to enter input select mode.

Audiobyte Technologies

RD-30 Front Board
(LED version)
Functionality Description

7/18/2012