


LINE AMPLIFIER

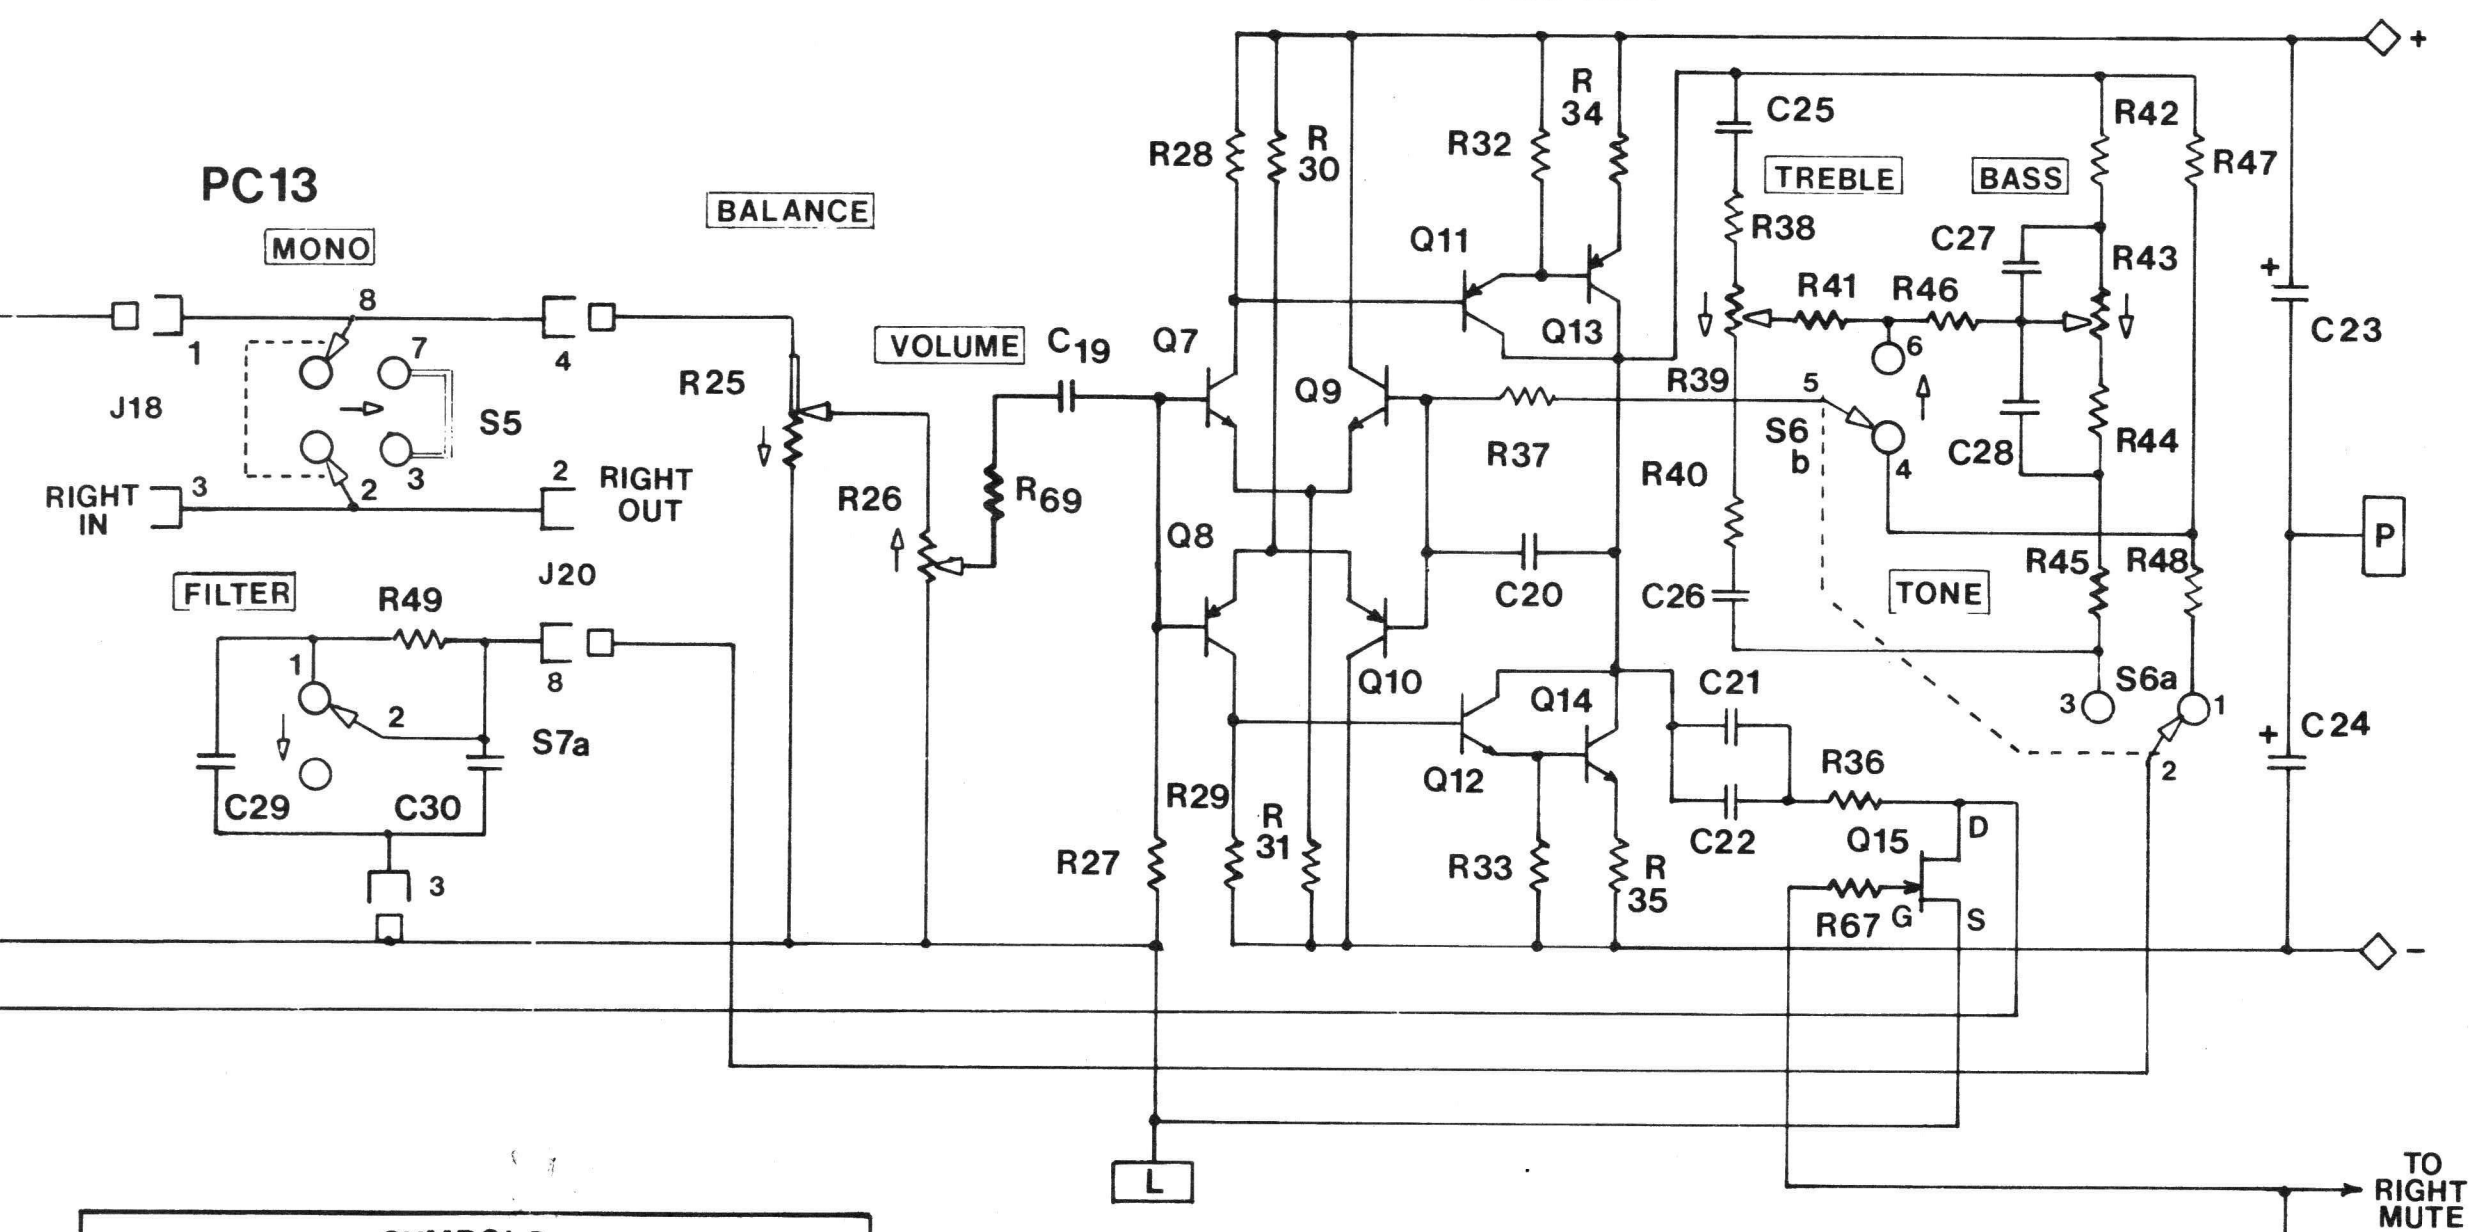

CABLE PIN ASSIGNMENTS

J22 TO J23; A
PIN

- 1 AUX L
- 2 TUNER L
- 3 RECORD L
- 4 LINE.GND L
- 5 SHIELD GND
- 6 AUX R
- 7 RECORD R
- 8 TUNER R
- 9 LINE GND R
- 10 PHONO 2 R
- 11 PHONO GND R
- 12 PHONO 2 L
- 13 PHONO 1 R
- 14 PHONO GND L
- 15 PHONO 1 L



J24 TO J25; B
PIN

- 1 OUT LINE L
- 2 SHIELD
- 3 OUT LINE R
- 4 SHIELD
- 5 EPL SEND R
- 6 EPL RETURN R
- 7 SHIELD
- 8 EPL RETURN L
- 9 EPL SEND L
- 10 SHIELD
- 11 TAPE 1 L
- 12 TAPE 2 L
- 13 SHIELD
- 14 TAPE 2 R
- 15 TAPE 1 R

SYMBOLS

- P** POWER SUPPLY GROUND
- S** SHIELD GROUND
- L** LEFT & RIGHT } CHANNEL SIGNAL GROUND
- R** RIGHT
- +** POWER SUPPLY RAILS
- POWER SUPPLY RAILS
- ⊗** CIRCUIT CARD LAND
- ⏏** CHASSIS GROUND
- MALE CONNECTOR PIN
- ┌** FEMALE CONNECTOR SLEEVE
- SWITCH CLOCKWISE / DEPRESSED

MUTING

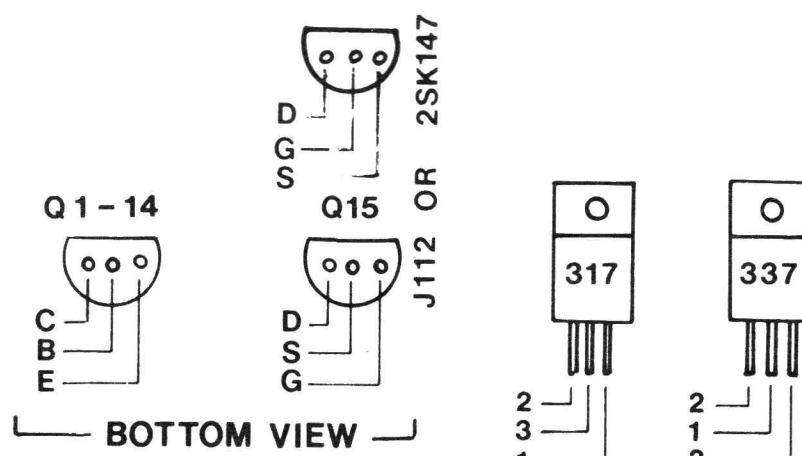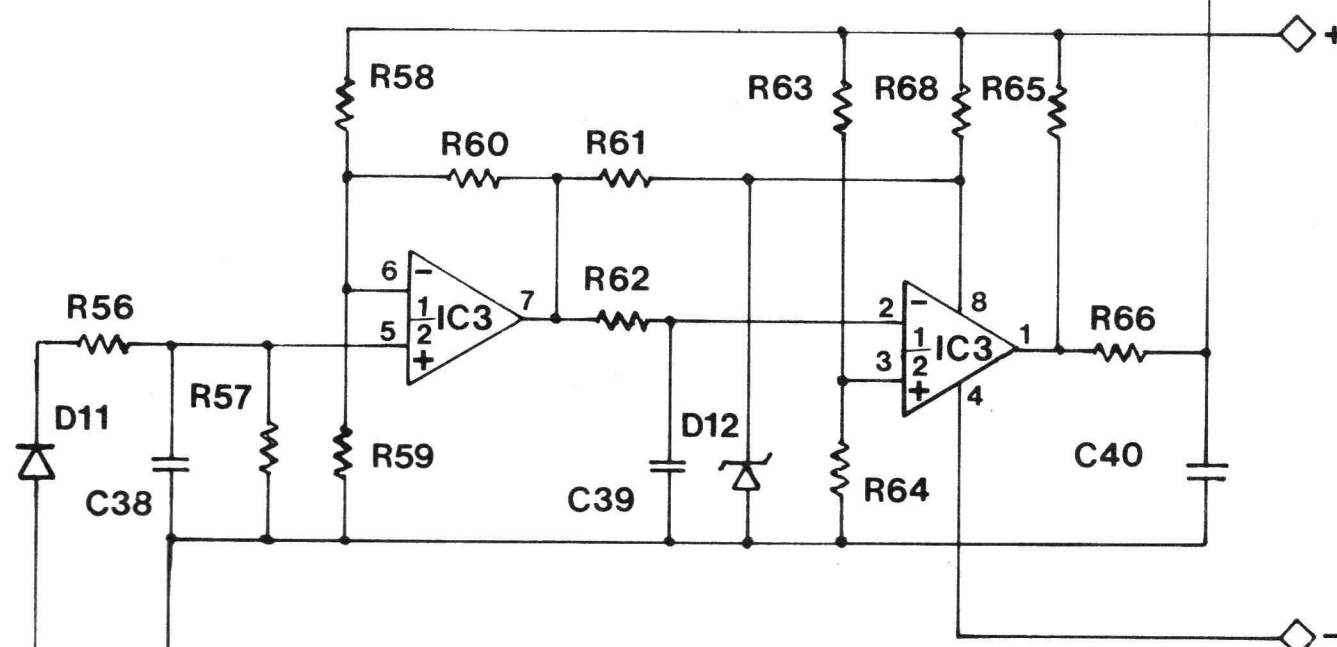

POWER TRANSFORMER WIRING

PRIMARY VOLTS	100	120	220	240
BR/WH	F	D	F	D
BR/RD	D	F	D	F
BR	R	R	J	J
BK/WH	M	E	K	K
BK/RD	E	M	M	M
BK	S	S	S	S
FUSE	1/10A	1/16A		

DH 110 PREAMPLIFIER SCHEMATIC DIAGRAM 12-86

LEFT CHANNEL SHOWN TO Q15, S7, C30 AND R50.
LARGE CIRCUIT CARD IS PC14c

© Copyright 1986. All rights reserved.