

## DISASSEMBLY

- \* Disconnect all leads connected to the back of the unit.
- 1. Remove fourteen (14) screws retaining the bottom cover. (Refer to Figure 3-1)
- 2. Mechanical parts removal. (Refer to Figures 13-1 and 15-1)

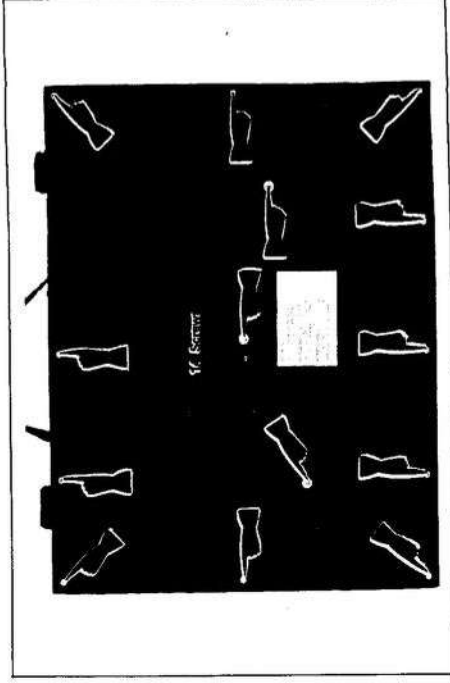


Figure 3-1

## VOLTAGE SELECTION

Check the preset voltage before connecting the mains plug to a mains outlet. If the setting is different from your local supply mains voltage, the selector must be re-set as follows. Rotate the selector with a screw driver, aligning the arrow mark to your local voltage number.

### Note:

Since this set uses DC motor, the operation is regardless of whether a household power supply is of 50Hz or 60Hz.

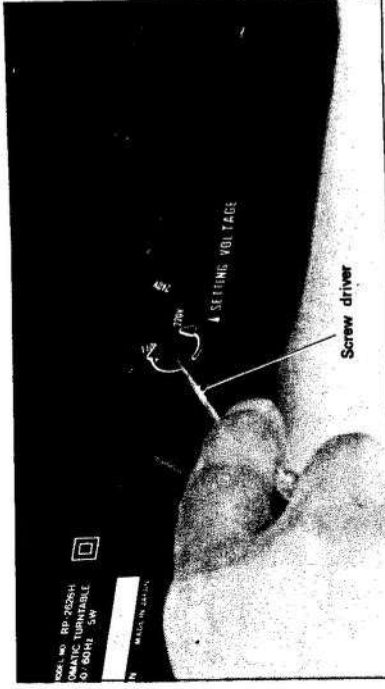


Figure 3-2

## MOUNTING OF PHONO-CARTRIDGE ON HEAD-SHELL

1. Referring to Figure 3-3, connect the cartridge to the head-shell by use of leads.
2. Provide a distance of 50mm between the stylus end and the rubber packing on the head-shell. (Refer to Figure 3-4)

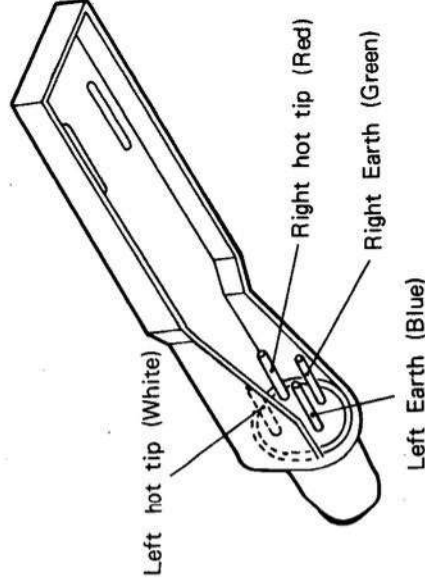


Figure 3-3

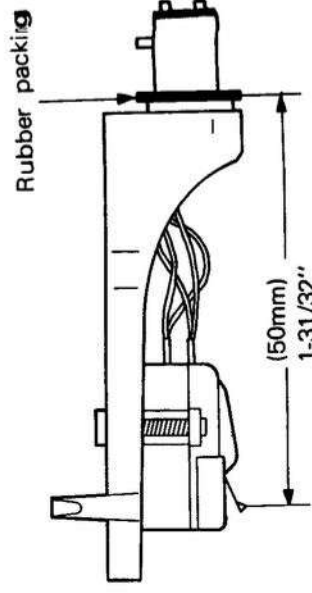


Figure 3-4