



## Soekris DAM1021 DAC with moode audio player


1. Open „Configure“ => „System“ in moode

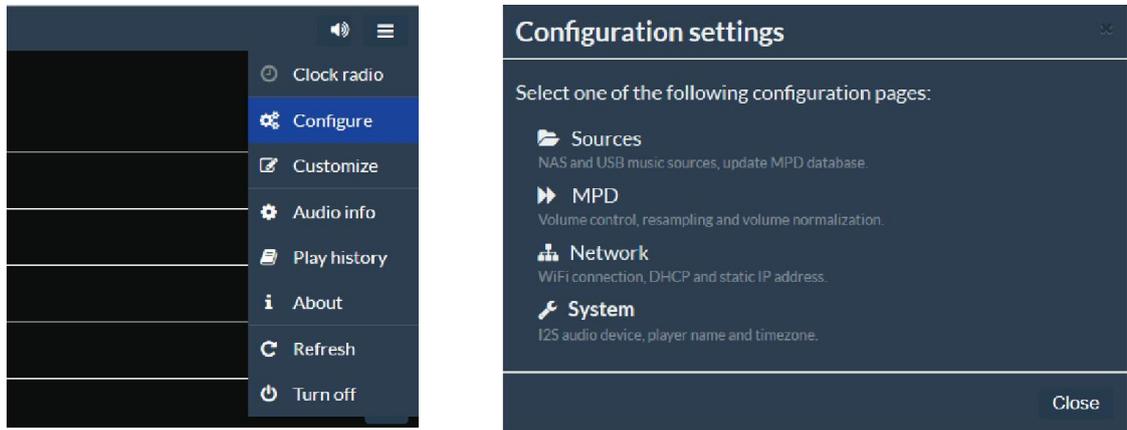

2. Set „I2S audio device“ tp RPi DAC, don't reboot!!!

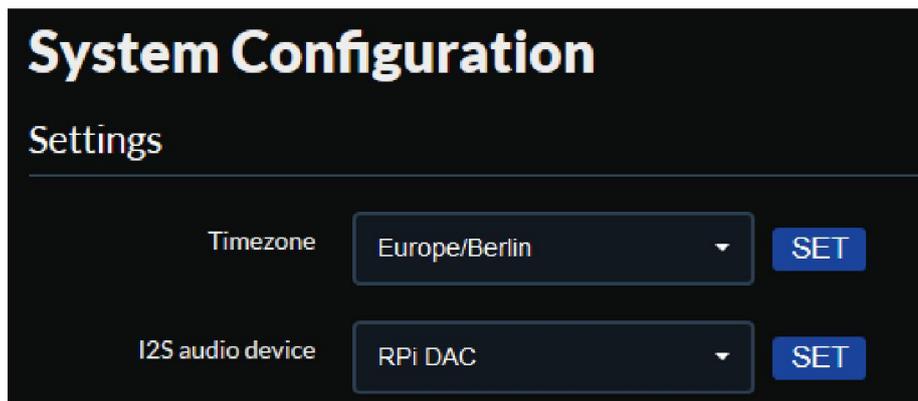

3. Open putty and connect via ssh to roo@moode

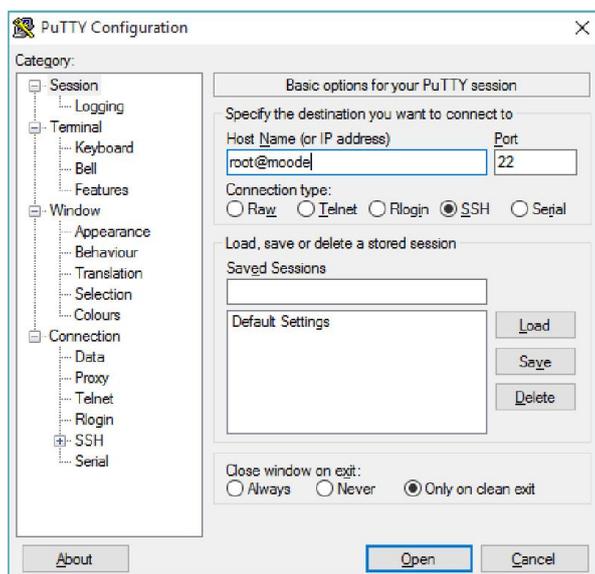


4. Password = moode



```
moode - PuTTY
Using username "root".
root@moode's password: █
```

5. Open boot/config.txt

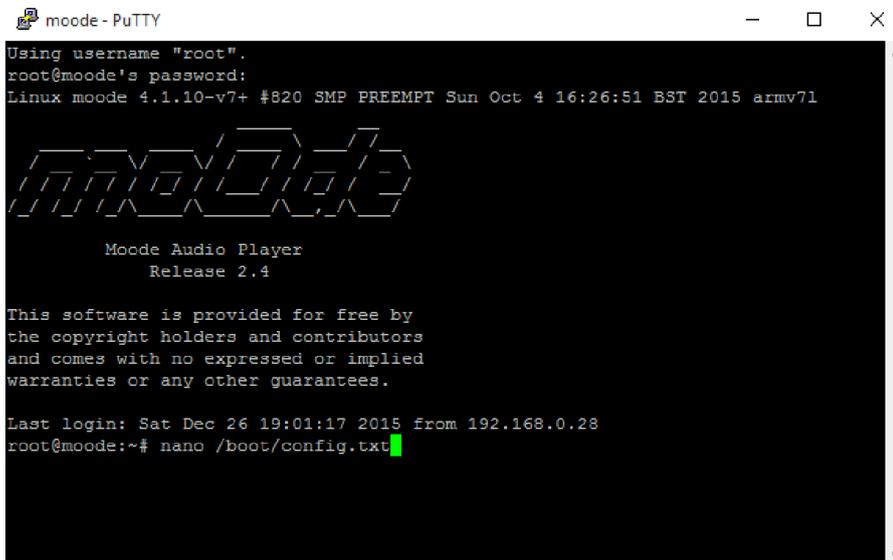


```
moode - PuTTY
Using username "root".
root@moode's password:
Linux moode 4.1.10-v7+ #820 SMP PREEMPT Sun Oct 4 16:26:51 BST 2015 armv7l

moode
Moode Audio Player
Release 2.4

This software is provided for free by
the copyright holders and contributors
and comes with no expressed or implied
warranties or any other guarantees.

Last login: Sat Dec 26 19:01:17 2015 from 192.168.0.28
root@moode:~# nano /boot/config.txt █
```

6. Edit or add line  
dtoverlay=rpi-dac

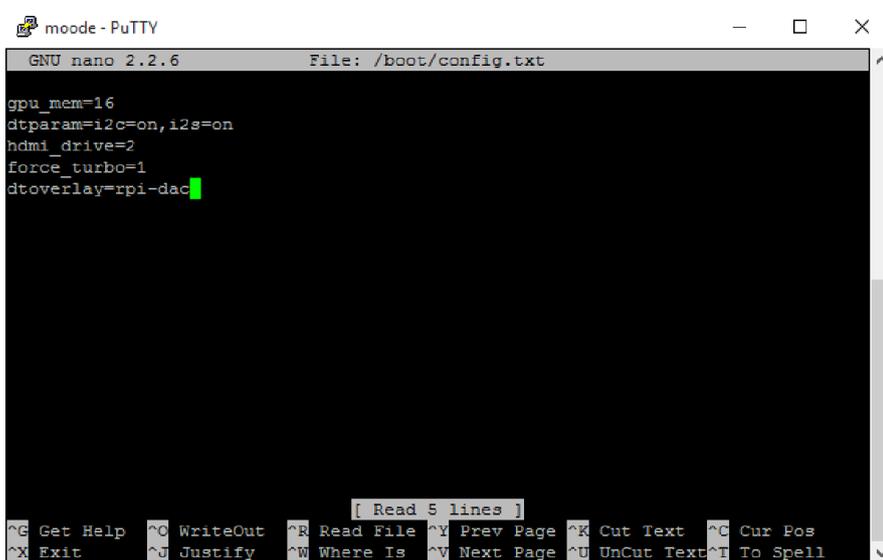

```
moode - PuTTY
GNU nano 2.2.6 File: /boot/config.txt

gpu_mem=16
dtparam=i2c=on,i2s=on
hdmi_drive=2
force_turbo=1
dtoverlay=rpi-dac █

[ Read 5 lines ]
^G Get Help ^O WriteOut ^R Read File ^Y Prev Page ^K Cut Text ^C Cur Pos
^X Exit ^J Justify ^W Where Is ^V Next Page ^U UnCut Text ^T To Spell
```

7. Exit (STRG+X) and save (Y)
8. Reboot