


Warpspeed Battery Supply Indicator

	Initial Value,															
Month	0	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th	12th	13th	14th	
9V	9.64	9.30	9.18	9.09												
9V Batt Life, months		17.94	13.00	10.71	-0.33	-0.33	-0.33	-0.33	-0.33	-0.33	-0.33	-0.33	-0.33	-0.33	-0.33	
12V																
12V Batt Life, months		#DIV/0!														

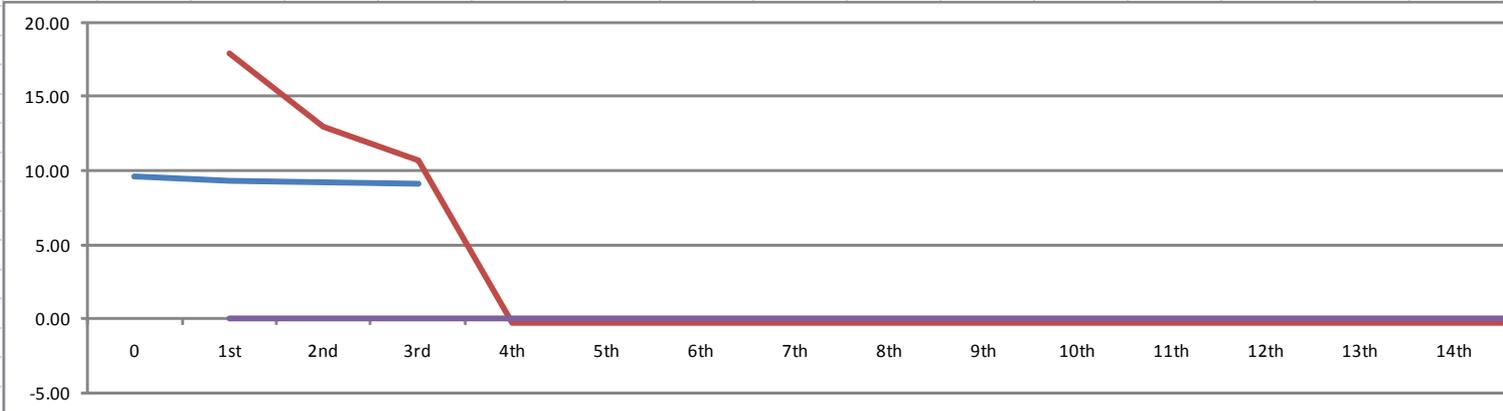

NOTE: -Zoom page to 100% or more for better font resolution
 -Double click on spreadsheet to enter monthly battery voltage readings