

TR601	Service Manual	Measured w/ Load
Emitter	44.1	45.6
Base	43.5	44.8
Collector	21.1	19.7
TR602		
Emitter	0.63	0.72
Base	0.03	0.063
Collector	-56.4	-27.1
TR603		
Emitter	0.63	0.701
Base	-0.03	0.058
Collector	-56.7	-27.1
TR604		
Emitter	-57.2	-35.6
Base	-56.7	-34.9
Collector	-56.4	-33.5
TR605		
Emitter	-57.9	-35.7
Base	-57.2	-35.4
Collector	-56.7	-33.8
TR606		
Emitter	-57	-34.6
Base	-56.5	-33.9
Collector	-1.15	-9.7
TR607		
Emitter	1.21	-7.29
Base	0.49	-8.05
Collector	-1.15	-9.91
TR608		
Emitter	-1.15	-9.93
Base	-0.057	-9.28
Collector	0.49	-8.05
TR609		
Emitter	-0.01	0.024
Base	0.01	-0.017
Collector	0.96	1.285
TR610		
Emitter	-0.01	0.025
Base	-0.03	0.076
Collector	-1	-20.4
TR611		
Emitter	0.6	-4.6

Base	1.21	-7.1
Collector	49.6	50.8
TR612		
Emitter	-0.61	-9.2
Base	-1.19	-9.7
Collector	-50	-50.9
TR613		
Emitter	0.11	0.043
Base	0.59	-4.28
Collector	49.6	51
TR614		
Emitter	-0.03	0.027
Base	-0.61	-9.2
Collector	-49.8	-50.8