



SinePi SMT finished KIT

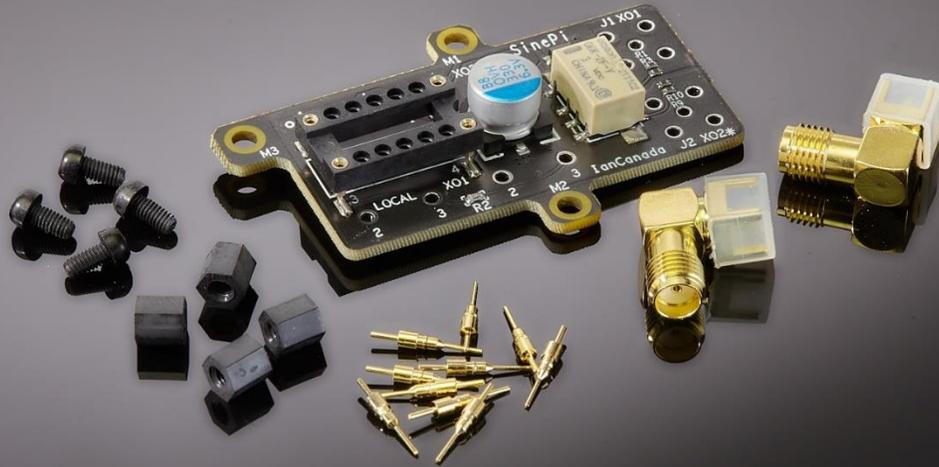


iancanada.mail@gmail.com

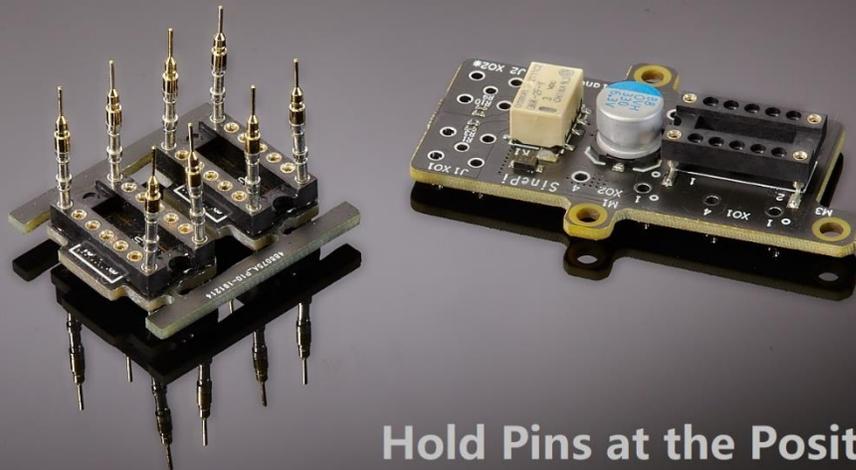


Hold Pins at the Positons

iancanada.mail@gmail.com

Solder Pins at the Bottom Side of the SinePi PCB

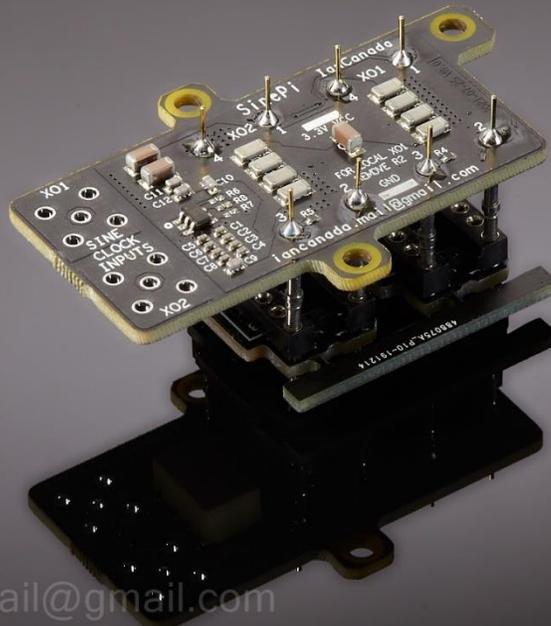

iancanada.mail@gmail.com

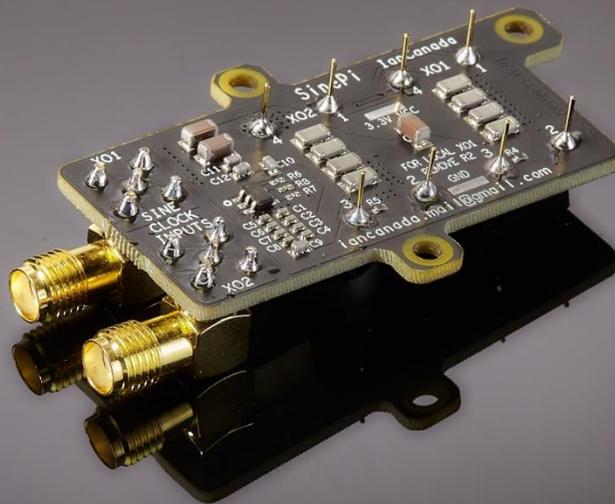

Solder the SMA Connectors


iancanada.mail@gmail.com

Cut the Tails of the Pins



iancanada.mail@gmail.com

Install the Nylon Standoffs

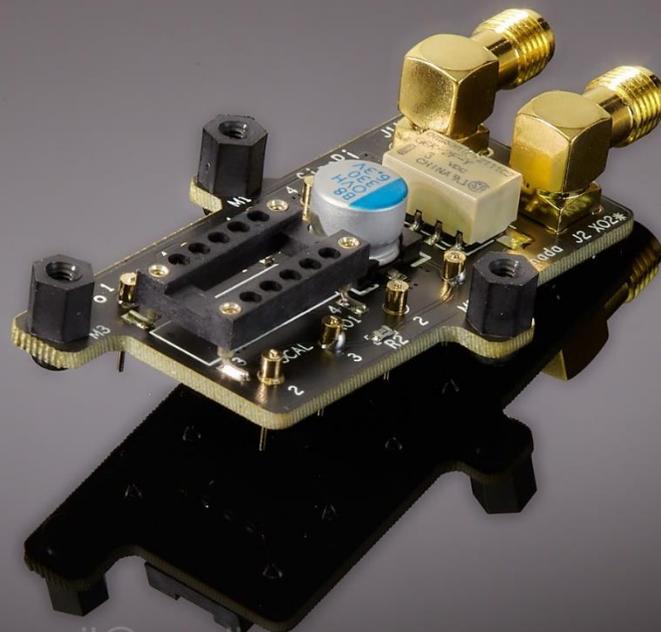

iancanada.mail@gmail.com

Reference P/N (not included in the KIT)

110-44-314-41-001000