
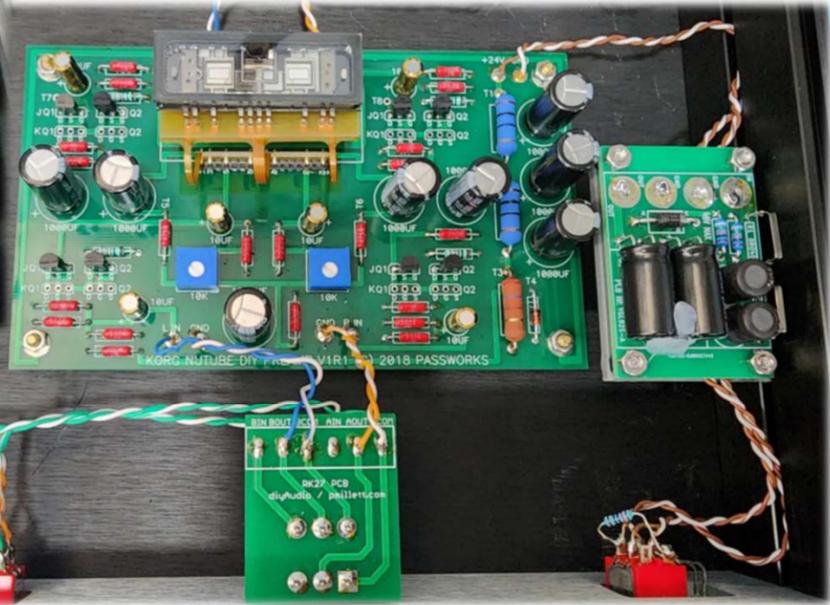
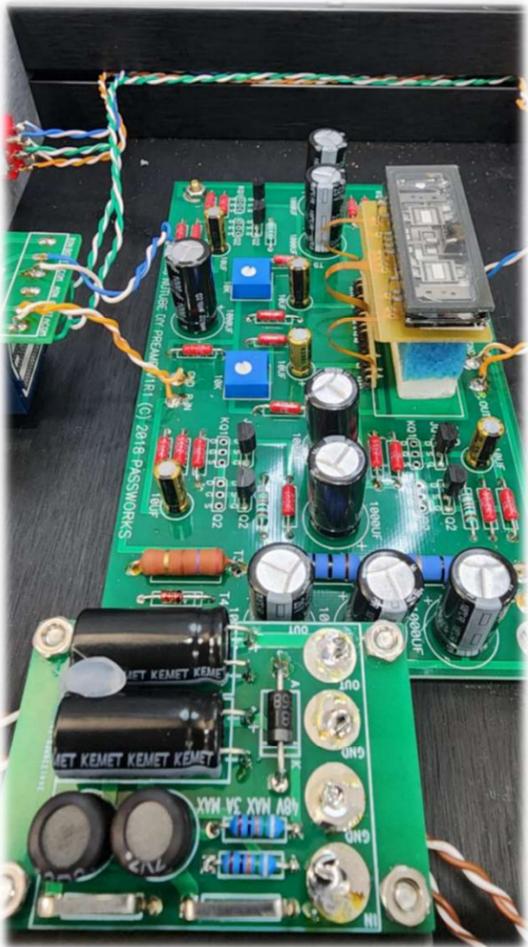
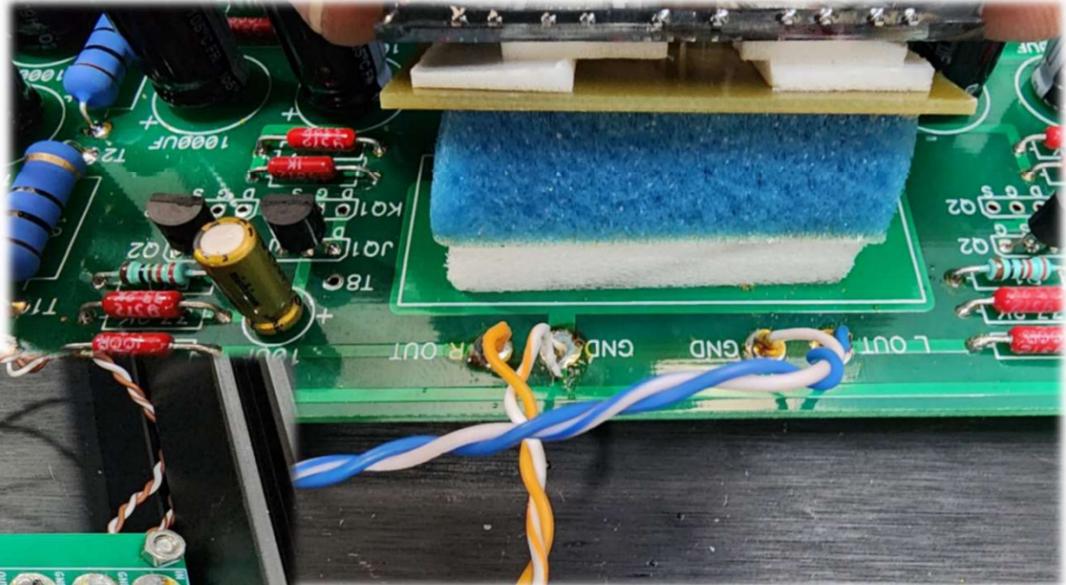
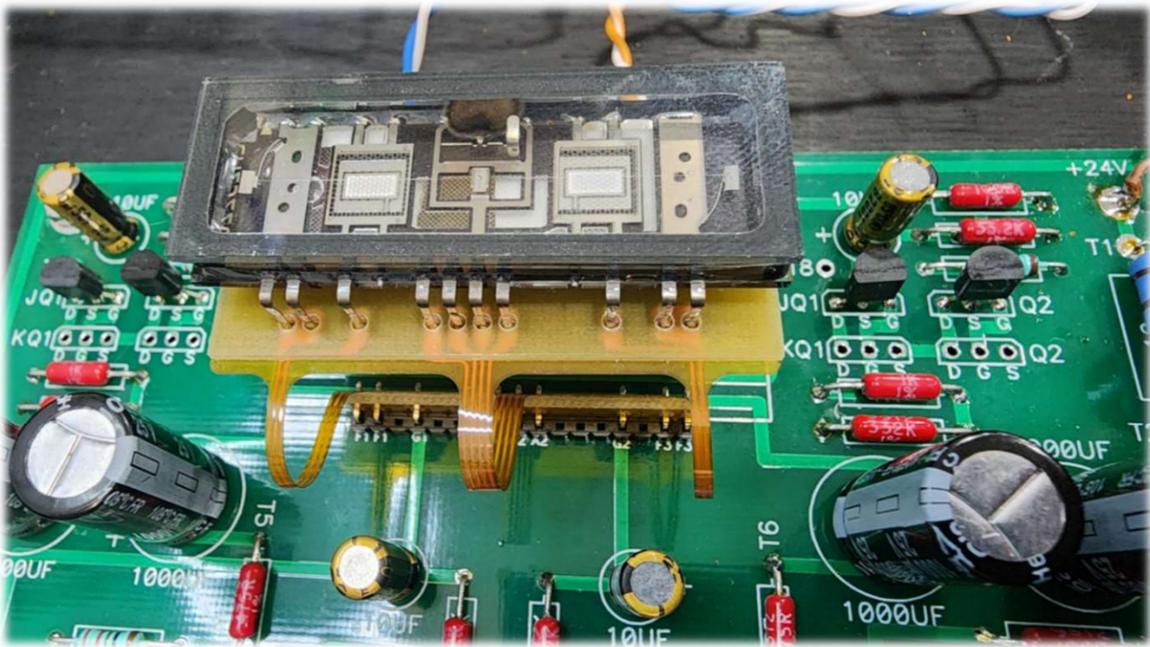
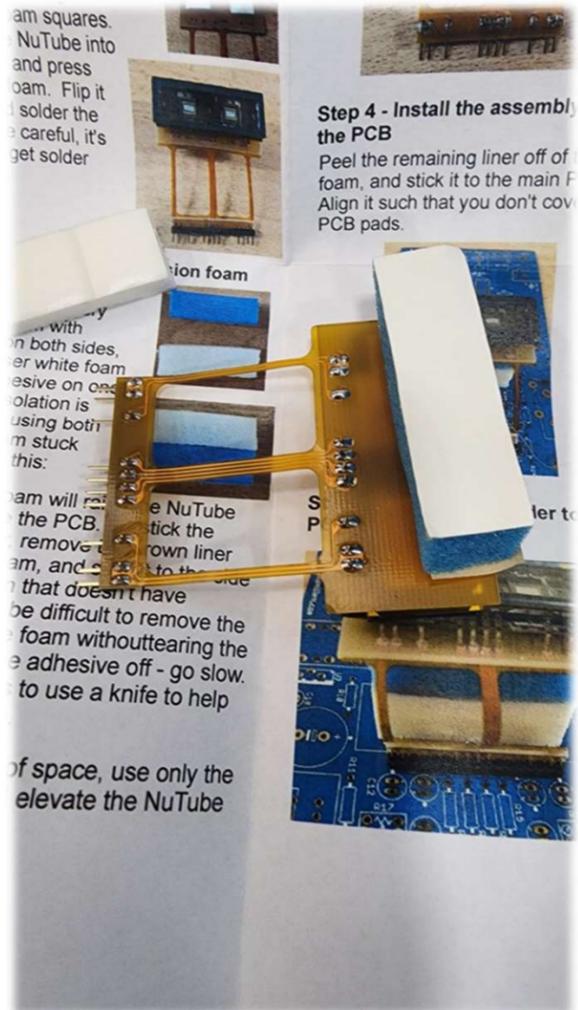


Installing Pete Millet Anti-Vibration Mount by "birdbox"

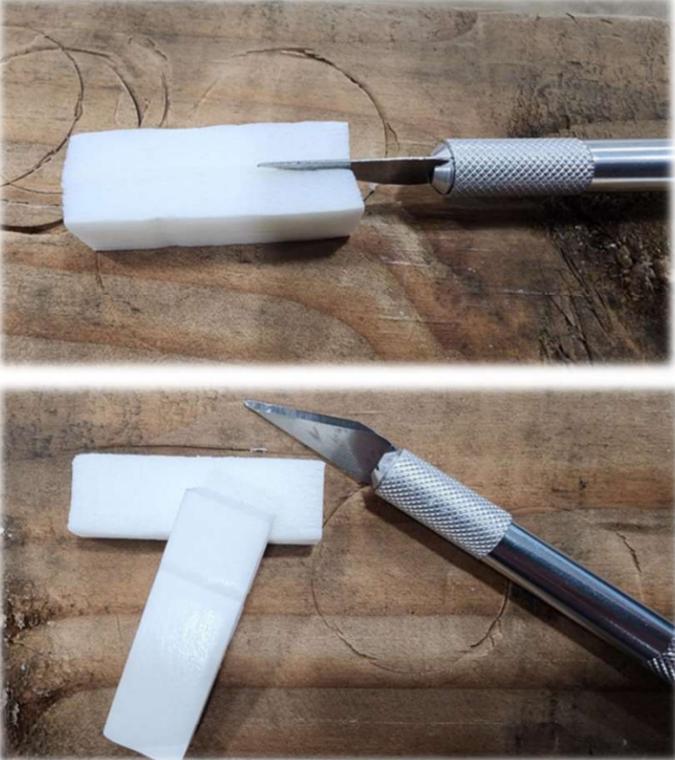

Installing SMPS Filter Board by "birdbox"

- 3D Printed the mount board
- Sanded lightly to tolerance fit in rail
- Put M3x12 bolts from bottom up, added nylon nuts on top
- Soldered wiring to SMPS board
- Installed board on M3 bolts with basic nuts.