

- * Press the PLAY button again.
 - * "04 t on" is displayed. Tracking, CLV, and slide servo will be actuated.
 - * Monitor RF signal using the Test Point, RF point and VC point.
- Check that the signal's amplitude is $1.5V \pm 0.3V_{p-p}$. (Refer to Fig. 6)

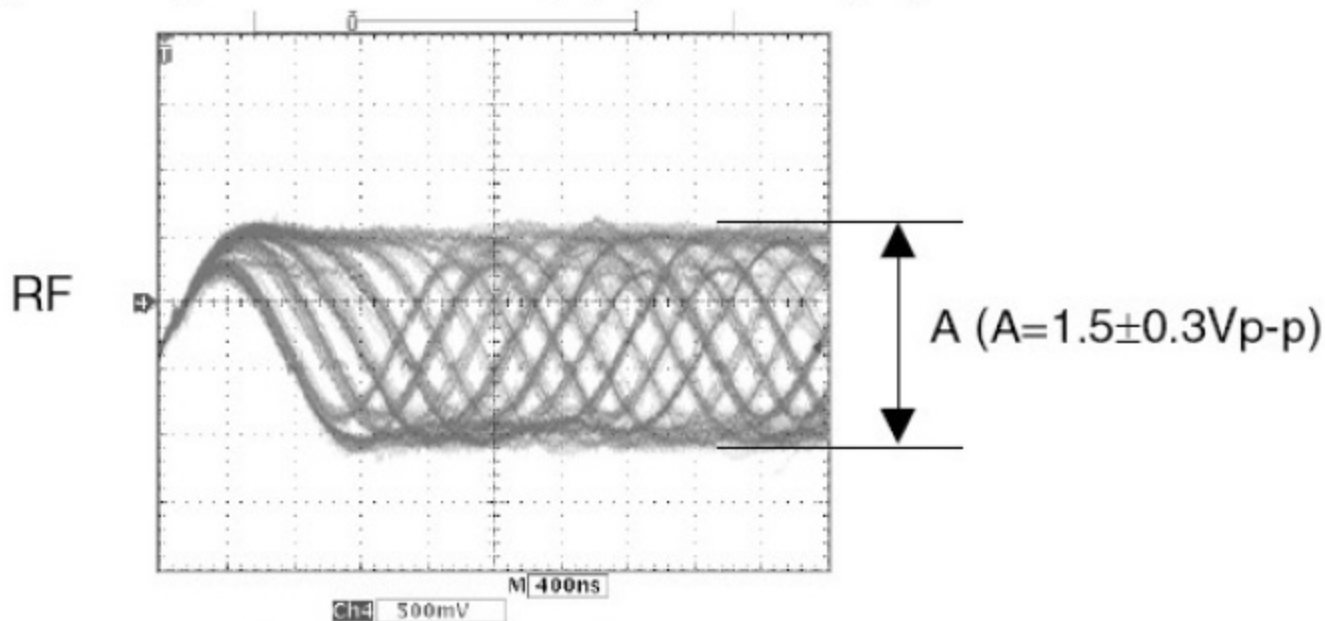


Fig. 6 In "04 t on"