


ML-Voigt for CSS EL70 ov8


designed by D Dlugos & S Lindgren
23-feb-11 | drawn by dld

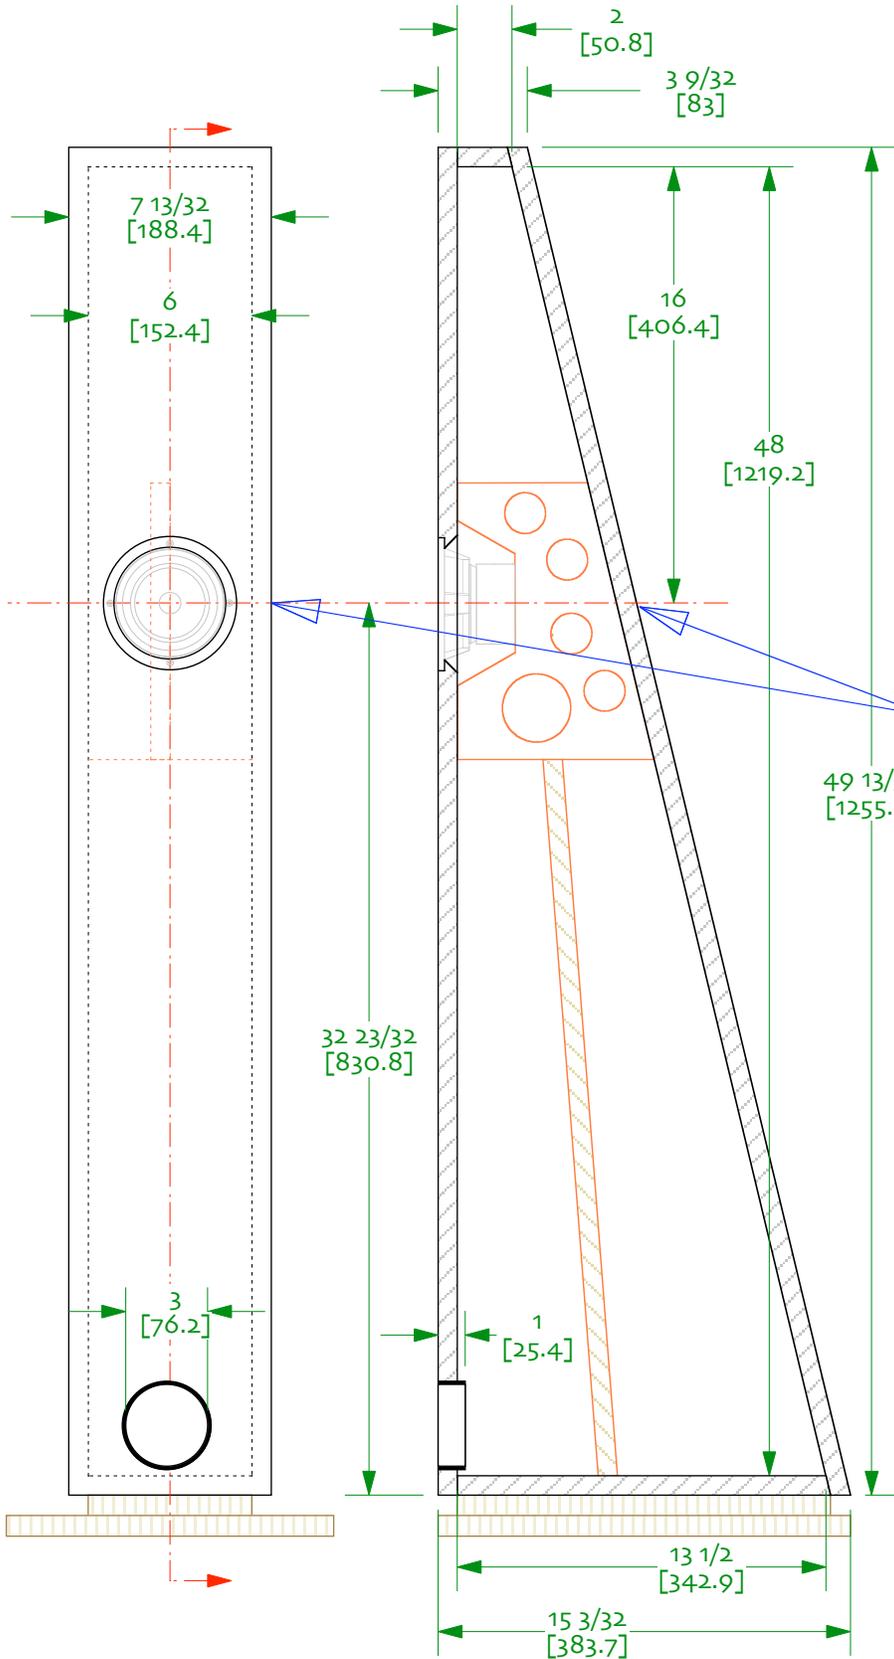

Notes:

- 1/ drawing made with 18 mm material. Baltic Birch or other high quality multi-ply recommended
- 2/ line internal panel behind driver to reduce reflections. Use other damping in the box to taste – additional damping best placed above driver.
- 3/ Driver brace should be snug with the speaker's magnet, but not so much as to stress the basket
- 4/ a round-over or chamfer on the vertical edges is recommended
- 5/ holes & details of the holey brace are suggestive only
- 6/ plinth recommended for stability

driver could be placed on any of the sides. If on faces with angled edges, make mirror imaged pairs

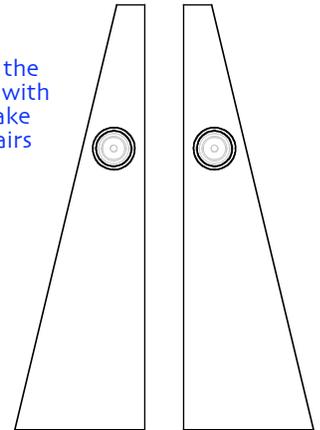

Alternate Line Restriction

