



Below is a close-up of one board. Red wire is positive speaker out. White cable is signal in (black and white twisted pair). The speaker ground (black wire) is just visible above the ground from the PS board (black with white heat-shrinkable tubing on end).

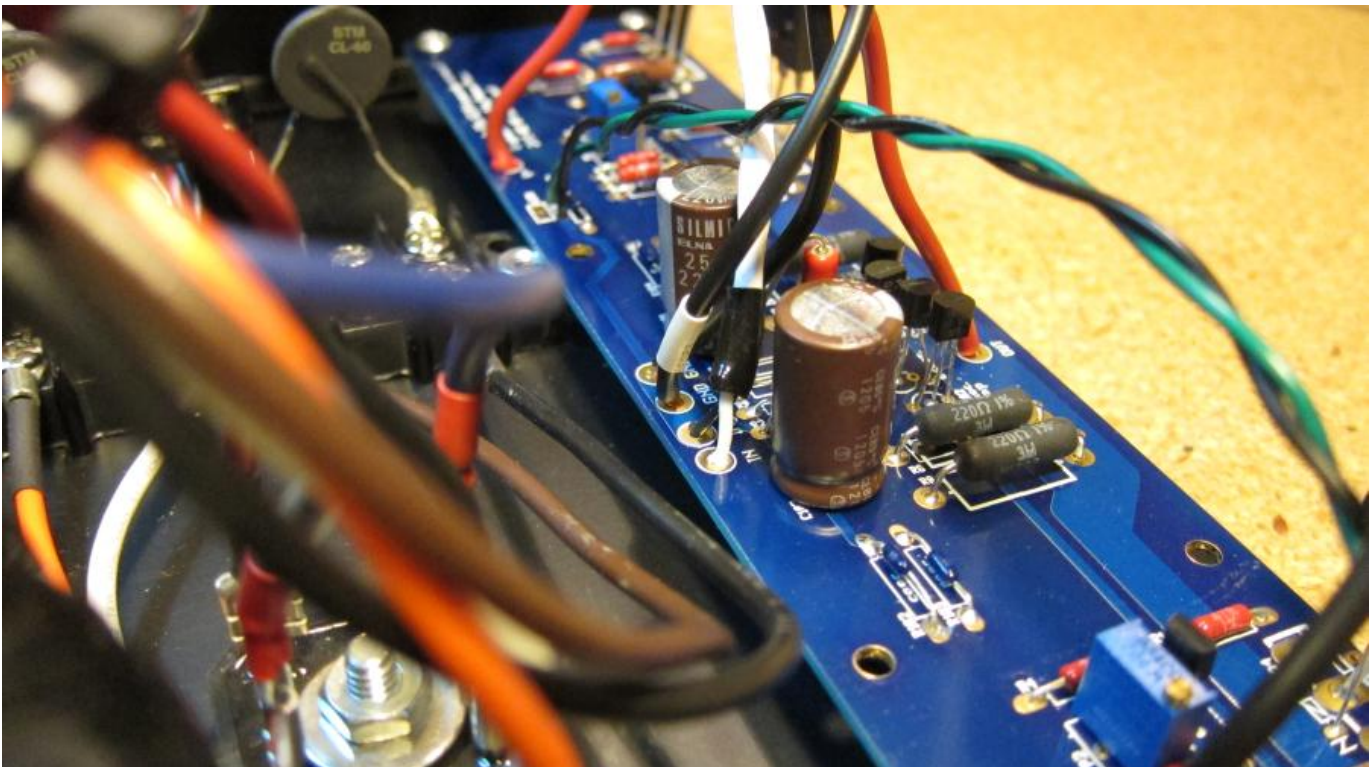


Another view below, but the speaker ground hole is still somewhat hidden.




And some more views:

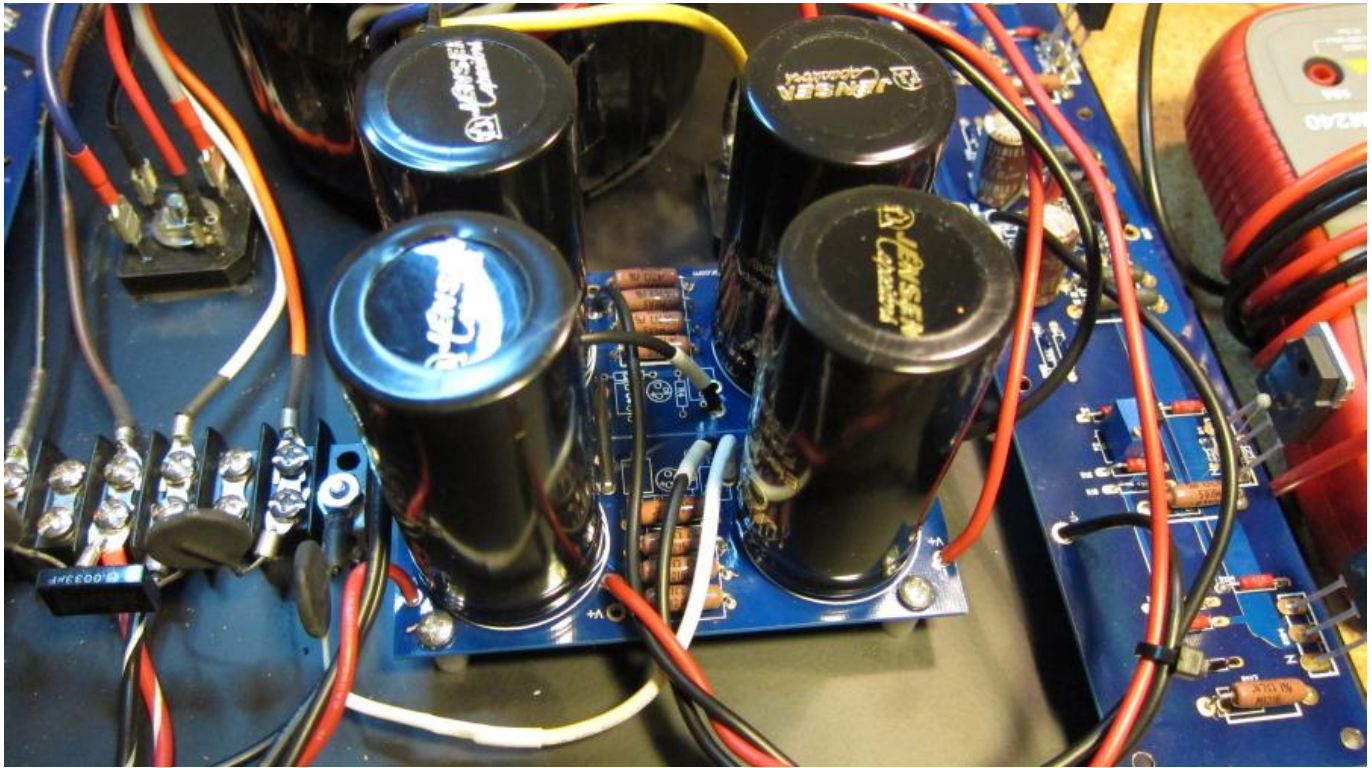

Below, we still need to get that last RCA jack for the remaining signal input mounted and attached to the other white twisted pair cable.

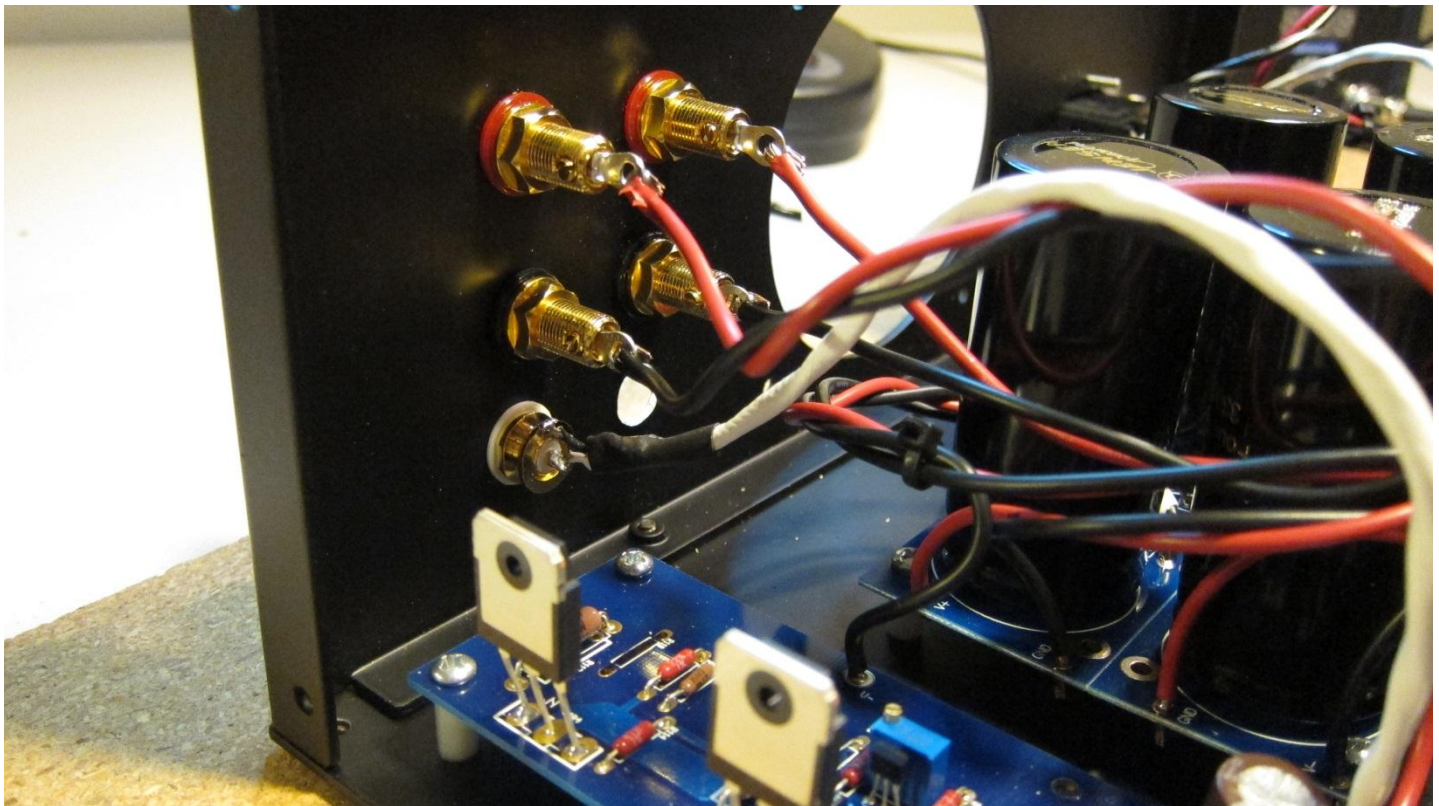

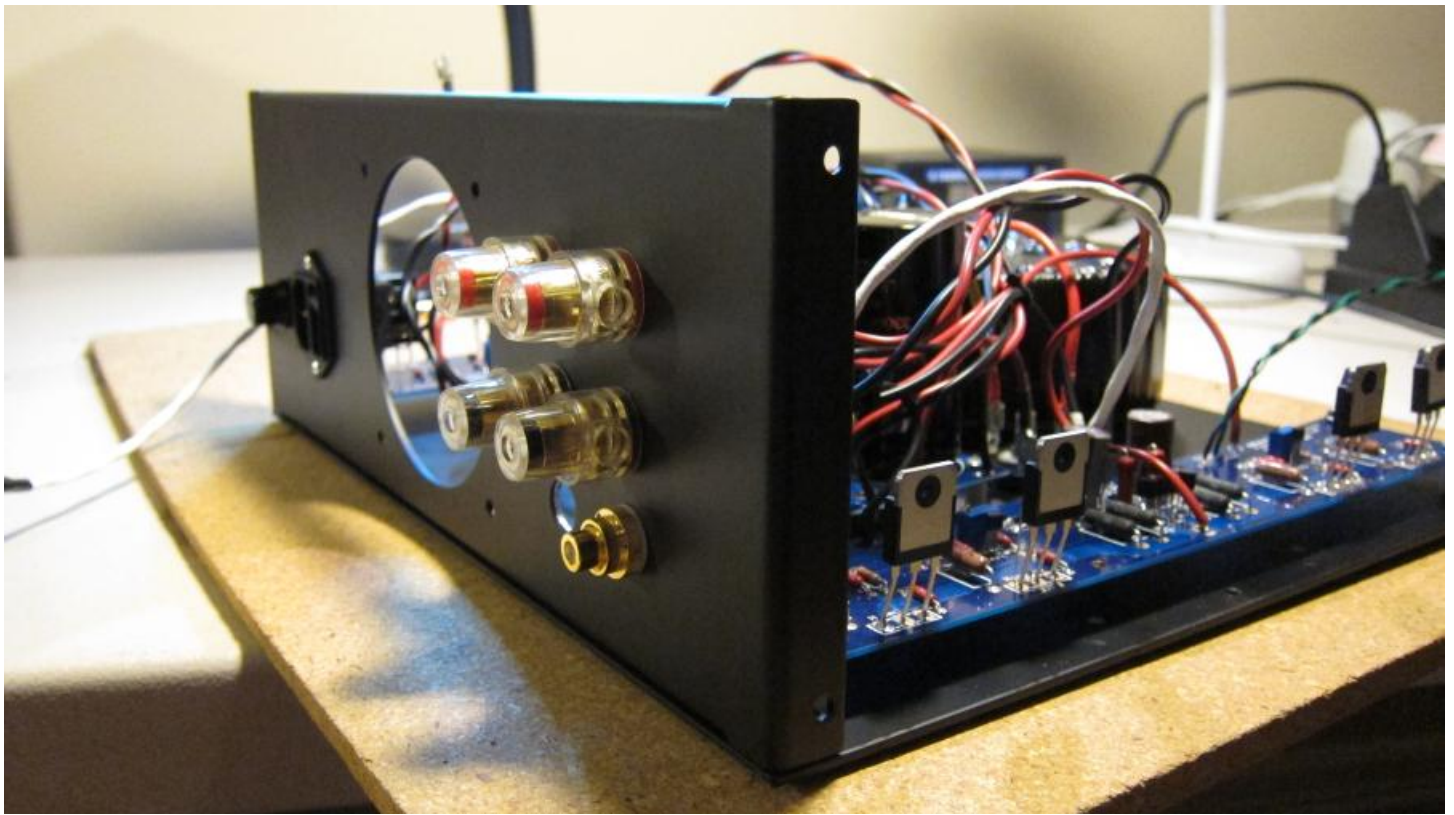

Finally, after the above photo, we installed the final RCA jack.

Continued in part 10.