



Please note: input load (C incl wire and R8) very critical by certainly values, because you get an oscillator between 1 MHz and 10 MHz. Then you think only, the sound isn't perfect. Check the output in all cases with oscilloskop to verification the absence of such parasitic oscillations !!!

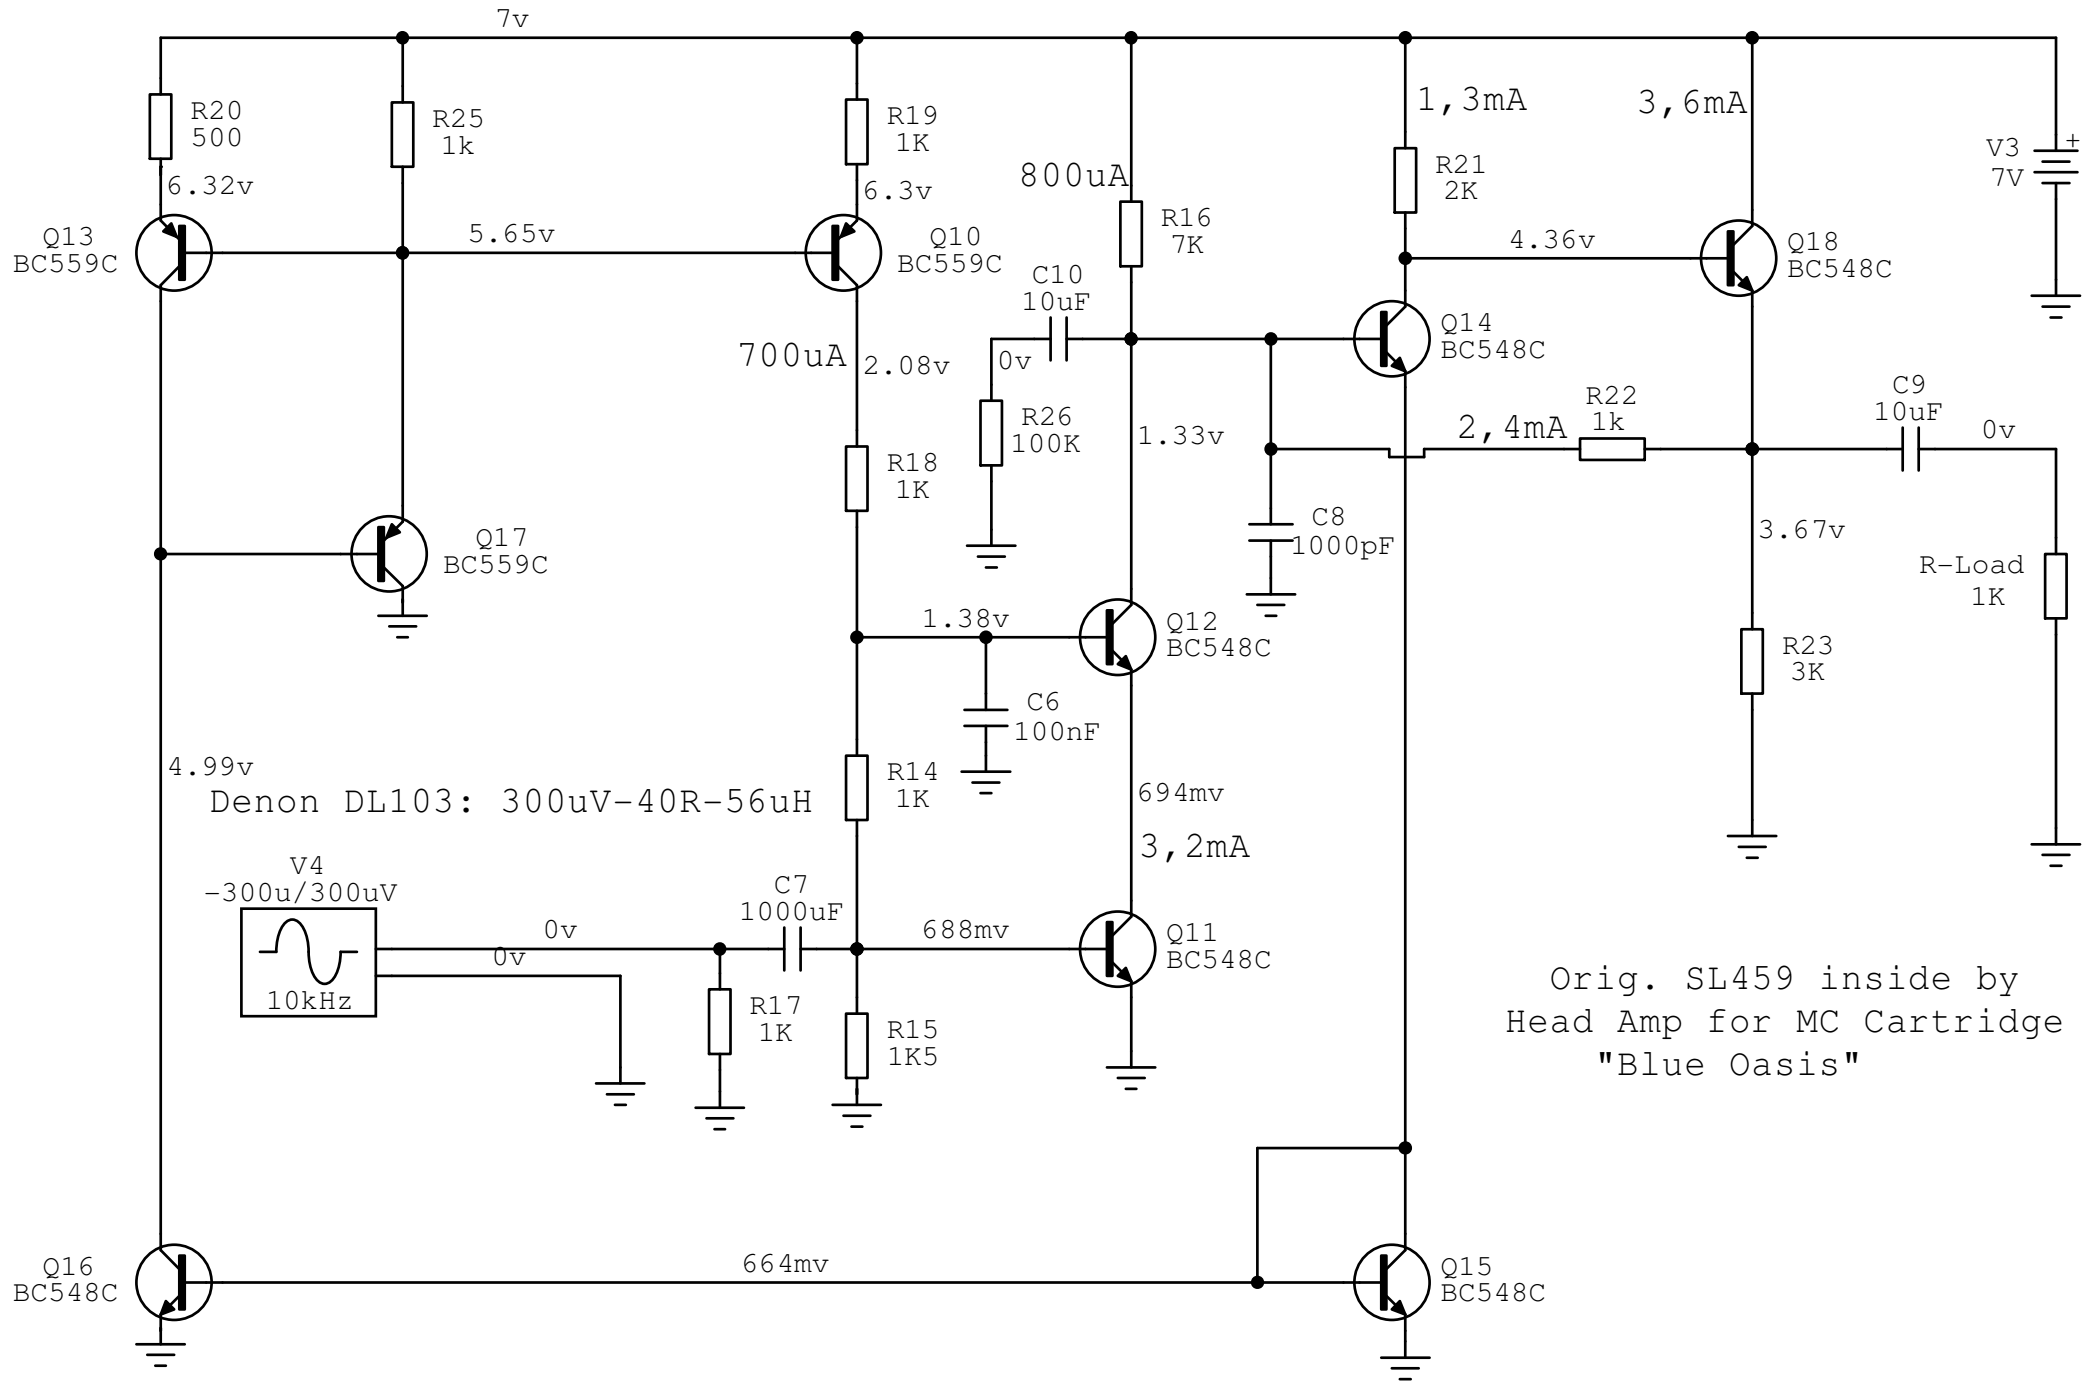


A: c3_2




A: c3_2

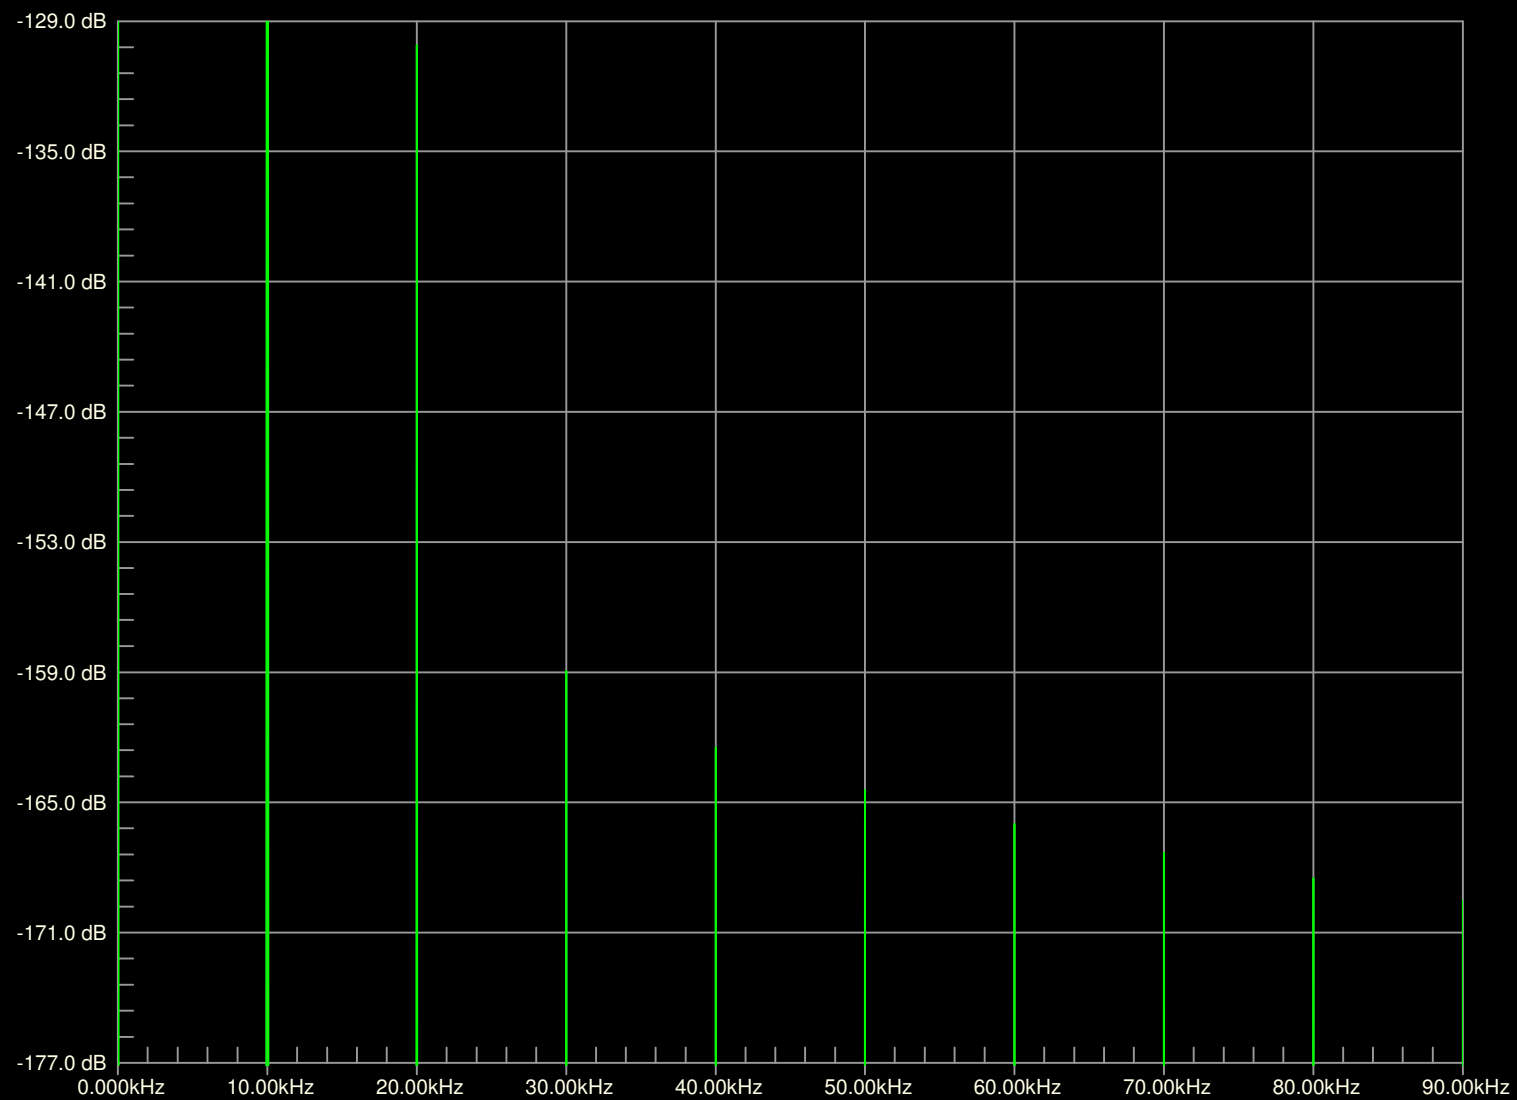

A: c3_2

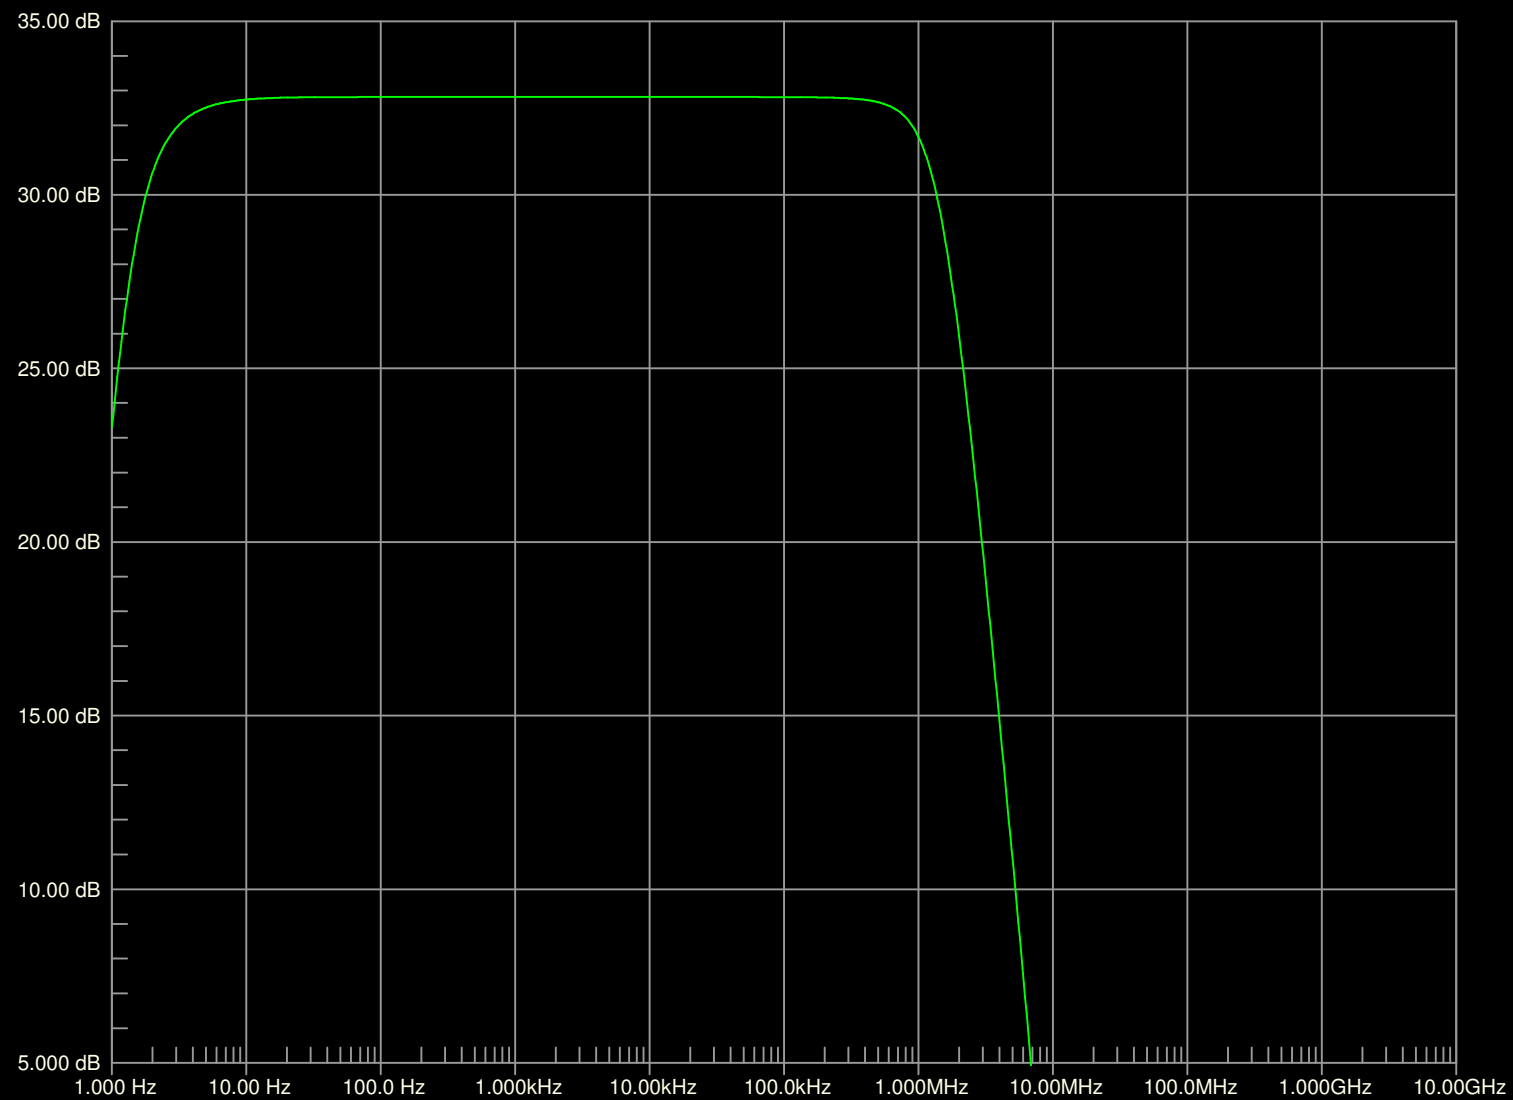

A: c3_2

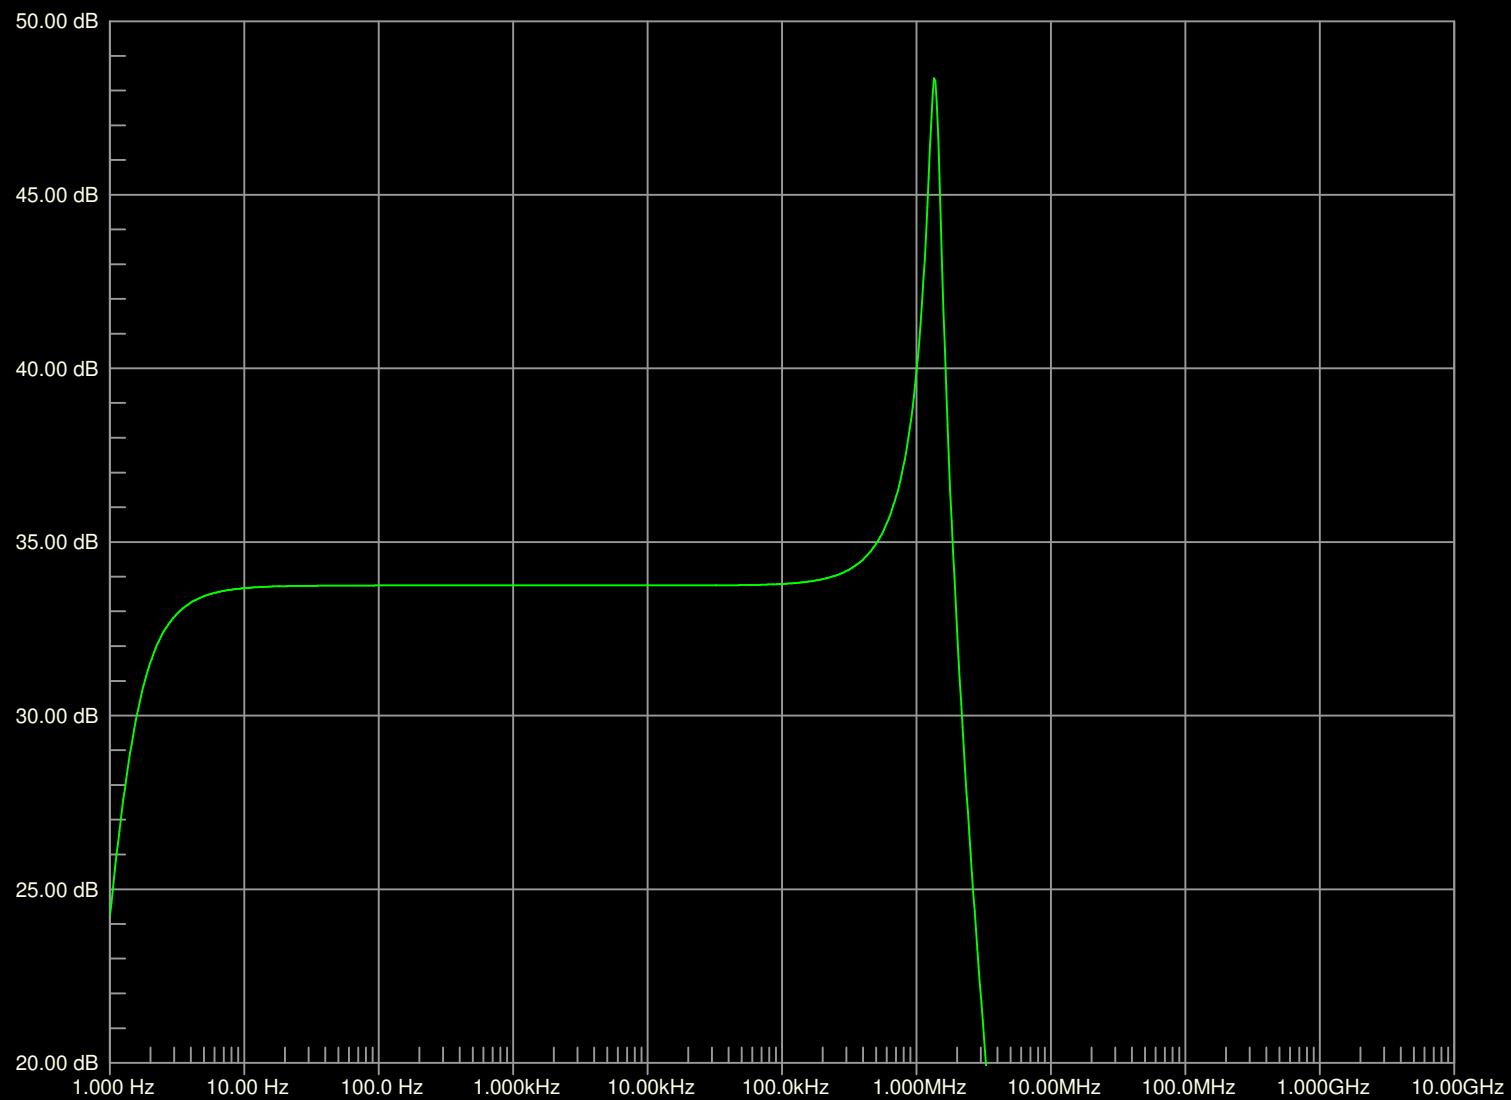

A: c3_2

