

Horizontal bracing
e.g.: in the back
of the front baffle,
and between the
vertical side board
stiffeners.

1.5"x1.5"x?"Typ.

Vertical bracing
e.g.: left and right
in the back of the
driver baffle board,
and ~in the middle
of the side boards,
and maybe a
stiffener in the
back corner.

Ap

Inside port opening

Perpendicular wall

ends here, and
forms one side of
the triangular
port section.
(round edge)


(side view)

(driver baffle view)

Spacer if needed
(mounting ring, or
rectangular plate)

Spacer if needed
(mounting ring, or
rectangular plate)

The box volume above the driver
is open except for the bracing.
Same for the volume behind the
driver, and below the driver, and
next to the port.

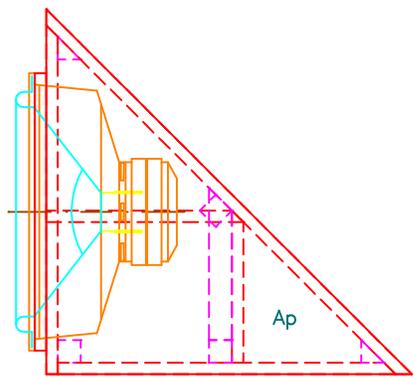

Ap

Bach On Triangular Corner Box
here: bracing suggestions, and
answers to questions
May 16, 2015, tb46