


Basic soft start circuit for torroidal transformers.

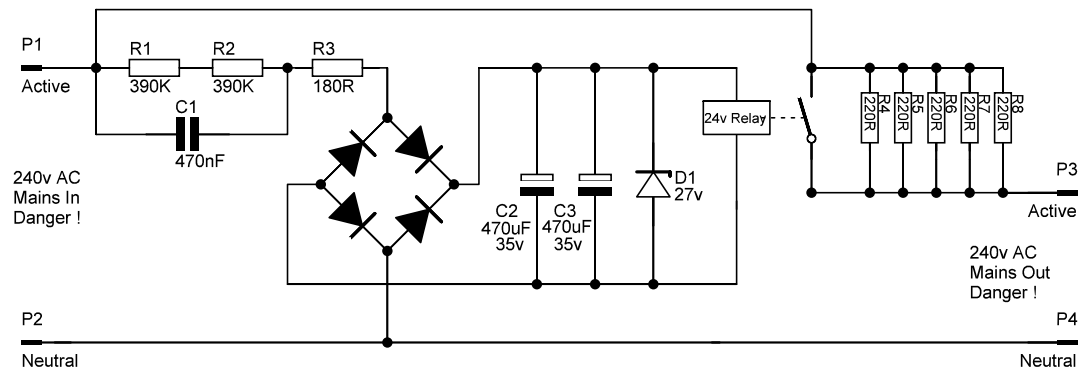

Notes:

R4 - R8 are 5 watt resistors. All others are 1/2 watt.

Bridge is minimum 400v PIV

C1 must be mains rated safety type.