


R6 marked  
"680" on purple  
boards, mounts  
underneath  
PCB

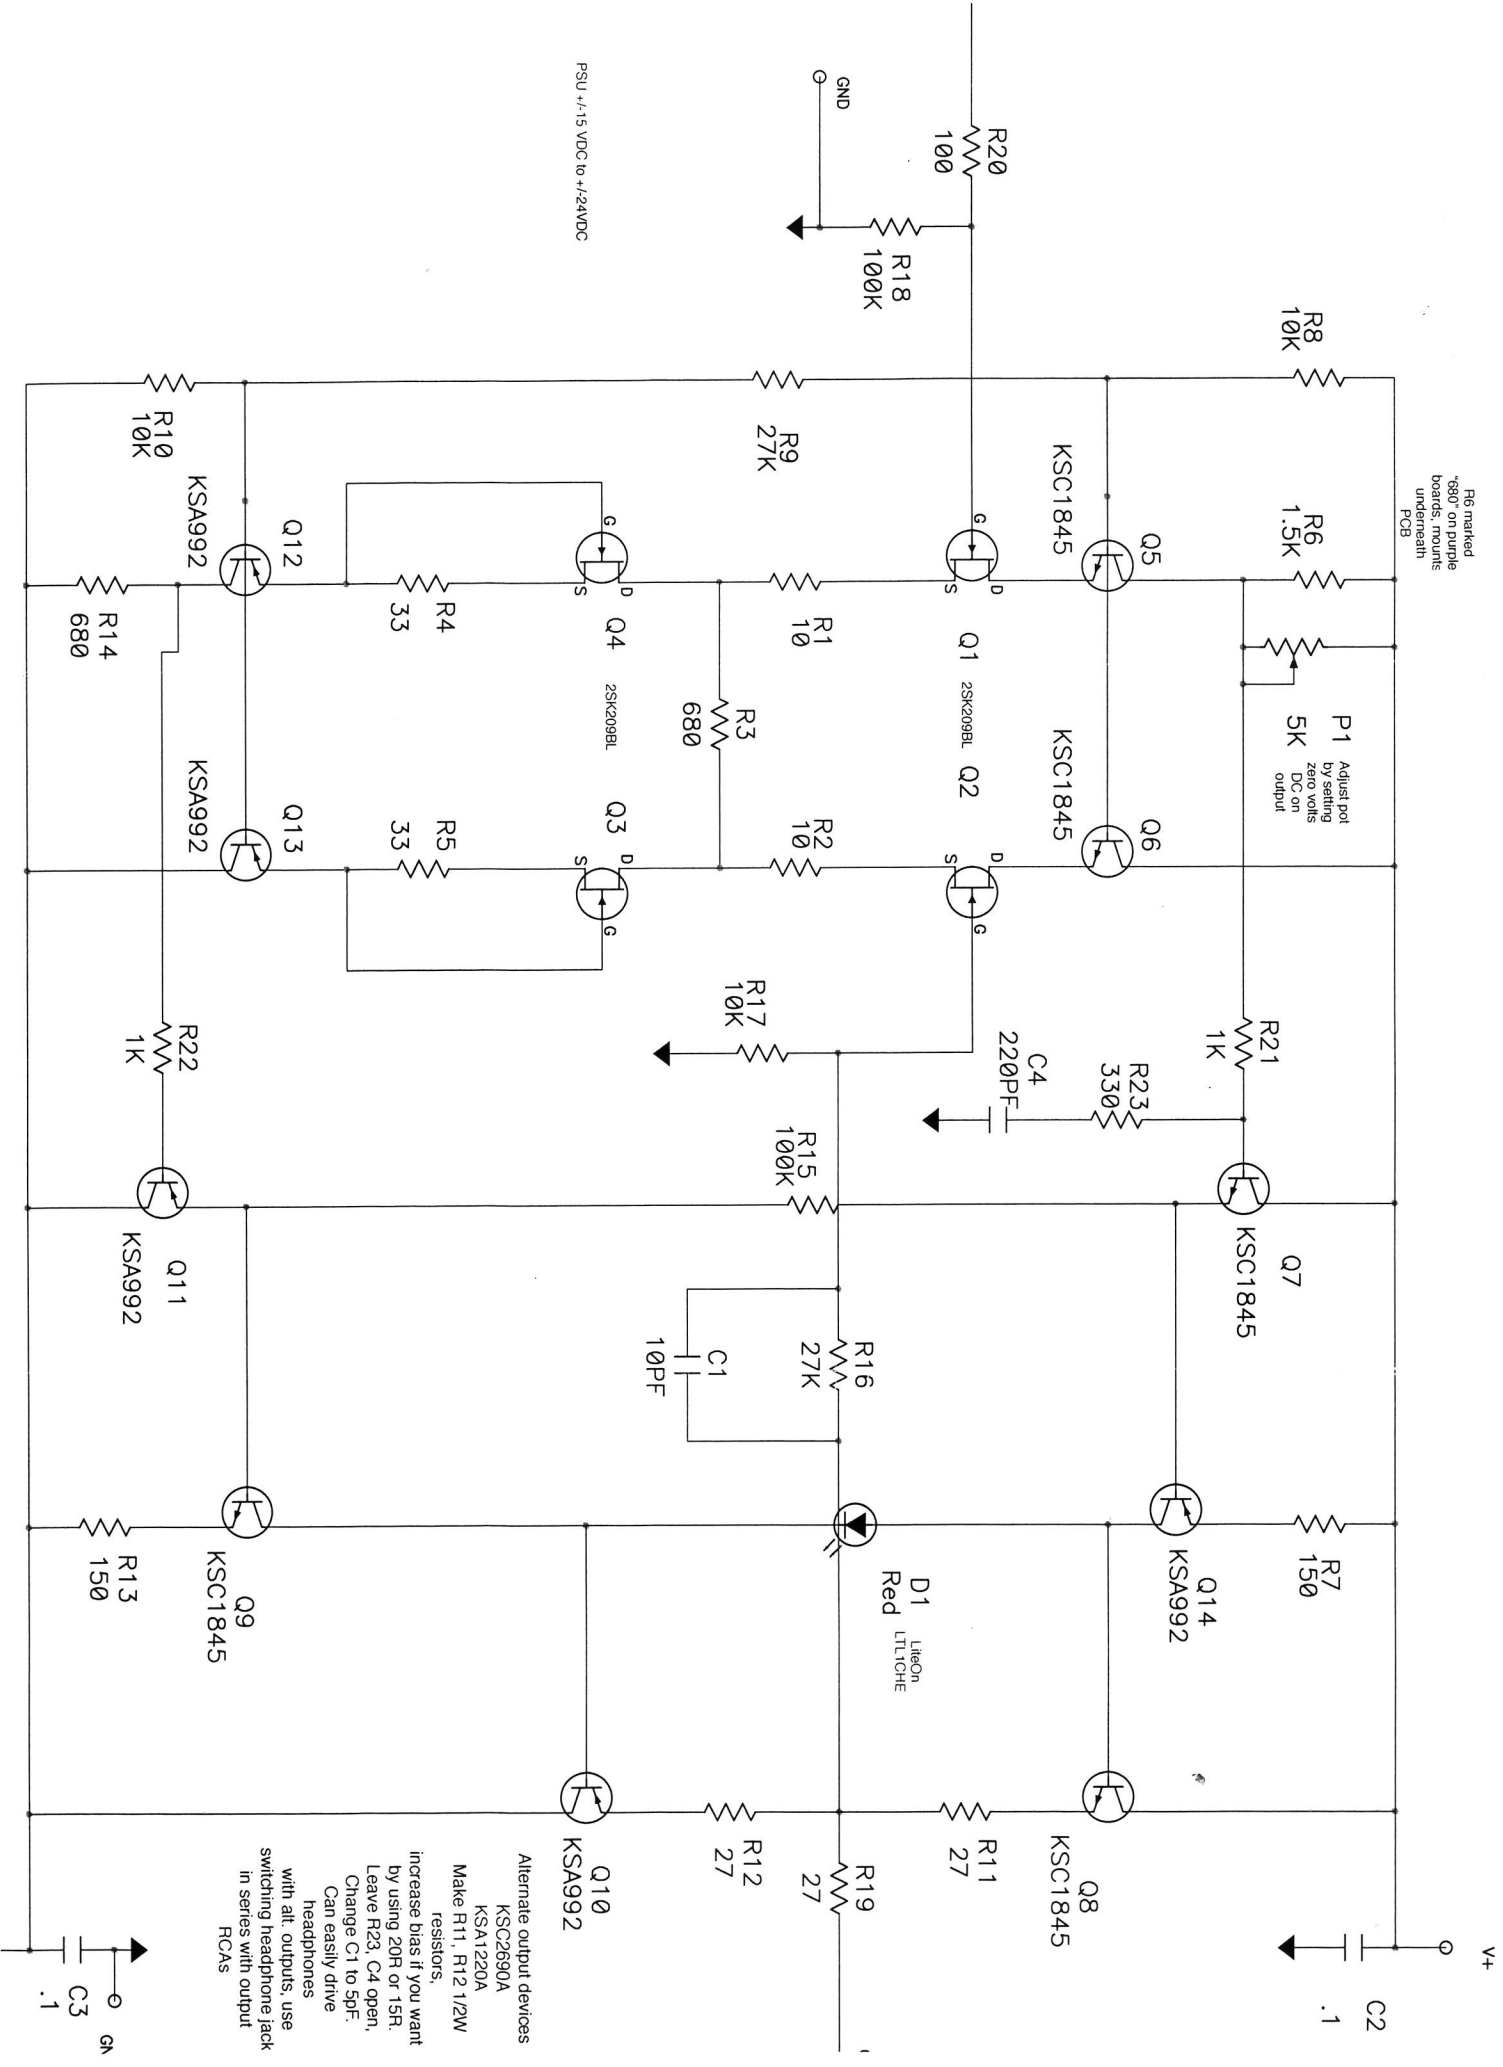

Alternate output devices  
KSC2690A  
KSA1220A  
Make R11, R12 1/2W  
resistors.  
increase bias if you want  
by using 20R or 15R.  
Leave R23, C4 open.  
Change C1 to 5pF.  
Can easily drive  
headphones  
with alt. outputs, use  
switching headphone jack  
in series with output  
RCAS