

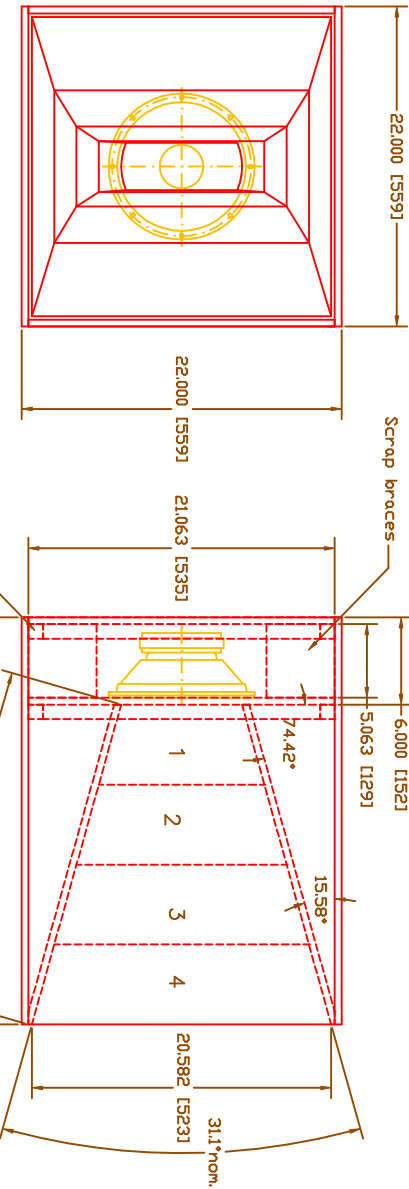
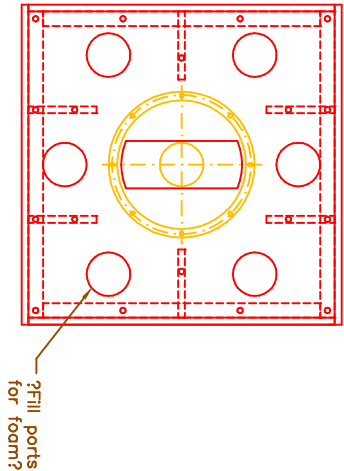
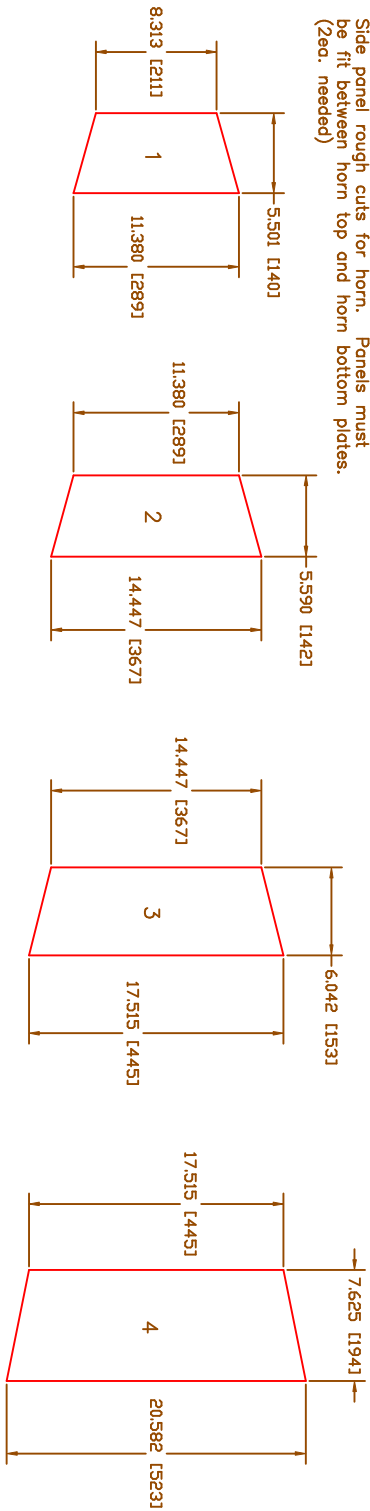
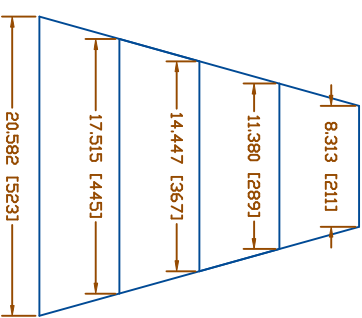
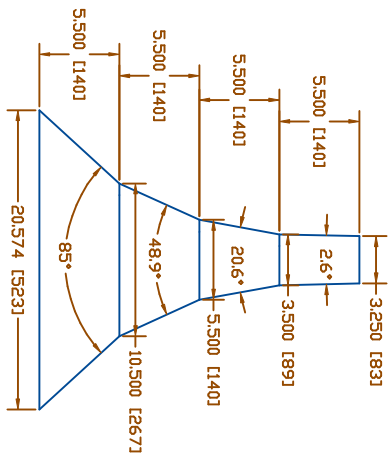


Side panel rough cuts for horn. Panels must be fit between horn top and horn bottom plates. (Zeo. needed)

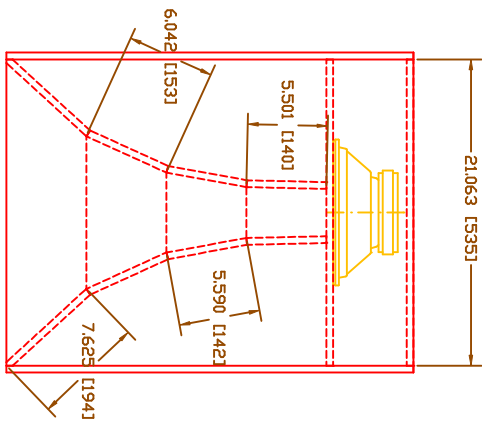

1"x1" corner braces for mounting baffle and back, typical scrap wood braces between baffle and back (glue to baffle and sides), and typical locations for screws to hold back panel.

(The space around the horn could be filled with expanding foam to reduce vibration, and stiffen the panels. Use fill ports if you decide to do this.)

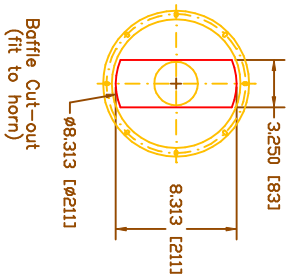

Material, BB Plywood (or eq.):  
15/32"nom. [12mm]