


On Phono Pre-amp Card:
Install jumper in place of R11
Change value of C2 to 0.047uF

Change R5 from 75.0K (REV 03) to 60.4K (REV04)
Intermediate values are acceptable if less boost desired

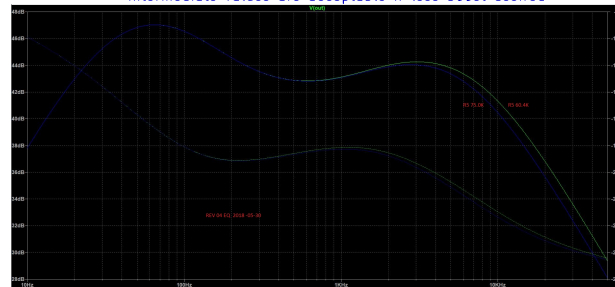

For use with KTA Strain Phono Pre-amplifier A2.1 only
Copyright KTA/Kevin Kennedy
For personal use only

KTA/Kevin Kennedy
Quincy Ma

Sheet: /
File: SG_Phono_EQ_Module1B.sch

Title: Improved SG_Phono EQ Network (For Rev. A2.1 ONLY)

Size: A4	Date: 2018-05-30	Rev: 04
KiCad E.D.A. kicad (5.0.0-rc2-dev-727-ga9dc41731)		Id: 1/1