
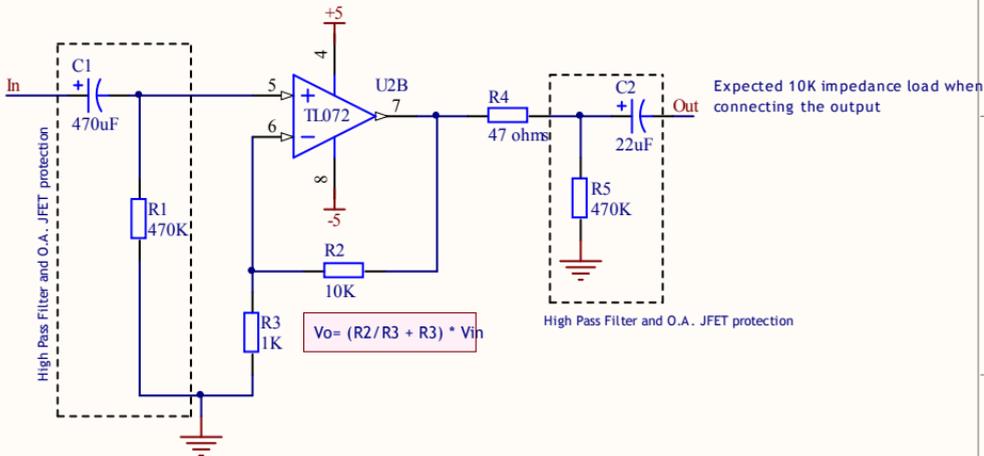


Near Operational Amplifier Power Pins

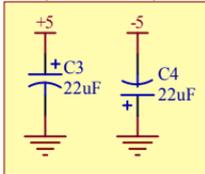

High Pass Filter and O.A. JFET protection

High Pass Filter and O.A. JFET protection

Expected 10K impedance load when connecting the output

$$V_o = \left(\frac{R_2}{R_3} + R_3 \right) \cdot V_{in}$$