


First, power up without JP6 & JP7 and adjust the +15V with P5. Then adjust the symmetry with P6 to match the -15V to the +15V. Supply voltages are available on JP6 & JP7 when jumpers are off. Don't short JP6 or JP7 while measuring voltages. Ground is readily available everywhere on the board with ground planes. Before putting JP6 & JP7 on, make sure to power off and wait a short while to discharge the caps, put JP6 & JP7 on then power up if the +-15V supplies are properly set. Don't let uneven voltages go in the circuit.

U+ disconnect for presetting

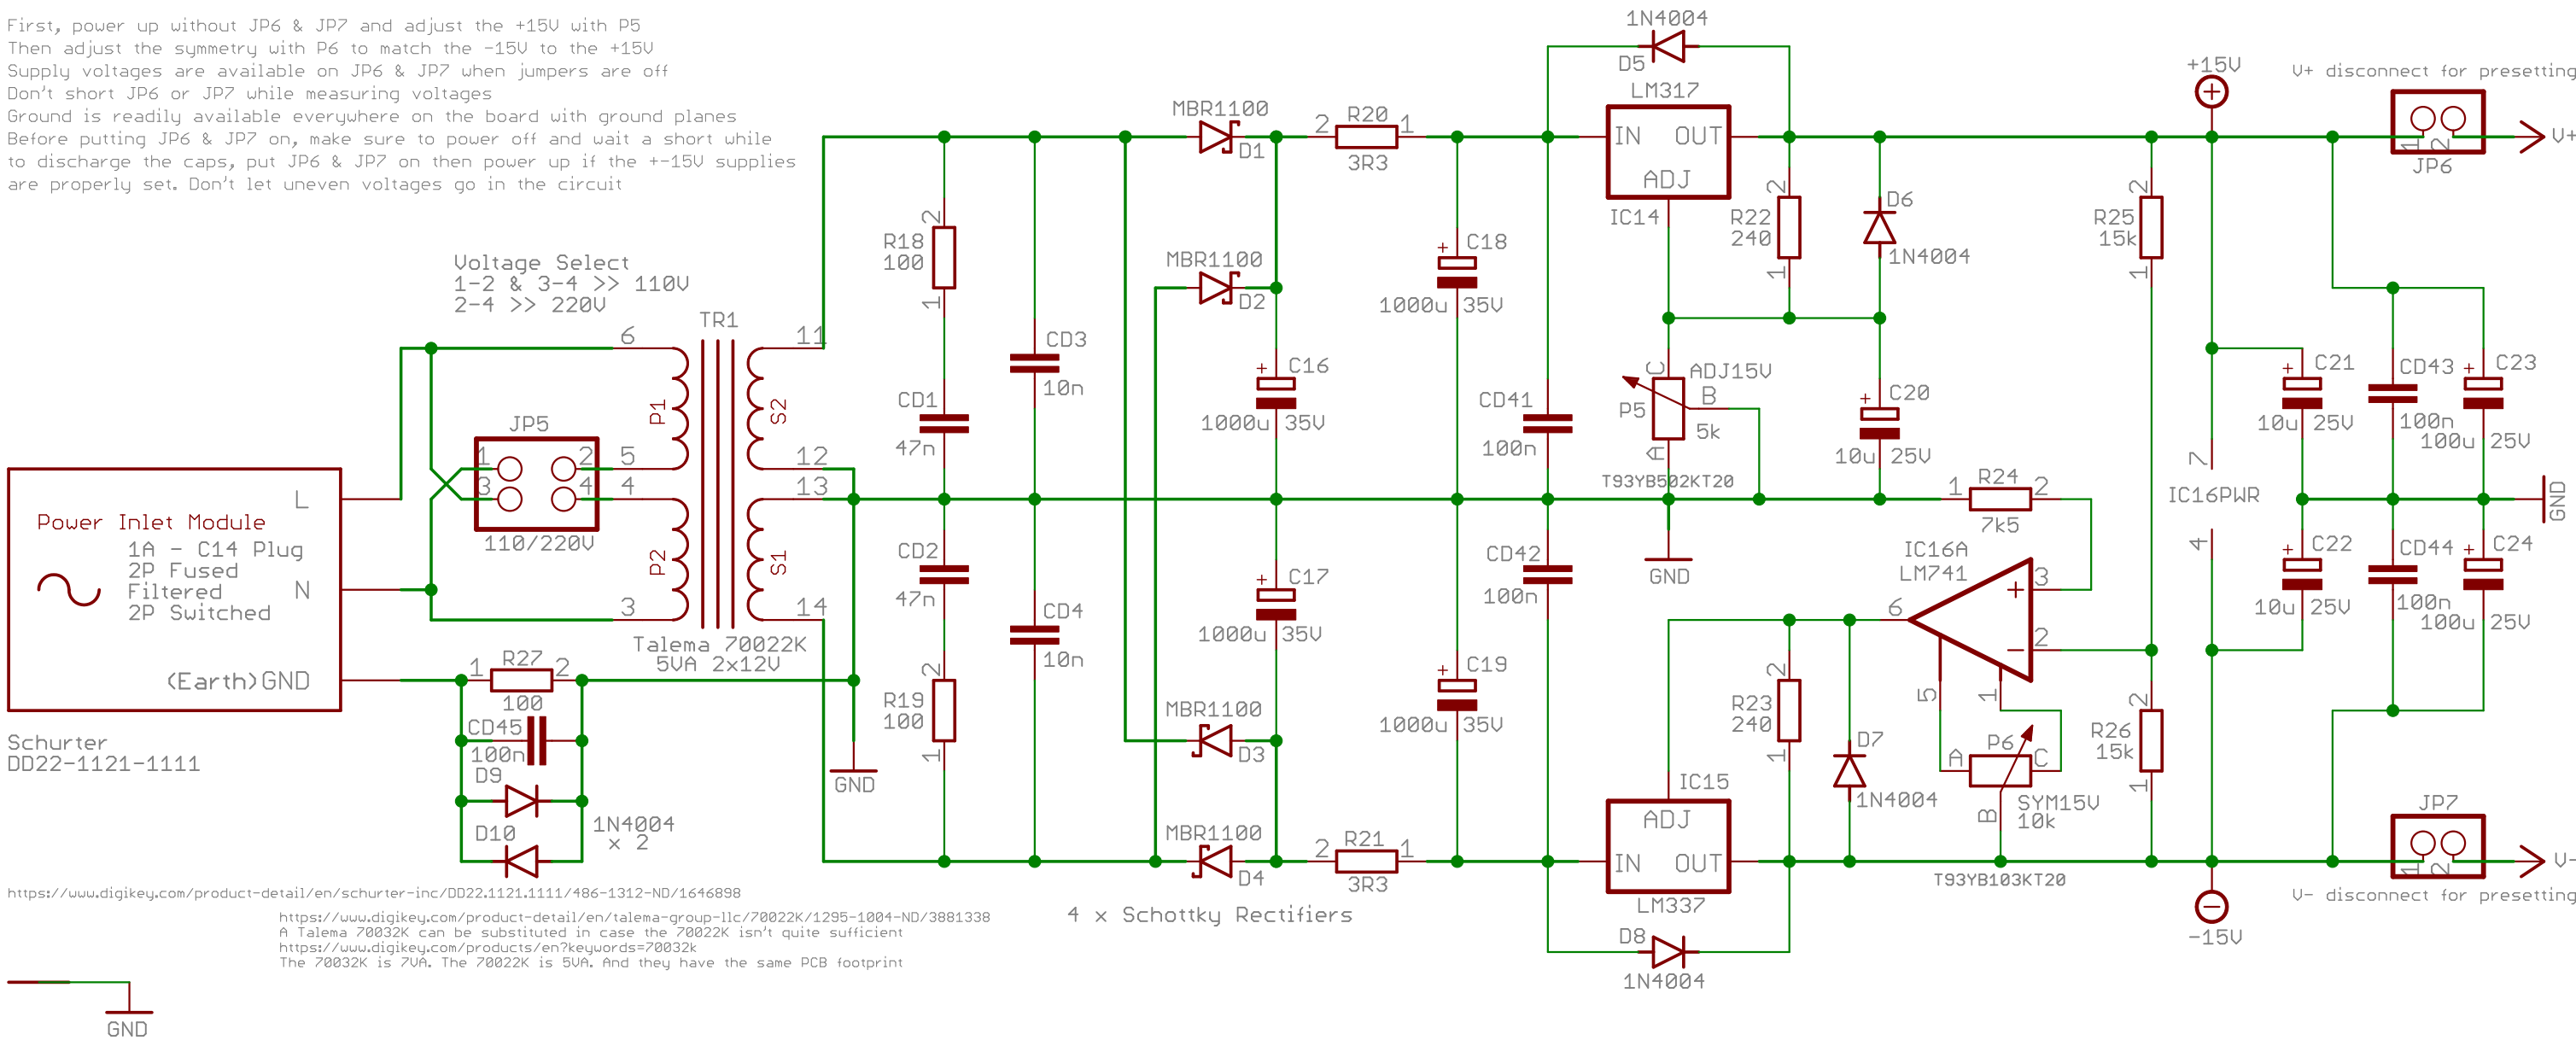

Optional Shield
Copper sheet 0.5mm or 0.75mm x 103x25mm with 3 x 5mm tabs

