


■ SCHEMATIC DIAGRAM (TUNER & OPERATION)

①, ④ and ⑤: TEST POINT WAVEFORMS (See page 24)

Each voltage given here represents that in the FM (98.1MHz, STEREO) reception mode but the one in the parentheses () is that in the AM (1080kHz, MAN'L) reception mode.

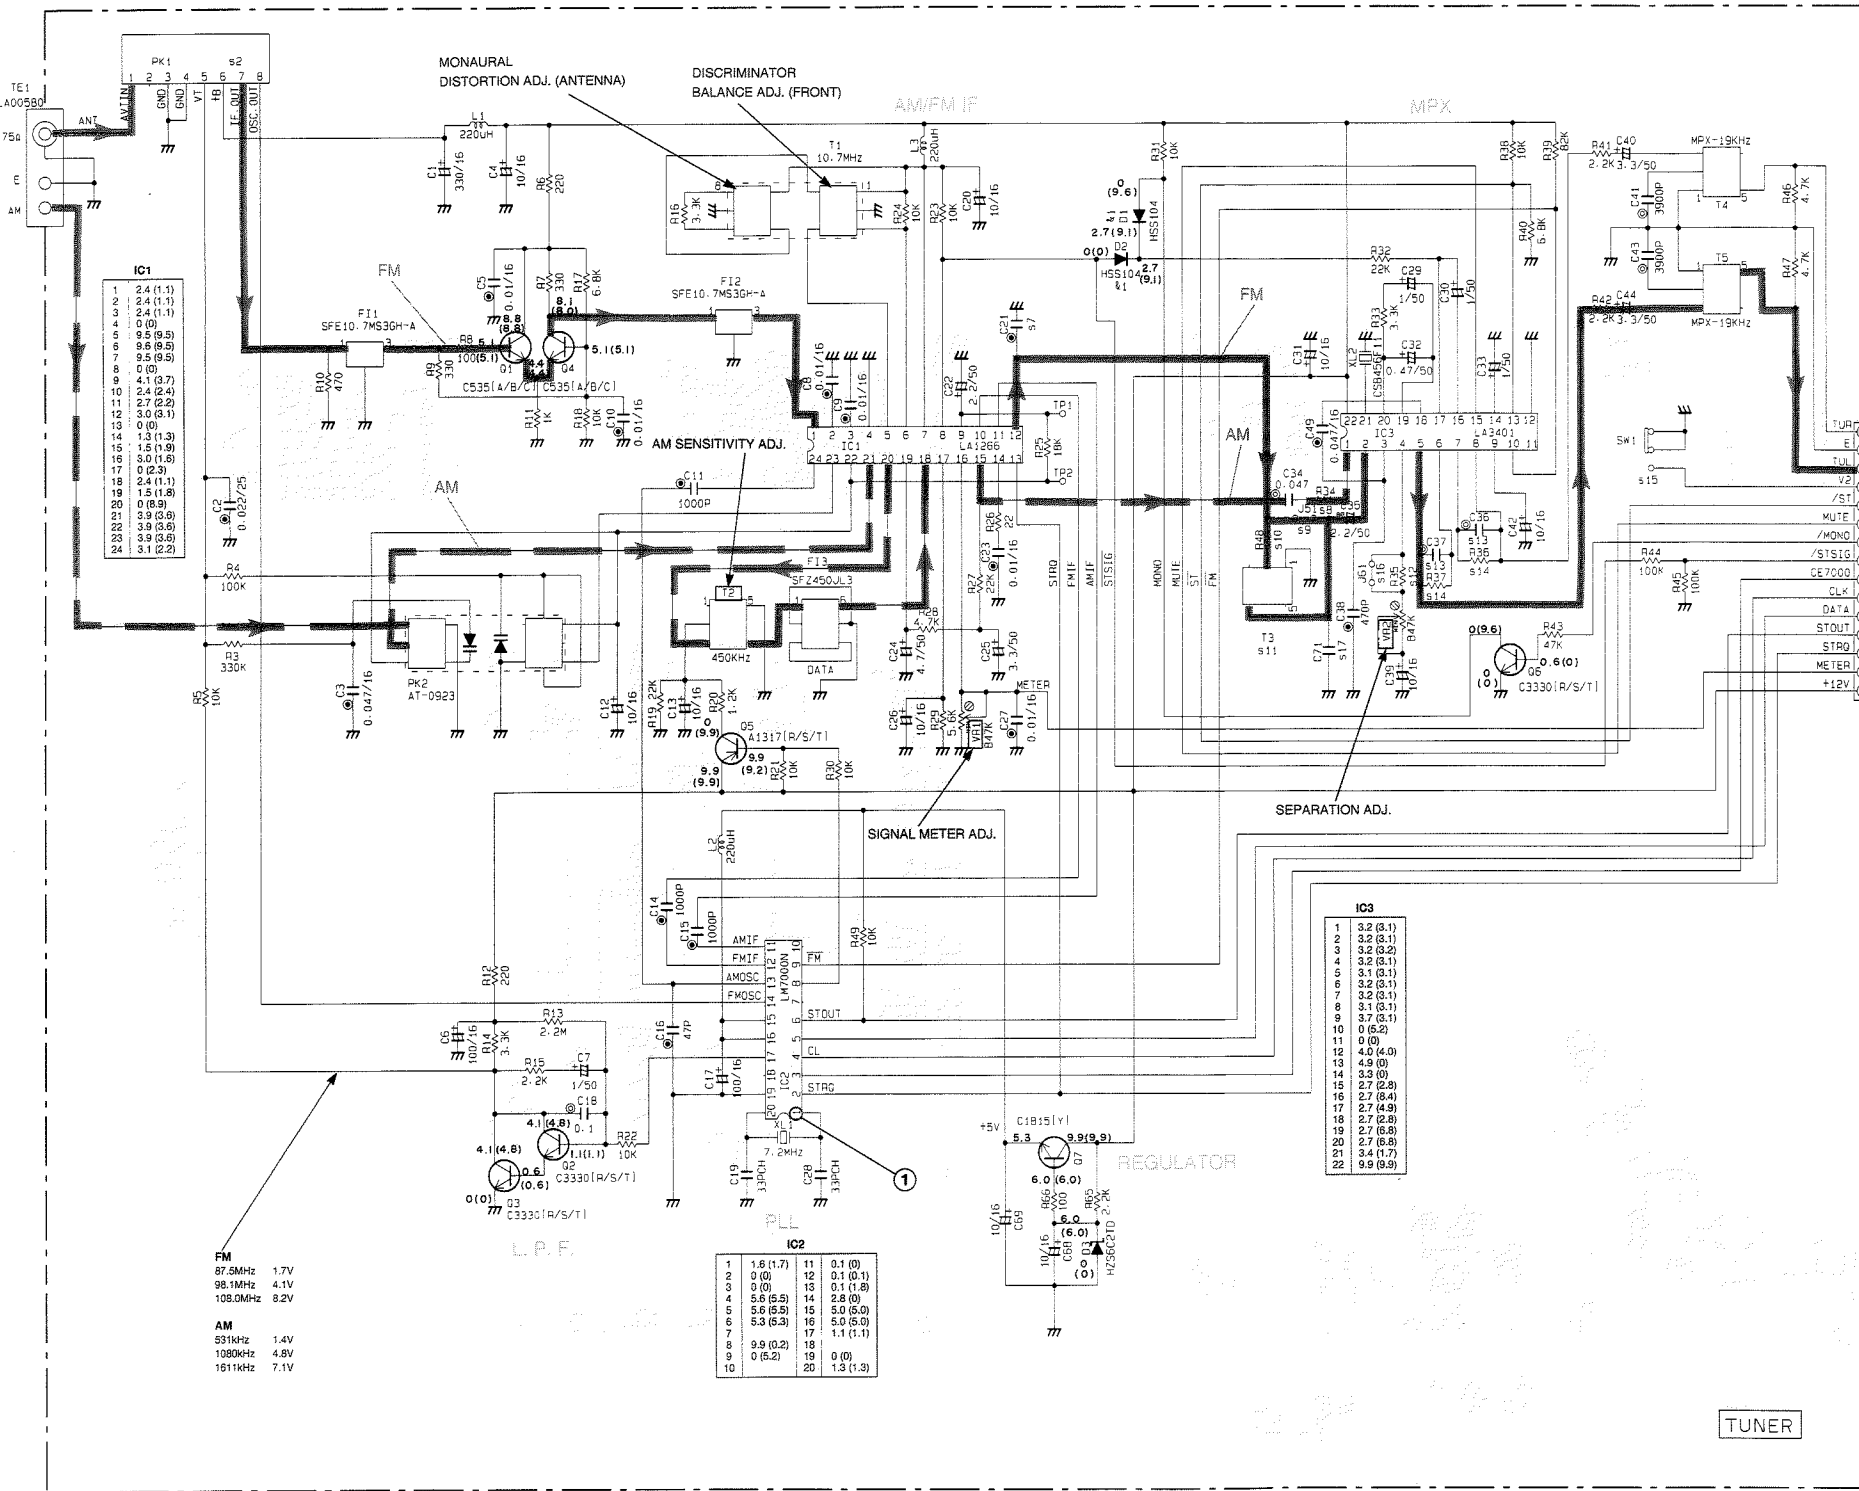

	U-C	R	A-B	S
1	VR2420	VR2420	VR2420	VR2420
2				
3				
4				
5				
6				
7	C21	100P	100P	X
8	R34	10K	10K	27K
9	J51			X
10	R48	X	X	4.7K
11	T3	X	X	VR25970
12	R35	22K	22K	X
13	C36-37	400P	470P	300P
14	R36-37	100K	100K	100K
15	Sx1	X	VF54120	X
16	J51	X	X	X
17	C71	X	X	100P

Mark	Reference Parts Number	Parts Name
41	21.2	HS104
		155133
		155176

● Except G model
PK1 : ENV-17298GI (VR242200)

