

LAG-120B
AUDIO GENERATOR
SERVICE MANUAL

NOTE

These servicing instructions are for use by qualified personnel only. To avoid electrical shock, do not perform any servicing other than that contained in the service manual unless you are qualified.

CONTENTS

1. SPECIFICATIONS	Page 2
2. TEST EQUIPMENT REQUIRED	3
3. CALIBRATION PROCEDURE	4
3.1 General	4
3.2 Initial Control Settings	4
3.3 Power Supply	4
3.4 Offset Adjustment	5
(1) Oscillator	5
(2) Buffer Amplifier	5
3.5 Frequency Adjustment	5
(1) 1kHz Adjustment	5
(2) 10Hz Adjustment	5
(3) 10kHz Adjustment	5
(4) 1MHz Adjustment	6
3.6 Square Wave Adjustment	6
4. TROUBLESHOOTING PROCEDURE	6
4.1 Troubleshooting Aid-1	6
4.2 Troubleshooting Aid-2	7
5. ADJUSTMENT LOCATIONS	8
6. PRINTED CIRCUIT BOARD	9
7. BLOCK DIAGRAM	10
8. SCHEMATIC DIAGRAM	11
9. PARTS LIST	12
10. CABINET REMOVAL	14

1. SPECIFICATIONS

Frequency Range	10Hz to 1MHz in five decade bands.
Frequency Accuracy	Dial calibration within $\pm(3\% + 1\text{Hz})$.
Output Flatness	$\pm 0.5\text{dB}$ across 600Ω .
Output Waveforms	
Sine Wave	Output: Over 3V_{rms} into 600Ω . Distortion: 0.05% : 500Hz – 20kHz. 0.4% : 50Hz – 200kHz. 0.8% : 20Hz – 500kHz. 1.5% : 10Hz – 1MHz.
Square Wave	Output: Over $3\text{V}_{\text{p-p}}$ into 600Ω . Rise Time: 200ns. Sag: 5% Overshoot: 2% at maximum output.
Output Impedance	$600\Omega \pm 10\%$.
Output Attenuator	6 step-attenuation and continuously adjustable.
Sync Signal Terminal	Input Impedance: Approx. $10\text{k}\Omega$. Control Range: $\pm 1\%/V$
Power Supply	50/60Hz 100V $\pm 10\%$ (Can be set at 120, 220 and 240V by changing the transformer taps) ; approx 6.5 VA
Size and Weight	170(H) x 132(W) x 305(D) mm; (Approx. 6-3/4" x 5-1/4" x 12") approx. 3 kg (6.5 lbs.)
Accessory	LT-2044 (600Ω terminator)

2. TEST EQUIPMENT REQUIRED

The following test equipment is required for calibration and servicing of the Model LAG-120B. The suggested specifications are the minimum necessary for proper calibration of this instrument.

<u>Test Equipment</u>	<u>Minimum Spec</u>
- Multimeter	0 - 50V Accuracy < 1%
- Oscilloscope	10mV sensitivity 10MHz bandwidth Low capacitance probe
- Frequency Counter	20mV sensitivity 1 MHz bandwidth Accuracy < 0.1%

3. CALIBRATION PROCEDURE

3.1 General

- (1) Calibration should be performed after a 30 minute warm-up period. It should also be confirmed that the unit is connected to the rated power line voltage.
- (2) All adjustment should be completed in the given order, because some adjustments interact with others.
- (3) During the adjustment procedure, remove the case only when necessary and replace immediately after making an adjustment. This will maintain all circuit at constant operating temperature.

3.2 Initial Control Settings

The initial control settings to be used for each check and adjustment are listed below. Any variations from these settings are stated in the applicable procedure.

Frequency Dial	1
FREQ RANGE	x1k
OUTPUT	
ATTENUATION dB	0
VARIABLE	Fully clockwise
Waveform	Sine wave

3.3 Power Supply

- (1) Connect the DC voltmeter between test point and chassis.
- (2) Check the voltage according to Table 3-1.

Test point	Voltage	Tolerance
TP3	+24V	+23V to +25V
TP4	-24v	-23V to -25V

Table 3-1

(1) Oscillator

- ## (2) Buffer Amplifier

- ### 3.5 Frequency Adjustment

- Connect the frequency counter to OUTPUT terminal.

- The frequency counter reading should be 1000Hz within 3%(between 970 and 1030Hz). If considerably off, then set the dial so that the counter reads 1000Hz. Loosen the set screw on the dial knob and position the dial at "1" against the index.

-Set: Frequency Dial 1
FREQ RANGE x10

- (3) 10kHz Adjustment

- Adjust VC1 for a frequency reading of 10.0kHz.

(4) 1MHz Adjustment

- Set: Frequency Dial 10
 FREQ RANGE x100k
- adjust VC2 for a frequency reading of 1.00MHz.

3.6 Square Wave Adjustment

(1) Symmetry Adjustment

- Set: Frequency Dial 1
 FREQ RANGE x1k
 Waveform Square wave
 VARIABLE Fully clockwise

- Connect the oscilloscope to OUTPUT terminal.
- Adjust VR4 for a symmetrical square wave.

4. TROUBLESHOOTING PROCEDURE


4.1 Troubleshooting aid-1

- (1) Confirm that the any equipment used with the LAG-120B is operating correctly.
- (2) Check all control settings, because an incorrect setting can make a good unit appear defective. If there is any question about the function, see the INSTRUCTION MANUAL for a correct operation.
- (3) Check all circuit for visual defects such as broken component, loose connection, open wire, poor soldering etc.
- (4) Some trouble can be solved with proper adjustment.
- (5) Check voltage and waveform as shown in the "8. SCHEMATIC DIAGRAM" to locate the defective circuit. Start with the power supply.
Typical voltage and waveform are obtained under the same conditions as "3.2 Initial Control Settings".


4.2 Troubleshooting Aid-2

Symptom	Probable cause
No sine wave output	<p>Check voltage of Power Supply. TP3: +24V TP4: -24V If the voltages are improper, check F1, T1, Regulator and associated circuit.</p> <p>TP1 voltage cannot be adjusted to 0V. Check DC levels of Oscillator Circuit.</p> <p>No sine wave present at TP1. Check Oscillator circuit.</p> <p>If no sine wave present on emitter of Q9, check S1 and Buffer amplifier If sine wave present on emitter of Q9, check Attenuator</p>
Distorted square wave comes out even Waveform switch at Sine Wave.	Check TH1 for open.
No square wave output	Check waveform at pin 4 of P1 for square wave. If not, check S1 and Square wave generator.


5. ADJUSTMENT LOCATIONS

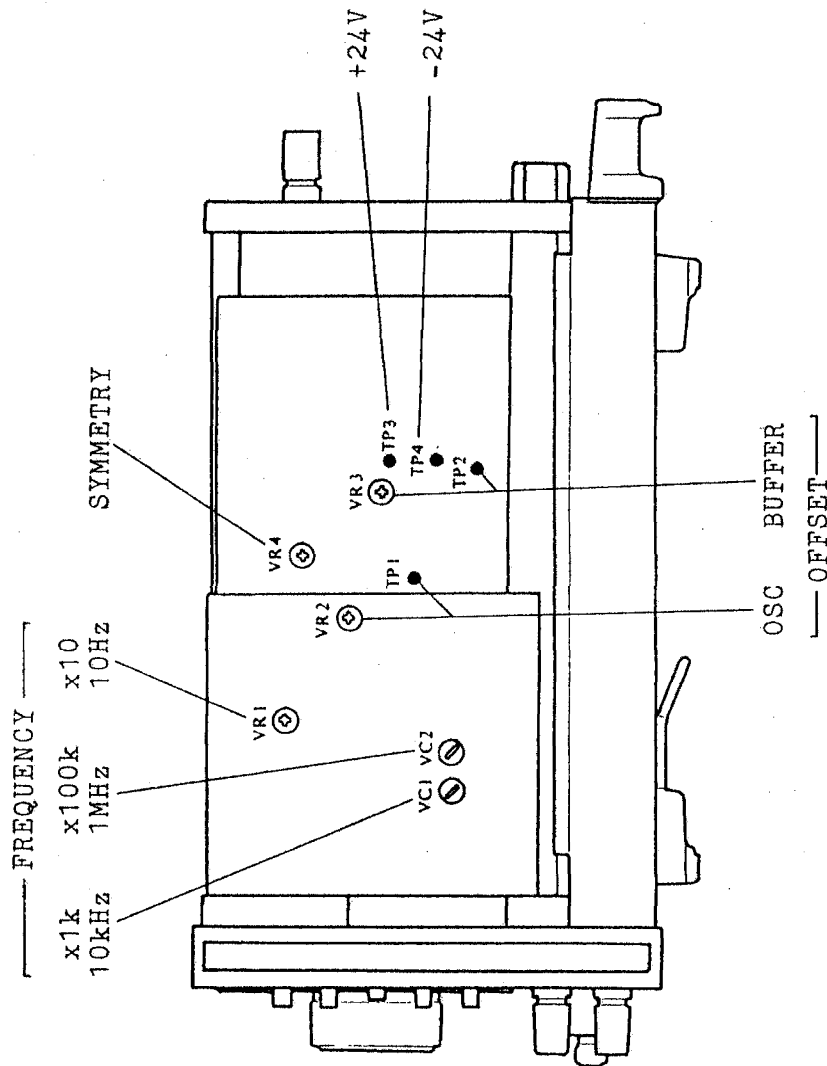


6. PRINTED CIRCUIT BOARD

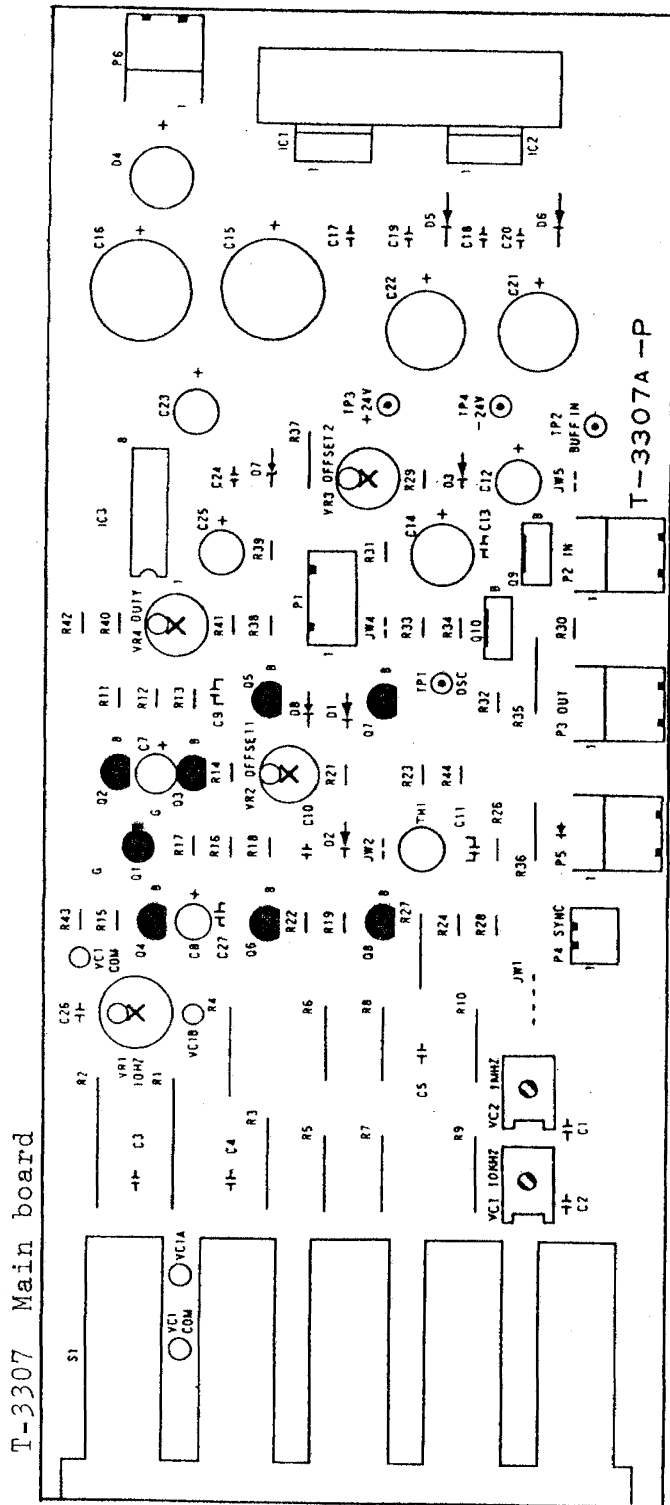


T-3308 Attenuator board

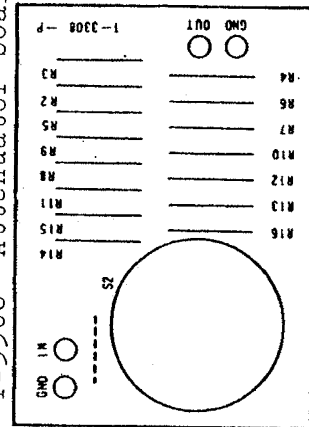

7. BLOCK DIAGRAM

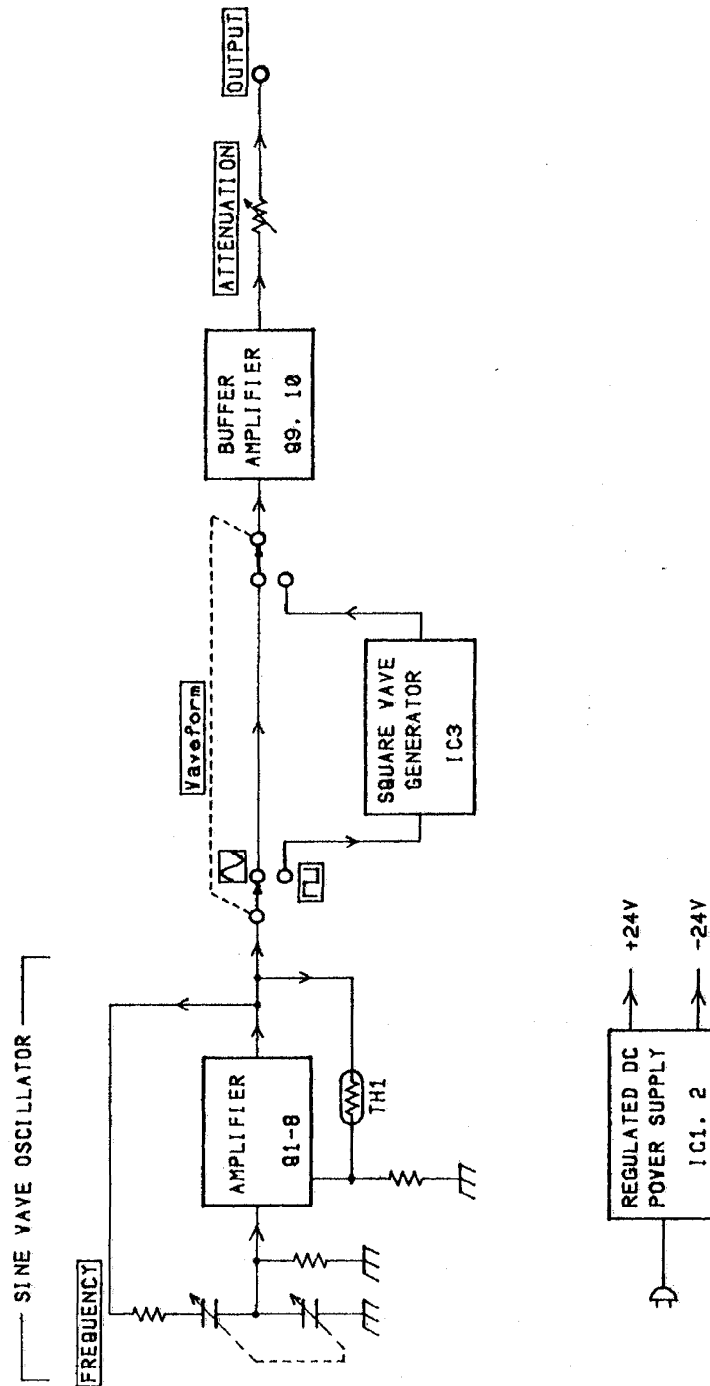

8. SCHEMATIC DIAGRAM

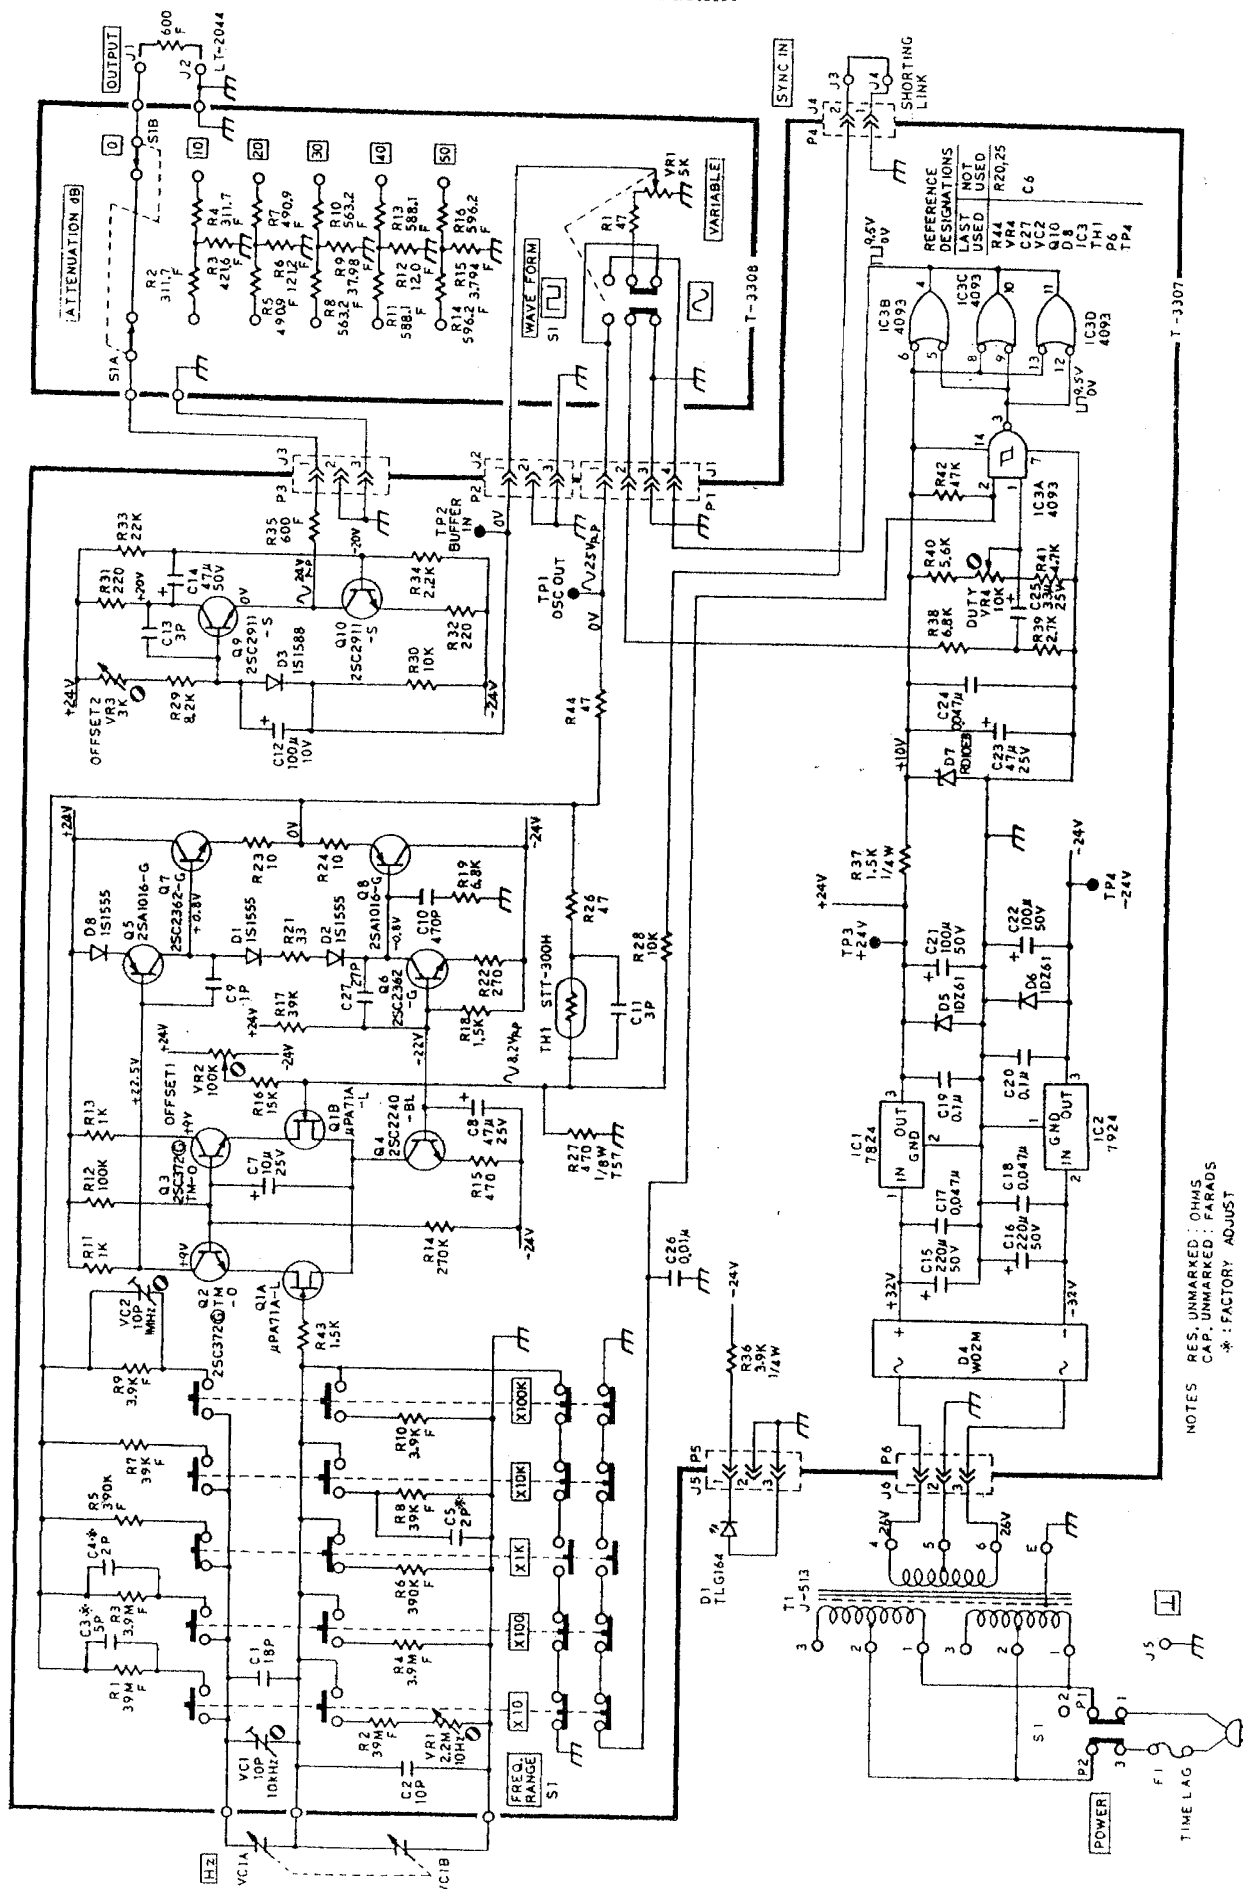

9. PARTS LIST

No.	LDR PT No.	DESCRIPTION	No.	LDR PT No.	DESCRIPTION
*** MAIN FRAME ***					
-VARIABLE CAPACITOR-					
VC1	2911026001	PLASTIC FILM	R35	1326000003	METAL FILM
-DIODE-					
D1	3130063000	LED	R36	1010392009	CARBON FILM
-TRANSFORMER-					
T1	3800513000	TRANSFORMER	R37	1010152009	CARBON FILM
-SWITCH-					
S1	4020138009	PUSH	R38	1000682001	CARBON FILM
-FUSE-					
F1	4363715001	TIME LAG	R39	1000272002	CARBON FILM
F1	4363730007	TIME LAG	R40	1000562001	CARBON FILM
-MISCELLANEOUS-					
4371003003	FUSE HOLDER		R41	1000472000	CARBON FILM
*** MAIN BOARD ***					
-RESISTORS-					
R1	1143905018	METAL FILM	R42	1000473002	CARBON FILM
R2	1143905018	METAL FILM	R43	1000152002	CARBON FILM
R3	1333904006	METAL FILM	R44	1000470006	CARBON FILM
R4	1333904006	METAL FILM	-VARIABLE RESISTORS-		
R5	1313903000	METAL FILM	VR1	1712019005	METAL FILM
R6	1313903000	METAL FILM	VR2	1711004107	CERMET
R7	1313902008	METAL FILM	VR3	1711004060	CERMET
R8	1313902008	METAL FILM	VR4	1711004079	CERMET
R9	1313901006	METAL FILM	-CAPACITORS-		
R10	1313901006	METAL FILM	C1	2120180008	MICA
R11	1000102007	CARBON FILM	C2	2120180004	MICA
R12	1000104001	CARBON FILM	C3	2120050005	MICA
R13	1000102007	CARBON FILM	C4	2120020005	MICA
R14	1000274006	CARBON FILM	C5	2120020006	MICA
R15	1000471008	CARBON FILM	C6	2240100006	ELECTROLYTIC
R16	1000153004	CARBON FILM	C7	2240470009	MICA
R17	1000353004	CARBON FILM	C8	2120010003	MICA
R18	1000152002	CARBON FILM	C9	2120010003	MICA
R19	1000682001	CARBON FILM	C10	2130471006	MICA
R20	1000330000	CARBON FILM	C11	2120030009	MICA
R21	1000271000	CARBON FILM	C12	2220101004	ELECTROLYTIC
R22	1000100003	CARBON FILM	C13	2120030009	MICA
R23	1000100003	CARBON FILM	C14	2250470006	ELECTROLYTIC
R24	1000100003	CARBON FILM	C15	2250221005	ELECTROLYTIC
R25	1000470006	CARBON FILM	C16	2250221005	ELECTROLYTIC
R26	1000470006	CARBON FILM	C17	2010473008	CERAMIC
R27	1390404000	METAL FILM	C18	2010473008	CERAMIC
R28	1000103009	CARBON FILM	C19	2010104007	CERAMIC
R29	1000682001	CARBON FILM	C20	2010104007	CERAMIC
R30	1000103009	CARBON FILM	C21	2250101005	ELECTROLYTIC
R31	1000221005	CARBON FILM	C22	2250101005	ELECTROLYTIC
R32	1000221005	CARBON FILM	C23	2240470009	ELECTROLYTIC
R33	1000223009	CARBON FILM	C24	2010473008	CERAMIC
R34	1000222007	CARBON FILM	C25	2240330003	ELECTROLYTIC
			C26	2010103005	CERAMIC
			C27	2120270009	MICA
			-VARIABLE CAPACITORS-		
			VC1	2910030006	CERAMIC
			VC2	2910030006	CERAMIC
			-TRANSISTORS-		
			Q1	3030026008	FET DUAL
			Q2	3030372005	NPN
			Q3	3030372005	NPN
			Q4	3032240000	NPN
			Q5	3011016005	PNP
			Q6	3032362004	NPN
			Q7	3032362004	NPN

No.	LOR PT No.	DESCRIPTION	
T-3307 CONT'D			
Q8	3011016005	PNP	2941016-S
Q9	3032911001	NPN	29C2911-S
Q10	3032911001	NPN	29C2911-S
-DIODES-			
D1	3110004000	DETECTOR	1S1555
D2	3110004000	DETECTOR	1S1555
D3	3110006004	DETECTOR	1S1588
D4	3110042017	BRIDGE RECTIFIER	W-02M
D5	3110019003	RECTIFIER	10Z61
D6	3110019003	RECTIFIER	10Z61
D7	3120064005	ZENER	RD10EB 10V
D8	3110004000	DETECTOR	1S1555
-INTEGRATED CIRCUITS-			
IC1	3217824998	REGULATOR	7824P +24V 1A
IC2	3217924992	REGULATOR	7924P -24V 1A
IC3	3310093065	CMOS	HD140938P
-SWITCH-			
S1	4020043008	PUSH	S-5-22 "FREQ RANGE"
-MISCELLANEOUS-			
TH1	3550005002	THERMISTOR	STT-300H
*** ATTENUATOR BOARD			
-RESISTORS-			
R1	1000470006	CARBON FILM	47 OHM 5% 1/5W
R2	1363117004	METAL FILM	311.7 OHM 1% 1/4W
R3	1364215002	METAL FILM	421.5 OHM 1% 1/4W
R4	1363117004	METAL FILM	311.7 OHM 1% 1/4W
R5	1364909003	METAL FILM	490.9 OHM 1% 1/4W
R6	1361212015	METAL FILM	121.2 OHM 1% 1/4W
R7	1364909003	METAL FILM	490.9 OHM 1% 1/4W
R8	1365632002	METAL FILM	563.2 OHM 1% 1/4W
R9	1363798004	METAL FILM	37.98 OHM 1% 1/4W
R10	1365632002	METAL FILM	563.2 OHM 1% 1/4W
R11	1365881003	METAL FILM	588.1 OHM 1% 1/4W
R12	1321209009	METAL FILM	12.0 OHM 1% 1/4W
R13	1365881003	METAL FILM	588.1 OHM 1% 1/4W
R14	1365962003	METAL FILM	596.2 OHM 1% 1/4W
R15	1363794006	METAL FILM	3.794 OHM 1% 1/6W
R16	1365962003	METAL FILM	596.2 OHM 1% 1/4W
-VARIABLE RESISTOR-			
VR1/S1	1910070009	CARBON FILM	5K OHM W/SW "WAVEFORM/VAR"
-SWITCH-			
S2	4000525002	ROTARY	Q-525 "ATTENUATION"

10. CABINET REMOVAL

- Take 2 screws, holding cord wrapper, and 2 phillips screws off to remove the top cover.
- Take 2 screws, holding cord wrapper, to remove the bottom cover.

