

NAD

SERVICE MANUAL

1155

STEREO PREAMPLIFIER

NAD 1155 SERVICE MANUAL

NOTE: This manual covers all versions.

A: U.S.A.

A1: Canada

B: U.K.

B1: Australia

C: Europe and others

C1: W-Germany


TABLE OF CONTENTS	PAGE
LOCATION MAP	2
SPECIFICATIONS	3 - 4
ALIGNMENT	5
WIRING DIAGRAM	6 - 7
P.C.B. LAYOUT DIAGRAM	8 - 9
SCHEMATIC DIAGRAM	10 - 11
EXPLODED VIEW PARTS LIST	12 - 13
EXPLODED VIEW	14
ELECTRICAL PARTS LIST	15 - 17

REAR PANEL

1. Phono Input.
2. Phono Ground.
3. MM/MC Selector.
4. Phono Capacitance.
5. CD/Video Input.
6. Tuner Input.
7. Tape 1 Rec/Play.
8. Tape 2 Rec/Play.
9. Preamp Output (Normal).
10. Preamp Output (High Level).
11. AC Line Cord.
12. AC Outlets. (Not in European models)


CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION: POUR PREVENIR LES CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS LAISSER AUCUNE PARTIE A DECOUVERT.

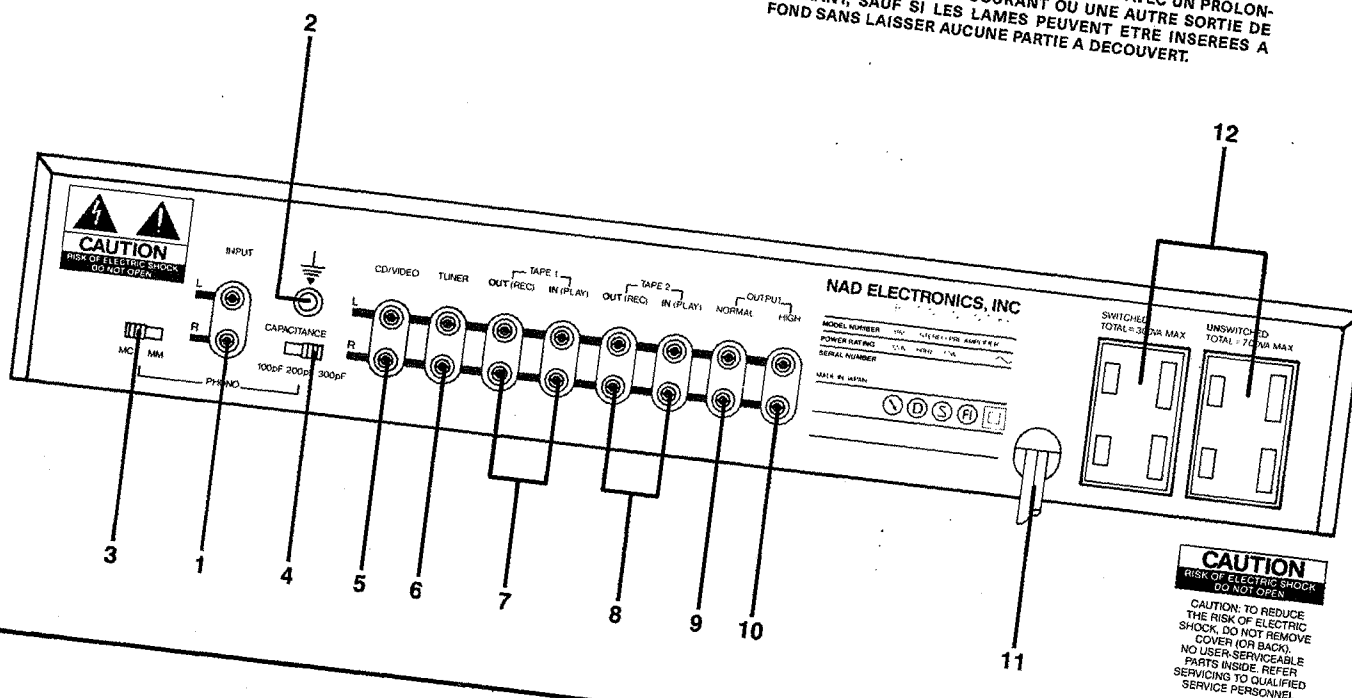

FRONT PANEL

1. Power.
2. Phones.
3. Bass.
4. Treble.
5. Bass EQ.
6. Infrasonic Filter Defeat.
7. Mono.
8. Recording Input Selector.
9. Listen Input Selector.
10. Low Level.
11. Loudness Compensation.
12. Volume/Balance.

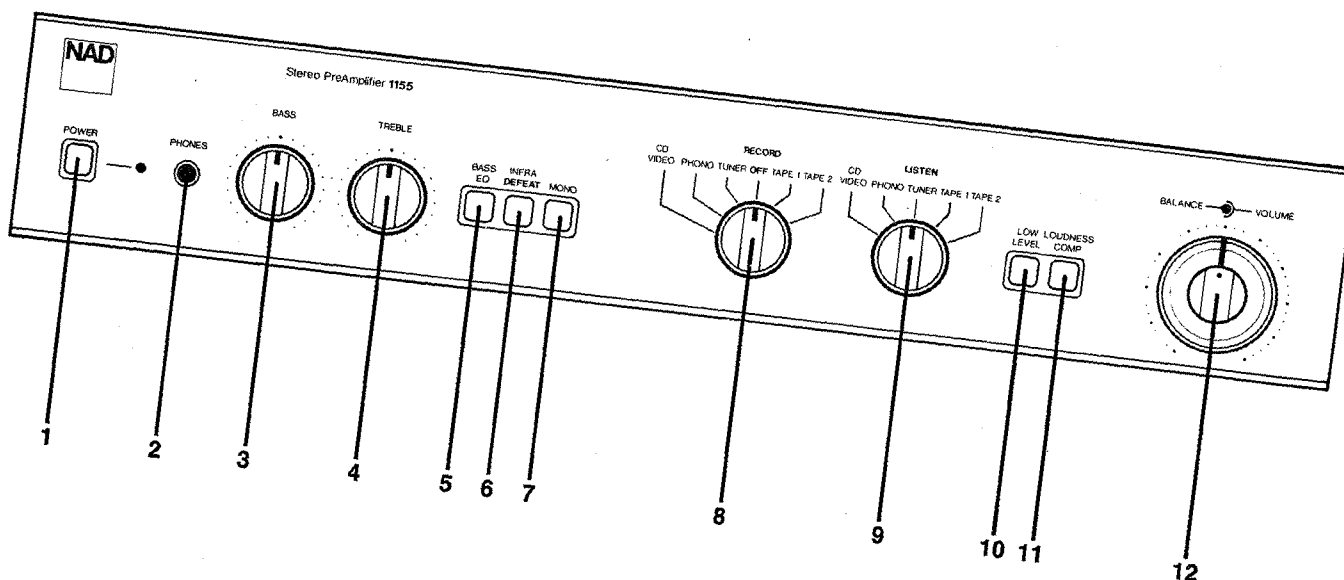

SPECIFICATIONS

Measured in accordance with EIA Standard RS-490 (formerly IHF A-202).

PHONO INPUT

Input impedance	MM: R = 47 Kohms C = 100/200/300 pF MC: R = 100 ohms C = 1000 pF
Input sensitivity (1 kHz)	MM: 1.2 mV for 0.5 V out 5 mV for 2 V out MC: 56 μ V for 0.5 V out 224 μ V for 2 V out
Input overload at 20 Hz/1 kHz/ 20 kHz	MM: 20/200/2000 mV MC: 1.2/12/90 mV
Signal/Noise ratio, IHF A-weighted, with cartridge connected	MM: 80 dB re 5 mV MC: 78 dB re 0.5 mV MC: 82 dB with shorted input
THD (20 Hz – 20 kHz) and IM Distortion at +30 dB level	< 0.02%
RIAA response accuracy	± 0.3 dB

LINE LEVEL INPUTS (Tuner, Tape, CD/Video)

Input impedance	R = 20 Kohms; C = 220 pF
Input sensitivity	80 mV for 0.5 V out 300 mV for 2 V out
Maximum input signal	> 10 V
Signal/Noise ratio, A-weighted	95 dB re 0.5 V out 107 dB re 2 V out
Frequency response, 20 Hz – 20 kHz	± 0.3 dB

OUTPUTS (Hi Level + 13.4 dB)

Output impedance	Tape: 130 ohms (buffered) Normal: 600 ohms High: 220 ohms Phones: 100 ohms (will drive all headphone impedances)
Maximum output level	Tape: 15 V into 10 K load Normal: 12 V into 20 K load, 6 V into 1 K load High: 15 V into 10 K load, 10 V into 600 ohms Phones: 15 V into 20 K ohms, 10 V into 600 ohms, 700 mV into 8 ohms
Tape output infrasonic filter	-3 dB at 15 Hz, 12 dB/Octave

CONTROLS

Treble	±7 dB at 10 kHz
Bass	±9 dB at 100 Hz
Bass equalization	+3 dB at 50 Hz +6 dB at 32 Hz +3 dB at 25 Hz
Infrasonic filter (switchable)	−3 dB at 15 Hz, 12 dB/Octave
Audio muting (low level)	−20 dB


PHYSICAL SPECIFICATIONS

Height x Width x Depth	7.5 x 42 x 27.6 cm 3 x 16.5 x 10.7 in.
Net weight	4.13 Kg (9 lb. 2 oz.)
Shipping weight	4.16 Kg (10 lb. 8 oz.)
Power Consumption	50/60 Hz at 110, 120, 220 or 240 VAC, 17 W


ALIGNMENT

+24V. REGULATOR ADJUSTMENT

- A. Connect voltmeter between collector Q601 (+24V regulator) and ground.
- B. Adjust R611 for reading of $+23.5 - +24.0\text{V VDC}$.

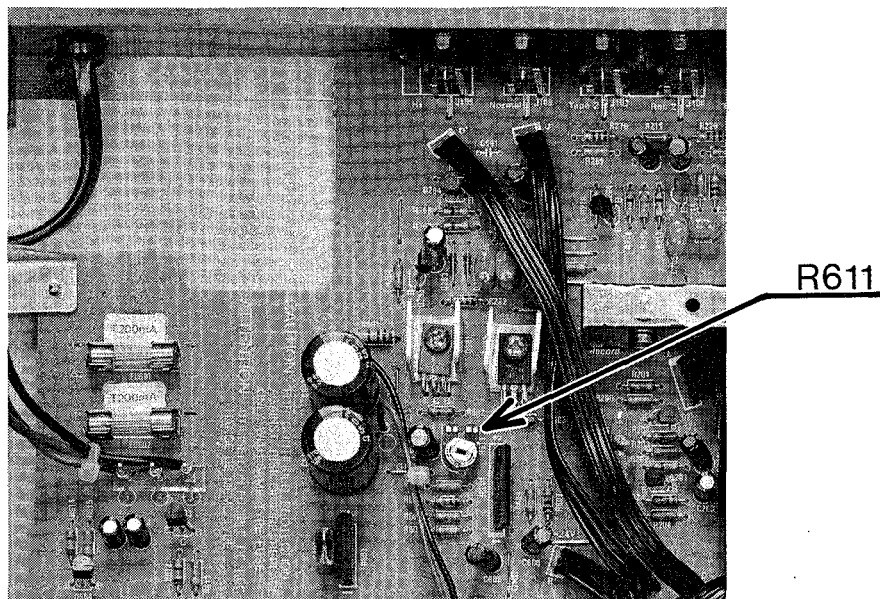


WIRING DIAGRAM

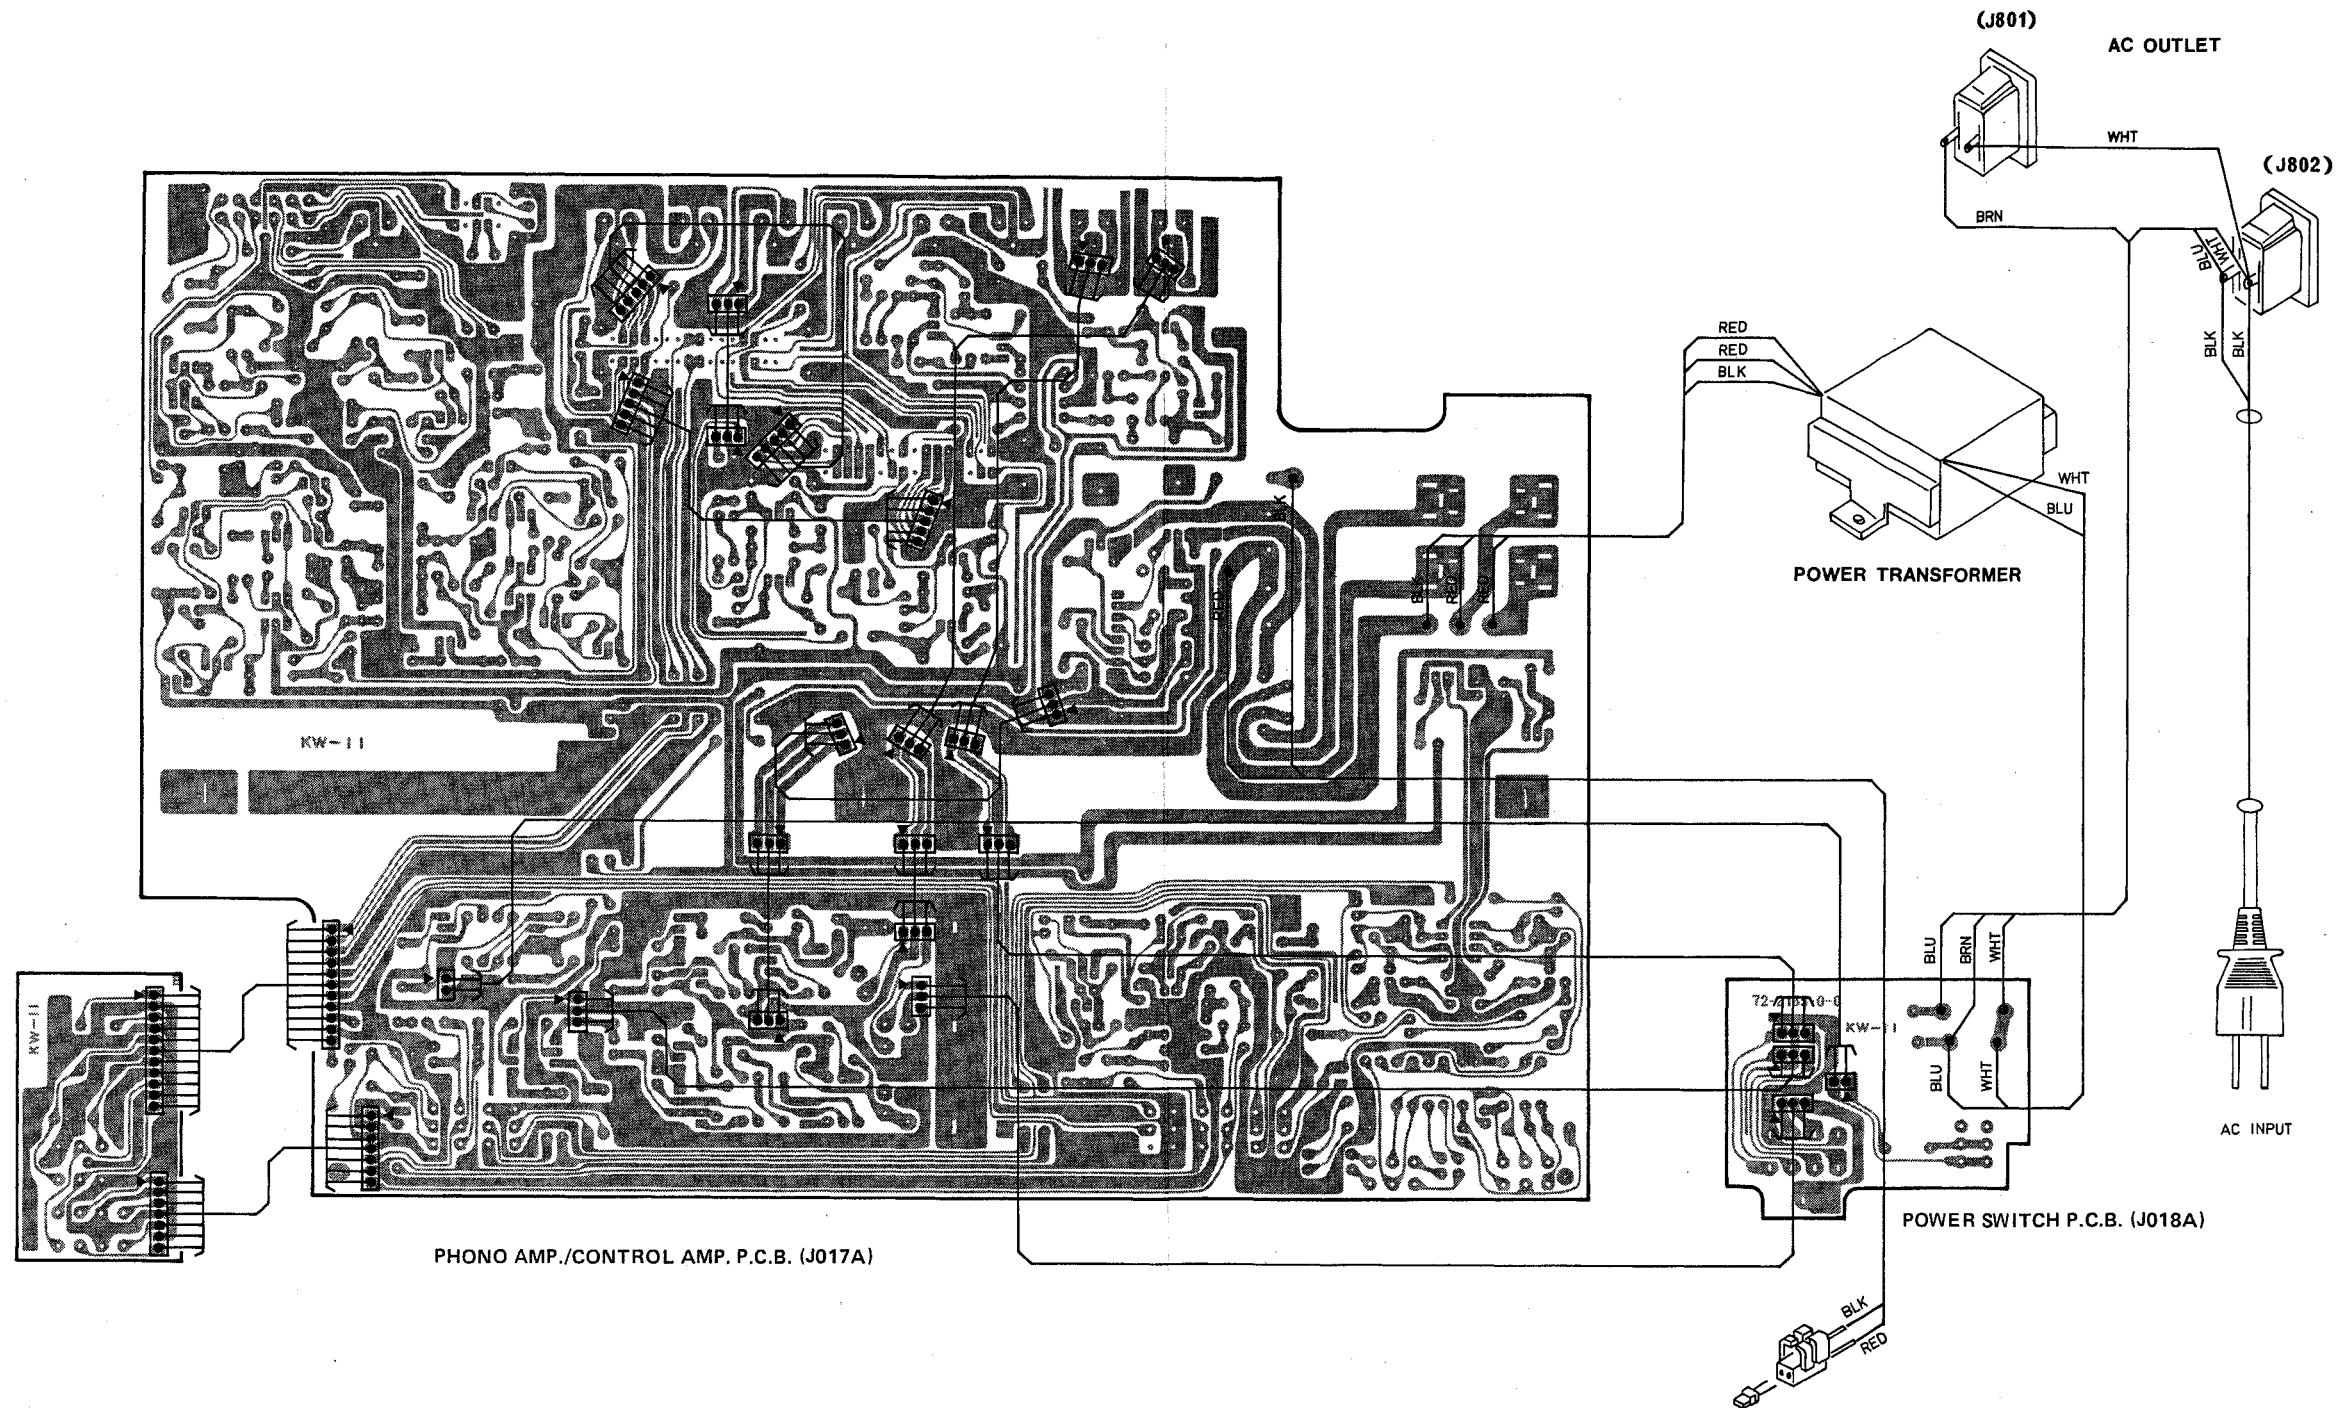


P.C.B. LAYOUT DIAGRAM

PHONO AMP./CONTROL AMP. PCB

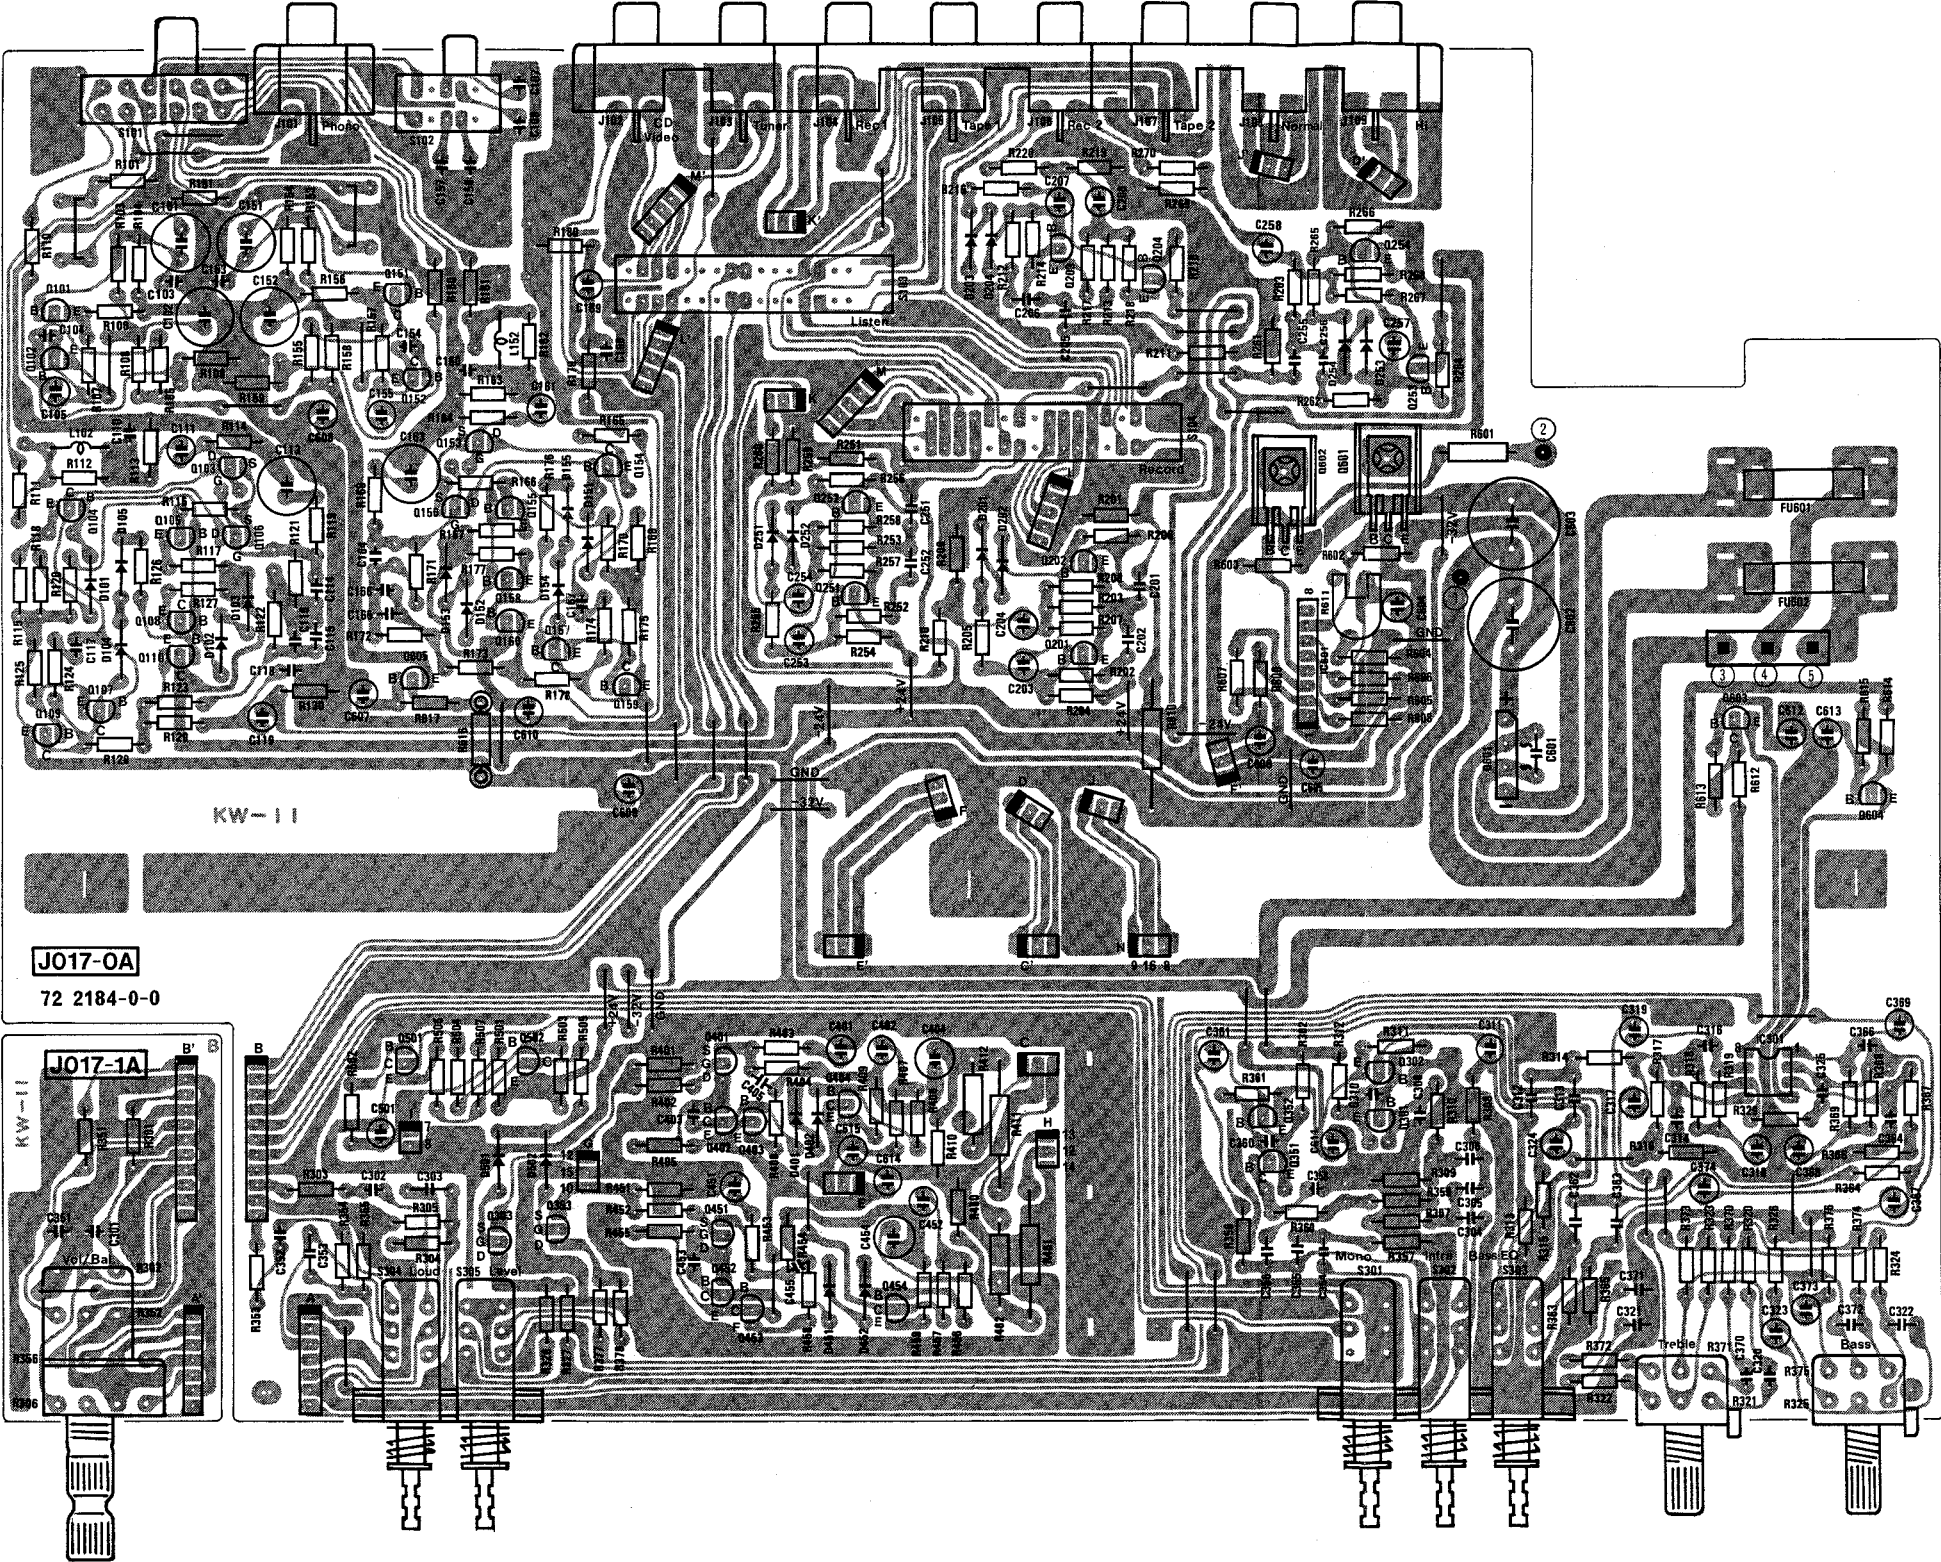

POWER SWITCH PCB

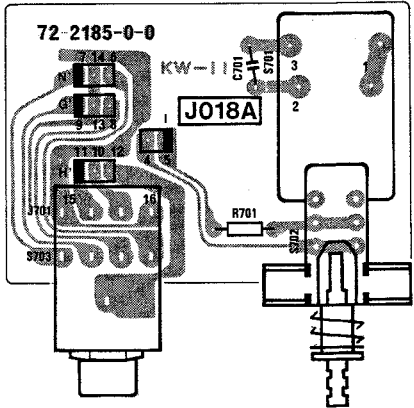

PH J018A

EC J017A

PH J018A

AC CORD
A, A1 120V 60Hz

Q101 2SC3329 GR
or 2SC2602 F

Q102 2SA1015L GR
or 2SA999L F

Q103,106
Q401 2SK117 GR
or 2SK163 L

Q104,202
Q204,302 2SA970 GR

Q105,201
Q203,301 2SC2240 GR

Q107,109,110
Q402,404,502 2SA1015 Y

Q604 2SA999L F

Q108,403,501 2SC1815 Y

Q603,605 2SC1815 Y

Q601 2SA505 O

Q602 2SC495 O

Q303 2SK363 BL
or 2SK372 BL

IC301 NJM2043 D

EXPLODED VIEW PARTS LIST

Ref. No.	Parts No.	Descriptions
1	63-6277-0-0	FRONT PANEL
2	62-1105-0-0	PUSH BUTTON - SELECTORS
3	62-1105-1-0	PUSH BUTTON - ON/OFF
4	62-3465-0-0	PUSH BUTTON FRAME - SINGLE HOLE
5	62-3466-0-0	PUSH BUTTON FRAME - TWO HOLES
6	62-3467-0-0	PUSH BUTTON FRAME - THREE HOLES
7	62-2317-0-0	ROTARY KNOB - TONE CONTROL/SELECTORS
8	62-2318-0-0	ROTARY KNOB - BALANCE
9	62-2319-0-0	ROTARY KNOB - VOLUME
10	92-2103-0-0	FOOT
11	63-1845-0-0	PLATE (POLYESTER)
12	63-1856-0-0	LABEL (WARNING : SHOCK HAZARD - DO NOT OPEN)
15	71-2606-0-0	FRONT SUBCHASSIS
16	71-2607-0-0	SIDE CHASSIS (L) (A A1 B B1)
	71-2607-1-0	SIDE CHASSIS (L) (C C1)
17	71-2592-0-0	SIDE CHASSIS (R)
18	71-1895-0-0	FRAME
19	92-1226-0-0	INSULATOR (PVC)
20	92-1229-0-0	INSULATOR (PVC)
21	71-2609-0-0	REAR PANEL (A A1)
	71-2610-0-0	REAR PANEL (B B1 C C1)
22	71-1896-0-0	TRANS STAND
23		WASHER (FIBER PLAIN 3.5-15-0.8)
24	71-3106-0-0	CABINET
25	71-3105-0-0	BOTTOM COVER
30	23-1322-0-0	POWER TRANSFORMER (A A1)
	23-1322-1-0	POWER TRANSFORMER (B B1)
	23-1322-2-0	POWER TRANSFORMER (C C1)
31	85- 258-0-0	POWER CORD (A)
	85- 240-0-0	POWER CORD (B)
	85- 259-0-0	POWER CORD (B1)
	85- 235-0-0	POWER CORD (C C1)
	85- 260-0-0	POWER CORD (A1)
32	62-3332-0-0	BUSHING - AC POWER CORD
33	82-2165-0-0	RECEPTACLE (A A1)
34	SLP-255B	LED (GREEN)
35	65- 129-0-0	SHAFT - SELECTOR
36	62-3472-0-0	BUSHING FOR SHAFT SELECTOR
37	62-3474-0-0	JOINT FOR SHAFT SELECTOR
38	87-3242-0-0	GROUND TERMINAL
39	AC331	INSULATOR
43	81-2227-0-0	POWER SWITCH (A A1)
	81-2245-0-0	POWER SWITCH (B B1 C C1)
44	82-2166-0-0	HEADPHONE JACK
45	J017A	PHONO AMP/CONTROL AMP PCB
46	J018A	POWER SWITCH PCB
47	41- 685-0-0	ROTARY POTENTIOMETER - BASS & TREBLE
48	41- 688-0-0	ROTARY POTENTIOMETER - VOLUME
49	81-2328-0-0	FUNCTION SWITCH BANK (3 SWITCHES)
50	81-2323-0-0	FUNCTION SWITCH BANK (2 SWITCHES)

Ref. No.	Parts No.	Descriptions
51	81- 448-0-0	SLIDE SWITCH - PHONO CAPACITANCE SELECTOR
52	81- 449-0-0	SLIDE SWITCH - PHONO MM/MC SELECTOR
53	82-2130-0-0	RCA CONNECTORS - SINGLE
54	82-2157-0-0	RCA CONNECTORS - DOUBLE
55	82-2159-0-0	RCA CONNECTORS - TRIPLE
56	81- 185-0-0	ROTARY SWITCH - RECORD SELECTOR
57	81- 186-0-0	ROTARY SWITCH - LISTEN SELECTOR
58	84- 213-0-0	RECEPTACLE FOR LED
60		TAPPING SCREW (PHILLIP'S HEAD 3 x 6 Cr)
61		TAPPING SCREW (PHILLIP'S HEAD 3 x 6 BLK)
62		TAPPING SCREW (PHILLIP'S HEAD 3 x 8 BLK)
63		TAPPING SCREW (WASHER HEAD 3 x 8 Cr)
64		TAPPING SCREW (WASHER HEAD 3 x 6 Cr)
65		MACHINE SCREW (PAN 3 x 6 Cr)
66		NUT (HEXAGON M4-7-3.2 Cr)
67		WASHER (TOOTHED LOCK B 4 Ni)
68		WASHER (PLAIN 4-10-0.8 Ni)
69		RETAINING RING (E TYPE 5mm)
70		CABINET SCREW WITH WASHER (4 x 6 BLK) (A A1 B B1)
71		MACHINE SCREW (PHILLIP'S HEAD 4 x 5 BLK) (C C1)
72		WASHER (PLAIN 4-8-0.8 BLK) (C C1)
73		HEAD PHONE JACK NUT (HEXAGON 12-14-2)
74		WASHER (PLAIN 12-18-0.5)
75		TONE CONTROLS NUT (HEXAGON 7-11-2)
76		WASHER (PLAIN 7-12-0.5)
77		VOLUME CONTROL NUT (9-11-2)
78		WASHER (PLAIN 9-14-0.5)

This exploded view diagram illustrates the assembly of a radio receiver chassis. The components are numbered 1 through 78, indicating their specific parts and assembly sequence. The diagram shows the following components and their assembly positions:

- Chassis and Cabinet:** The main chassis (1) is shown with the front panel (2) and the rear panel (3) attached. The top cover (4) is shown being placed over the chassis.
- Power Section:** The power transformer (5) is mounted on the chassis. The power filter capacitor (6) is connected to the transformer. The power switch (7) is mounted on the chassis.
- Audio Section:** The audio amplifier (8) is mounted on the chassis. The speaker (9) is connected to the amplifier. The speaker grille (10) is attached to the front panel.
- Tuning and Control Section:** The tuning capacitor (11) is connected to the audio amplifier. The tuning knob (12) is mounted on the chassis. The tuning indicator (13) is mounted on the chassis.
- Antenna and Grounding:** The antenna (14) is connected to the chassis. The grounding points (15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78) are shown being connected to the chassis.

The diagram provides a clear visual guide for the assembly of the radio receiver, showing the relative positions and connections of all major components.

ELECTRICAL PARTS LIST

NOTE: This is not a complete electrical parts list.

SYMBOL NO.	PARTS NO.	DESCRIPTIONS
IC601.	M5230L	INTEGRATED CIRCUIT
IC301.	NJM2043D	"
Q101, Q151.	2SC3329	TRANSISTOR
Q102, Q152.	2SA1015	"
Q103, Q153,	2SK117	"
Q106, Q156.	"	"
Q104, Q154,	2SA970	"
Q202, Q252,	"	"
Q204, Q254,	"	"
Q302, Q352.	"	"
Q105, Q155,	2SC2240	"
Q201, Q251,	"	"
Q203, Q253,	"	"
Q301, Q351.	"	"
Q107, Q157,	2SA1025	"
Q109, Q159,	"	"
Q110, Q160,	"	"
Q402, Q452,	"	"
Q404, Q454,	"	"
Q502, Q604.	"	"
Q108, Q158,	2SC1815	"
Q403, Q453,	"	"
Q501, Q603, Q605.	"	"
Q303, Q353.	2SK363	"
Q601.	2SA505	"
Q602.	2SC495	"
Q401, Q451.	2SK117	"
D601.	DBA10B	DIODE
D101, D151,	1S1588	"
D102, D152,	"	"
D103, D153,	"	"
D104, D154,	"	"
D105, D155,	"	"
D201, D251,	"	"
D202, D252,	"	"
D203, D253,	"	"
D204, D254,	"	"
D401, D451,	"	"
D402, D452,	"	"
D501, D502.	"	"
D801.	SLP255B	L. E. D.

SYMBOL NO.	PARTS NO.	DESCRIPTIONS
L102, L152.	15-168	CHOKE COIL
L101, L151.	15-170	" (C1 version)
C111, C161.	25V 4.7 μ F (MS)	ELECTROLYTIC CAPACITOR
C323, C373.	50V 0.68 μ F (MS)	"
C901, C902, C903.	50V 0.1 μ F (104)	CERAMIC CAPACITOR (C1 version only)
C109, C159.	50V 15pF	" (")
C112, C162.	50V 22pF	" (")
C110, C160.	50V 82pF	" (")
C106, C156,	50V 100pF	" (")
C307, C357,	"	" (")
C406, C456.	"	" (")
C120, C170,	50V 220pF	" (")
C309, C359,	"	" (")
C315, C365.	"	" (")
C407, C457.	50V 1000pF	" (")
C601.	92WS : 100V 0.1 μ F	FILM CAPACITOR
R611.	RVF8P : 41-788, 10K	VARIABLE RESISTOR
R412, R462.	1W, 220 ohm	OXIDE METAL RESISTOR
R411, R461.	2W, 100 ohm	"
R610.	2W, 560 ohm	"
R106, R156.	1/4W, 22 ohm	METAL FILM RESISTOR
R104, R154.	1/4W, 120 ohm	"
R107, R157,	1/4W, 470 ohm	"
R108, R158.	"	"
R103, R153.	1/4W, 1.5K ohm	"
R105, R155.	1/4W, 3.9K ohm	"
R121, R171.	1/4W, 7.5K ohm	"
R122, R172.	1/4W, 95.3K ohm	"
R616.	1/2W, 27 ohm	CARBON RESISTOR
R601.	1/2W, 2.2K ohm	"
R302/R352 (Balance)	20KB x 2/50K MN: 41-688	ROTARY POTENTIOMETER
R306/R356 (Volume)	"	"
R321/R371 (Treble)	10KC x 2: 41-685	"
R325/R375 (Bass)	"	"
S301/S302/S303 (Mono/Infra./Bass EQ)	81-2328	PUSH SWITCHES
S304/S305 (Loudness/Low Level)	81-2323	"
S102 (Capacitance)	81-448	SLIDE SWITCH
S101 (MM/MC)	81-449	"

SYMBOL NO.	PARTS NO.	DESCRIPTIONS
S104 (Record)	81-185	ROTARY SWITCH
S103 (Listen)	81-186	"
J101 (Phono)	2P: 82-2130	RCA JACK (SINGLE)
J102 (CD/Video)	4P: 82-2157	" (DOUBLE)
J103 (Tuner)	"	"
J104 (Rec 1)	6P: 82-2159	" (TRIPLE)
J105 (Tape 1)	"	"
J106 (Rec 2)	"	"
J107 (Tape 2)	"	"
J108 (Normal)	"	"
J109 (High)	"	"
J701.	82-2166	HEADPHONE JACK
S701/S702 (SDU3P)	31-2227	POWER SWITCH (A, A1 versions)
S701/S702 (SDU3P E)	81-2245	POWER SWITCH (B, C versions)
C701.	DE7100FZ	CERAMIC CAPACITOR
C904, C905.	HJV1H104Z	"
FU601, FU602.	125V 315mA	FUSE (A, A1 versions)
FU601, FU602.	T 200mA	FUSE (B, C versions)
	6 ϕ : 71-1894	FUSE HOLDER (A, A1 versions)
	5 ϕ : 71-1246	" (B, C versions)
J901.	84-213	L. E. D. RECEPTACLE